BABY LOCK SERGER ACCESSORIES

Plain Hemmer Foot

(BLE8-S6) 1/2 inch (13mm)

Instructions

Guide fabric into a perfectly straight hem without any preproject pressing. The plain hemmer is designed to be used for straight hemming only. Leave one seam of the garment open. After hemming, sew the seam closed.

MACHINE SETTINGS

Stitch type:	Chain Stitch - C1 needle position Narrow Left Cover Stitch - C1 - C2 needle positions Wide Cover Stitch - C1 - C3 Triple Cover Stitch - C1 - C2 - C3
Stitch length:	3-4
Cutting blade:	Disengaged "LOCKED"
Differential feed:	N
Sewing speed:	Moderate to slow
Upper looper:	Down
Sewing table:	On

Fabrics:

Firm broadcloth, trigger, lightweight denim, lightweight polar fleece*, sweatshirt fleece*.


Note: When using BLCS the accessory adaptor BLCS-AA is needed.



Instructions:

- 1. Secure attachment to table with guide fixing screws.
- 2. Turn under 1/2 inch and press with iron.
- 3. Raise presser foot. Slide fabric into attachment with wrong side facing up, turning up and over to the left.
- 4. With a sewing awl, slide folded fabric under presser foot to the needle.
- 5. Lower the presser foot. Turn the handwheel 3-4 times to secure the fabric.
- 6. Align the attachment with the needle(s) to encase the fabric edge.
- 7. With right hand keep hem turned while left hand is guiding folded fabric into hemmer.

*NOTE: When hemming polar fleece or sweatshirt fleece, turn fabric one time. Do not attempt a double roll. (Fabric does not ravel).

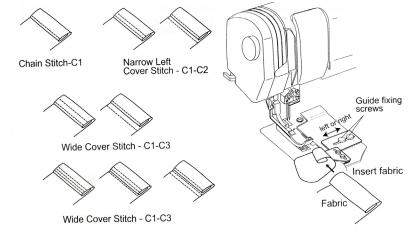



FOR THE LOVE OF SEWING