


# Coverstitch/Compensating foot

#C12  
Overlocker

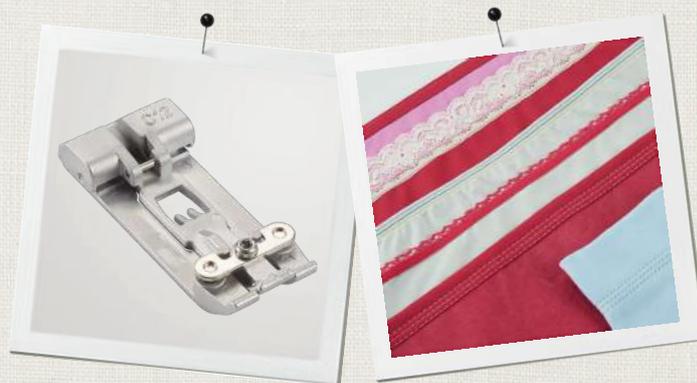

## Information

### Purpose

- For cover and chainstitch work.
- To compensate for unilateral fabric thicknesses.
- For stitching edges.

### For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

### Markings and guides

- A Right guide
- B Right coverstitch needle RC
- C Center coverstitch needle CC
- D Left coverstitch needle LC
- E Left guide



## Application

### Generally to be observed

The height-flexible presser foot sole allows efficient compensation while sewing different fabric thicknesses. Optimal results can be achieved by observing the following guidelines.

- Before sewing the project together, hem or topstitch the edges first.
- Optimize the fabric feed along unilateral seams by using remnant fabric as height compensation.

### Sewing along the right guide

- > Place the fabric under the presser foot (right side up). Position the edge against the inner right guide. (Fig. 2)
- > When sewing small curves or circles, use only LC/CC needles.

### Sewing along the left guide

- > Place the fabric under the presser foot (right side up). Position the edge against the inner left guide. (Fig. 3)
- > When sewing small curves or circles, use only CC/RC needles.