

PFAFF®

ACCESSORY CATALOGUE 2026

 
FEATURED ACCESSORIES



PFAFF® *creative*™
EMBELLISHMENT ATTACHMENT



Extension Table With
Adjustable Guide

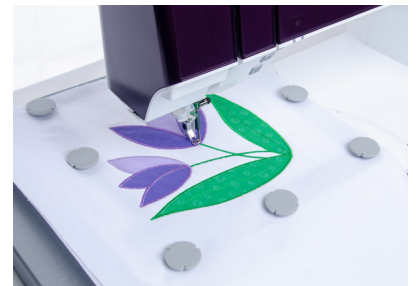


PFAFF® QUILTER'S
METAL HOOP

WELCOME...

...to the world of sewing and a wide range of accessories from PFAFF®.



 Your authorized PFAFF dealer will be happy to advise you and show you the entire range of accessories. You'll also find all the latest news about the PFAFF accessories at pfaff.com

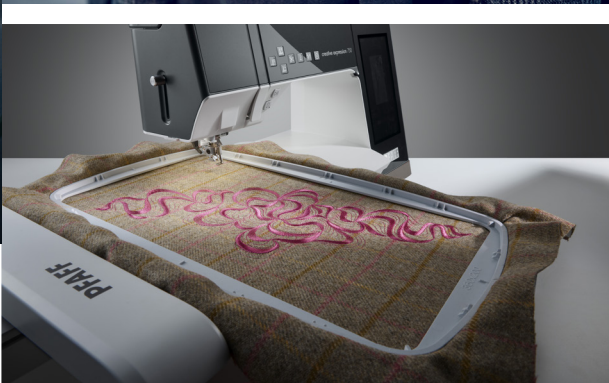

PFAFF SEWING AND EMBROIDERY MACHINES

Code Letters/Model Numbers..... 4



SEWING

Utility Accessories..... 10

Decorative Accessories..... 24



QUILTING

Quilting Accessories 48



EMBROIDERY

Embroidery Collections..... 64

creative™ Hoops..... 65

Embroidery Hoop Machine Compatibility.....70

creative Accessories 72



SERGER/OVERLOCK - DECORATIVE

Decorative Accessories..... 83



SERGER/OVERLOCK - COVERSTITCH

Coverstitch Accessories..... 94



ADDITIONAL

Luggage 101

Notions 102

Scissors 104

Needles 112

Stabilizers 120

■ ■ ■ PFAFF SEWING AND EMBROIDERY MACHINES



Before you start looking through the pages of PFAFF accessories, take a quick look at the current line of PFAFF sewing machines. Comfortable, easy to use, durable quality, a versatile range of sewing features and elegant design – these are all PFAFF qualities that you have come to know and expect. You can get more detailed information about each machine at your PFAFF dealer or on the Internet at **www.pfaff.com**.

L *creative icon™ 2*
creative icon™
performance icon™
creative performance™ 950

The top model from PFAFF!

The *creative icon 2* is the ultimate sewing and embroidery machine, setting new global standards with its remarkable features and ease of use. It has a large workspace, Integrated Dual Feed Technology (IDT™), bright LED lighting, over 800 stitches, and more than 800 built-in embroidery designs! Additionally, the *creative icon 2* machine connects to our digital platforms—CREATIVATE™ and mySewnet™—providing access to hundreds of creative designs, educational resources, and inspiration*.

*Some CREATIVATE and mySewnet features require a paid membership.

A B C D E F G H J K L

By finding the code letter that represents your machine from the list below, you'll be able to tell which accessories through-out the catalogue are available for your machine. If you have any questions, your PFAFF dealer will be happy to help you.

Which presser foot fits your sewing machine? Just check the code!

A



Machines with 5 mm and 6 mm stitch width,
without IDT system

varimatic™ 6087, 6086, 6085 (6 mm)

**hobby™* 309, 307, 303, 301 (5.5 mm)

* These sewing machines have a presser foot holder of 6 mm. Because newer presser feet are produced to fit 8 mm holders, there may be a small gap between the holder and the presser foot attachment. You will need to change the 8 mm presser foot holder when using the newer presser feet.

B



Machines with 5.5 mm stitch width,
without IDT system

hobby 1042, 1040, 1032, 1030, 1022, 1020, 1016

C



Machines with 5.5 mm stitch width,
without IDT system

expression™ 2014

tiptronic™ 6112, 6110, 2020, 2010

select™ 2.2, 2.0, 1528, 1526, 1520

hobby 4260, 4250, 4240

D



Machines with 5.5 mm and 6 mm stitch width, and IDT system

select 4.2, 4.0, 3.2, 3.0,

select 1548, 1546, 1540, 1538, 1536, 1530 (5.5 mm)

tiptronic 6270, 6250, 6232, 6230,

tiptronic 6152, 6150, 6122, 6120 (5.5/6 mm)

stretch & jeans™ 6091 (6 mm)

freestyle™ 1527, 1522

E



Machines with 6 mm stitch width, and IDT system

creative 2124

quilt expression™ 2046, 2044, 2042

expression 2036, 2034, 2028, 2026, 2024

classicstyle™ 2029, 2027, 2025, 2023

tiptronic 2040, 2030, 2020, 2010

NOTE THE CODE LETTERS AND MODEL NUMBER FOR YOUR MACHINE!

F



Machines with 9 mm stitch width,
without IDT system
creative 7560

G



Machines with 9 mm stitch width, and IDT system
creative 2170, 2144, 2140, 2134
creative 7570, 7562, 7550, 7530
performance™ 2058, 2056, 2054
quilt expression 2048
expression 2038

H



Machines with 5.5 mm stitch width,
without IDT system
hobby 1142, 1132, 1122

J



Machines with 9 mm stitch width, and IDT system

J1

creative sensation™ pro 2
creative sensation pro
creative sensation
creative vision™
creative performance
creative 4.5, 4.0, 3.0, 2.0
performance 5.0, 5.2
quilt expression 720, 4.2, 4.0
expression 710

J2

expression 3.5, 3.2, 3.0, 2.0, 150

J3

creative expression 750
quilt expression 725
expression 715

K



Machines with 7 mm stitch width, and IDT system

K1

creative expect™ 350

K2

creative ambition™ 640
creative 1.5
quilt ambition 635, 630
ambition 620, 610

K3

quilt ambition™ 2.0
ambition™ 155, 1.5, 1.0
ambition essential™

K4

passport™ 3.0, 2.0

K5

SMARTER BY PFAFF™ 260c
SMARTER BY PFAFF 160s, 140s

L



Machines with 9 mm stitch width, and IDT system

creative icon 2
creative icon
performance icon
creative performance 950





A vertical photograph of a mossy rock in a forest. The rock is covered in green moss and is surrounded by lush green foliage and trees in the background.

■ ■ ■ SEWING

Do you love to sew? Do you enjoy trying new things with your projects? Do you take pride in professional sewing results? Then take a journey through the PFAFF assortment of accessories that will inspire new ideas and expand the capabilities of your sewing machine. Many beautiful results and special techniques can only be achieved with certain accessories, so don't limit your creativity!

For more information, go to pfaff.com or visit your nearest authorized PFAFF dealer.

■ UTILITY ACCESSORIES

Would you like your hand-sewn garments to be as perfect as the best ready-to-wear? Then take a look at the wide range of presser feet from PFAFF. You'll find the right presser foot for every use. They make every sewing job easier, and some jobs are only possible with the help of the right presser foot. Your PFAFF dealer will be happy to tell you more.

Please note the code numbers for the various PFAFF sewing machines to instantly see which presser feet are available for your model.

MULTI FUNCTION FOOT CONTROL



821261096

L

J3

Control multiple functions of your machine like thread cut, tie off or reverse without taking your hands off your project.

Three customizable function switches

- Two side levers
- One heel touch button

Five programmable sewing machine functions include:

- Presser foot lift
- Thread Cut Scissors
- Reverse
- Tie off
- Pattern begin / restart
- Separate needle up / down function
- Extra-long 8' (2.5 m) USB cable to suit various sewing positions
- Ergonomic design
- Rubberized base for stability

SEAM GUIDE FOOT FOR IDT SYSTEM



820772096
B C D E F G J K L
for IDT system

The Seam Guide Foot for IDT system guides your stitching perfectly when joining fabrics. The presser foot is designed to help you keep the seam allowance at the same distance from the edge throughout the project. The presser foot has a metal guide at $\frac{5}{8}$ inch distance from the center needle position, which is the most used seam allowance when sewing clothes. It has four more markings for various seam allowances.

1. Snap on the Seam Guide Foot for IDT system.
2. Engage the IDT system.
3. Select a straight stitch.
4. For joining fabrics together; place fabric right sides together.
5. Place the fabric under the presser foot with the metal guide at the edge of the fabric for $\frac{5}{8}$ inch seam allowance.
6. Start to sew. The guide will follow the edge of the fabric and the seam will be sewn with the perfect straight seam allowance.
7. Use the 4 other red markings on the presser foot for a narrower seam allowance.

SEW-ON BUTTON FOOT



 
820473096
C D E F G J K L

Sewing on buttons can be a tedious job – but not when you use the Sew-On Button Foot! Use it to easily sew 2- or 4-hole buttons of various sizes in place. Just set the stitch width to match the spacing between the holes and your machine does all the work. By including a shaft, you can even sew on buttons with a thread shank (see illustration on the left).

1. Mark on the fabric where you want the button to be placed.
2. Snap on the Sew-On Button Foot.
3. Lower the feed dogs.
4. Insert the button between the black metal piece and the presser foot. Make sure that two holes are positioned in the cut-out of the presser foot.
5. Place the fabric under the presser foot. Select the button sew-on stitch or zigzag stitch.
6. Select width to match buttonholes. Manually turn the hand wheel to make sure that the needle enters the left hole.
7. Start to sew. The machine will automatically tie off your button if you use the button sew-on stitch. If you use the zigzag stitch, sew across the button five times.



The automatic needle threader cannot be used on Group L and J3 machines

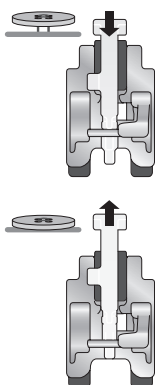

If you want your button to have a shank, push the plastic piece on the presser foot towards you, placing it between the two holes of the button. When you have finished sewing your button, pull the plastic piece back, remove your button from the presser foot and cut off the threads. Wrap the seam with sewing thread and make a knot.

ADJUSTABLE GUIDE FOOT FOR IDT SYSTEM



820677096
D E F G J K L
for IDT system

The Adjustable Guide Foot for IDT system guides your topstitching and decorative stitching perfectly. The presser foot has a "ruler" with an adjustable guide designed so you can place the guide anywhere you want. Place the guide along an already stitched seam or against any edge to give you beautiful topstitching. Use both straight and decorative stitches. It is perfect for channel quilting too.

1. Snap on the Adjustable Guide Foot for IDT system.
2. Engage the IDT system.
3. Select the stitch of your choice.
4. Set the adjustable grey guide by moving it right or left along the "ruler".
5. Sew letting the guide follow your seam or edge or marking.

BUTTONHOLE FOOT



820672096
J K L

The Manual Buttonhole Foot will sew your buttonhole manually in four steps. (Buttonholes being sewn on a very small piece of fabric close to a reinforced edge may not always feed optimally with the large Sensormatic Buttonhole Foot. In this case, use the Manual Buttonhole Foot.)

The Sensormatic Buttonhole Foot provides the perfect buttonhole; it will have both sides of the buttonhole sewn in the same direction for a more even result. The buttonhole will be completed automatically.

No matter which machine model you have, a PFAFF machine will always provide you with a perfect buttonhole. There are different options for the models. Refer to the machine code and select the right foot for your machine.



413170301
J1, 2

68003184
L, J3

TIP: Fabrics that shift or stretch easily should be reinforced with water-soluble, tissue paper or other lightweight stabilizer. Buttonholes are more stable and durable if a gimp thread is inserted while sewing. Linen buttonholes are particularly attractive if you use a heavier-weight thread through a topstitch needle.

 
 
Different fabrics can be sewn together with no problem, thanks to the unique IDT system on PFAFF sewing machines. The fabric layers are fed evenly from top and bottom. Nothing can slip. Learn more about IDT system – pfaff.com




INVISIBLE ZIPPER FOOT




820474096
C D E F G J K L

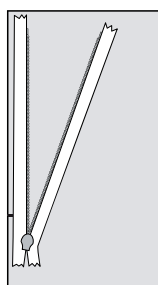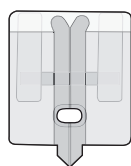


A

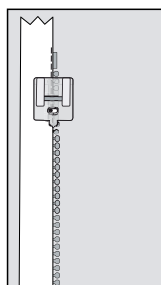 


B

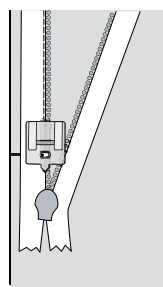 

C

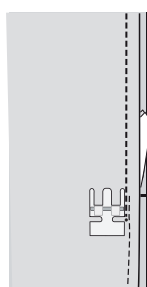 

D

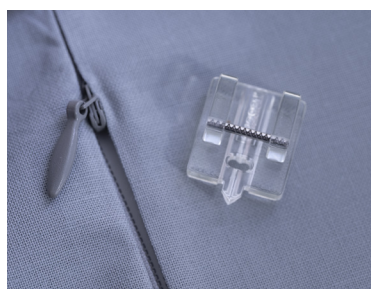 

Garments of the finest fabrics demand perfectly sewn zippers – no problem with the special zipper feet from PFAFF.

Invisible zippers are the least noticeable of all zippers. As the name implies, the zipper is hidden in a seam, becoming virtually invisible. This makes it a popular choice for elegant clothing sewn with expensive materials, like evening wear. But it's equally appropriate for skirts, blouses and other everyday clothing items. Invisible zippers (also called concealed zippers) are easily sewn with the PFAFF Invisible Zipper Foot!

1. Use the marking pen to mark the length of the zipper on the right side of the fabric, on both sides of the opening. The zipper should be at least 2-3 cm ($\frac{3}{4}$ " - $1\frac{1}{4}$ ") longer than the opening.
2. Attach the special Invisible Zipper Foot and select a straight stitch, center needle position and stitch length to 2.5 - 3.0 mm.
3. Open the zipper and flatten the coil slightly with your thumb, so that the seam line between the tape and the coil becomes visible. Never iron the zipper.
4. Place the right half of the zipper onto the right side of the opening, with right sides of the zipper and fabric together. The coil should lie directly on the seam line, starting about 1.5 - 2 cm ($\frac{5}{8}$ " - $\frac{3}{4}$ ") below the upper edge of the fabric. Pin in place, if desired. Make sure that the bottom end of the zipper extends 2 - 3 cm ($\frac{3}{4}$ " - $1\frac{1}{4}$ ") beyond the bottom end of the opening. (Illustration A)
5. Carefully press the teeth slightly to the right and lower the zipper foot, so that the coil lies in the groove to the right of the needle.
6. Starting at the top, sew the zipper in place, stopping at the previously marked end of the opening. Tie-off the end of the seam. Close the zipper. (Illustration B and C.)
7. Place the second zipper tape on the left side of the opening, on the right side of the fabric. Make sure that both coils are level.
8. Pin the zipper in place. Open the zipper.
9. Carefully press the teeth slightly to the left and lower the Zipper Foot, so that the coil lies in the groove to the left of the needle.
10. Starting at the top, sew the zipper in place, stopping at the previously marked end of the opening. Tie-off the end of the seam. Close the zipper.
11. Finally, sew the seam below the zipper, starting at the bottom and working up. Attach the standard Zipper Foot so that the presser foot clamp and the foot are to the right of center. Move the needle to the right. (Illustration D)
12. Pull the loose bottom end of the zipper toward the seam allowances and stitch as close as possible up to the last stitches of the zipper seams.
13. Press the seam open.

TIP: If the zipper is too long, sew over the end of the coil with a straight stitch or a closely spaced zigzag stitch, approx. 2 cm ($\frac{3}{4}$ ") below the bottom end of the opening. Cut off the excess zipper and finish the raw edge with a small piece of fabric.

ZIPPER FOOT FOR IDT SYSTEM



 
820248096
DEGJK 2, 3 L
for IDT system

820287096
A

The Zipper Foot is the most important zipper tool and will help you stitch the zipper perfectly in place. When attaching any zipper, it is important to sew right next to the edge of the zipper teeth. You can do that with the special Zipper Foot. It can be snapped onto the left or right of the sewing foot ankle, as needed.

Centered zipper (concealed on both sides):

1. Overcast the seam allowances. Join the fabric layers, right sides together, with a standard stitch up to the zipper insertion mark.
2. Baste the remainder of the seam closed. Press seam open.
3. Baste the zipper in place, centering the zipper teeth along the basted seam line and with the zipper pull extended beyond the top of the garment edge.
4. Attach the Zipper Foot to your machine.
5. Position edge of Zipper Foot close to teeth of zipper and move the needle to stitch approximately 6 – 10 mm ($\frac{1}{4}$ " - $\frac{3}{8}$ ") away from center seam line. Stitch along both sides and across bottom of zipper with a straight stitch.
6. Remove basting stitches.

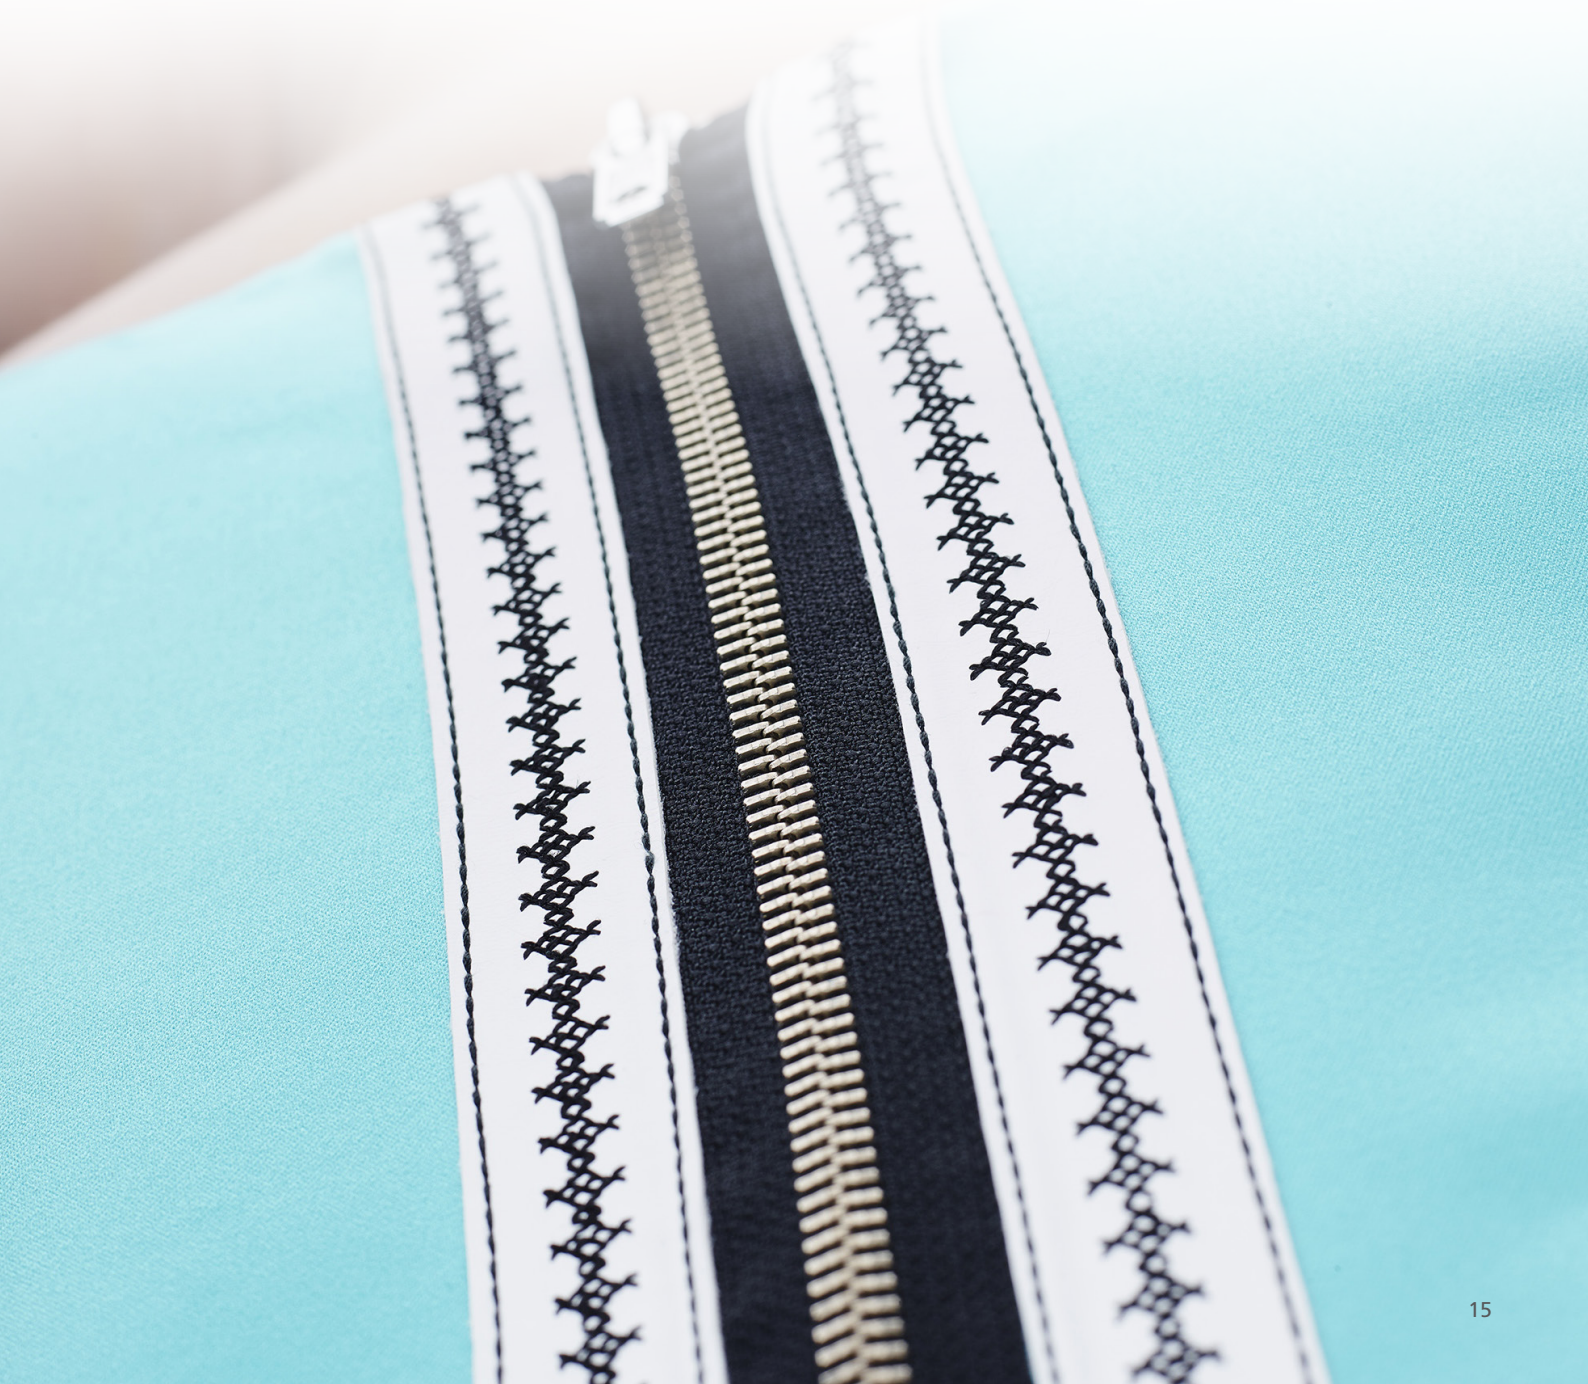

ELASTIC FOOT FOR IDT SYSTEM



 
820545096

B C D E F G J K L

for IDT system



The automatic needle threader cannot be used on Group L machines.

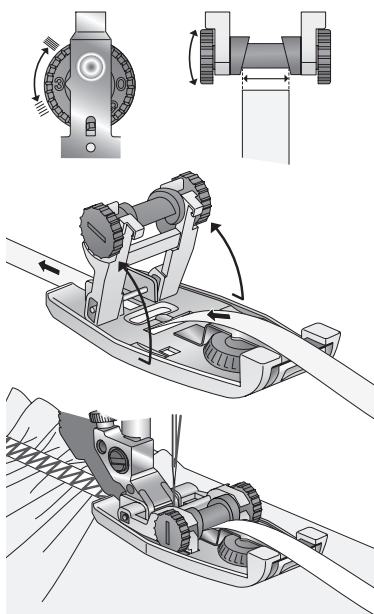

The Elastic Foot simultaneously guides, stretches 6 to 12 mm wide elastic and sews it in place. Use it for active wear, lingerie and other elastic insertion techniques.

1. Set the dark grey numbered dial on the Elastic Foot by aligning the number with the small metal arrow. The higher the number, the more the elastic will be stretched. The stiffness of the elastic will influence the sewing result.
2. Gently push the dark grey roller towards the numbered dial and lift it up.
3. Insert the elastic into the longer slot opening on the base of the presser foot.
4. Turn the roller until the center groove of the roller matches the width of the elastic so that the elastic will guide straight.
5. Bring the roller down on the elastic and click it into place by gently pushing it away from the numbered dial.
6. Snap the Elastic Foot onto the sewing machine. Set the machine for a regular zigzag stitch. Adjust the stitch width according to the width of the elastic and the stitch length according to the quantity of the elastic and how much gathering is required.
7. Engage the IDT system.
8. Place the fabric under the presser foot and sew. The fabric will gather as the elastic is stretched and sewn in place.

BIAS BINDER

 


820245096

A B C D E F G J K L



The automatic needle threader cannot be used on Group L and J3 machines.

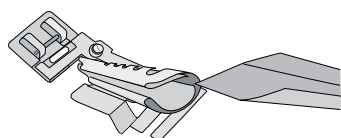

Binding with bias tape is a very easy way to give fabric edges a smooth and neat appearance. You will need unfolded bias tape 24 mm (scant 1") wide.

1. Remove the presser foot. Attach the Bias Binder.
2. Cut the beginning of the bias tape at a diagonal.
3. Feed the tape into the scroll of the binder and pull out to the back.
4. Adjust the binder and/or the needle position so that the needle pierces the fabric approximately 1 - 1.5 mm ($\frac{1}{16}$ ") from the folded edge of the bias tape.
5. Stitch about 25 mm (1") along the bias tape.
6. Insert the edge of the fabric to be bound between the bias tape edges into the slot of the binder. The bias tape will enclose the raw edge automatically during sewing.

TIP: Using a zigzag or fancy stitch will give you even more of a decorative effect.

ROLLED HEM FOOT



820220096

B C D E F G J K L

2 mm

820249096

 
B C D E F G J K L

3 mm, for IDT system

820221096

B C D E F G J K L

4 mm, for IDT system



Hemming prevents the edges from fraying and results in a clean, durable edge. With the Rolled Hem Foot, you can hem light to medium weight fabrics for clothing and home decorating items without having to pre-iron the fabric edges.

1. Select a straight stitch, snap on the Rolled Hem Foot and engage IDT system (if available on your machine). If needed, press only the beginning of the hem to 2, 3 or 4 mm wide, depending on the size of your foot. Place it flat in the groove under the foot and sew a few stitches. Lower the needle into the fabric to hold it in place. Raise the presser foot and pull the cut edge of the fabric into the scroll of the hemmer. Lower the foot and continue sewing while holding the cut edge up in front of the foot.
2. Do not allow the fabric to run under the right half of the presser foot.

TIP: Hem crisp fabrics with a straight stitch. Hem soft fabrics with a zigzag that just encases the millimeter size of the hem. (Sharply curved areas are not suitable for this type of hemmer.)

BLIND HEM FOOT FOR IDT SYSTEM



820256096

 
D E G J K L

for IDT system

The Blind hem Foot is perfect for sewing invisible hems. Use it to sew the elastic blind hem for an optional finish and you won't need additional finishing on the hem edge. Sewing by hand is no longer necessary.

1. Snap on the Blind Hem Foot.
2. Fold the edge in by the hem width.
3. Unfold the hem again so that hem edge protrudes by about 1 cm.
4. Position fabric so red edge guide runs along edge of folded hem.
5. Use the needle position and the width dial to regulate the penetration of the needle in the crease.

TIP: If the stitch punctures are visible on the right side of the project, adjust red guide slightly using screw on right side of foot.

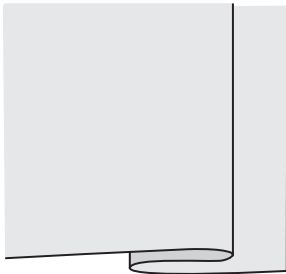

NARROW EDGE FOOT FOR IDT SYSTEM



821142096

B C D E F G J K L

 
for IDT system

The Narrow Edge Foot is perfect for precision topstitching and joining lace and/or fabric edges together (for example, attaching lace to a finished fabric edge). The metal guide in the center of the foot keeps the two fabrics evenly spaced.

1. Set machine for a zigzag or decorative stitch. The needle position will vary according to the stitching position desired.
2. For narrow - edge topstitching, place the center guide of the presser foot against the fabric edge.
3. Move the needle into the desired left position and topstitch.

Lace/Edge Joining: Position lace or finished fabric edges on either side of blade of foot and join together with a zigzag or decorative stitch.

Sewing lace to fabric: Place the folded/pressed edge of your fabric to the left of the center guide and the finished edge of your lace to the right of the center guide. Both fabric and lace should be placed under the foot, right side up. The center guide will keep the fabrics properly separated to allow for more precise stitching. Choose a zigzag stitch and sew, catching the edge of the fabric and the lace. Adjust the width and length of your zigzag as desired.



NON-STICK FOOT FOR IDT SYSTEM



Due to the special coating on the bottom of this foot, it's perfect for sewing hard-to-feed fabrics, like leather, foam, plastic, imitation leathers and plastic-coated fabrics.

1. Snap on the Non-Stick Foot.
2. Select desired stitch and sew.

820664096

B C D E F G J K L

for IDT system

ROLLER FOOT

 


This special presser foot has two metal rollers, making it a good choice for sewing and decorating fabrics that don't feed well, like leather, imitation leather, plastic, foil and similar fabrics. With the Roller Foot, these fabrics are much easier and more convenient to work with.

1. Snap on the Roller Foot.
2. Select desired stitch and sew.

820663096

B C D E F G J K L



JOIN AND FOLD EDGING FOOT FOR IDT™ SYSTEM



820931096

DEGJKL

for IDT system



Use the Join and Fold Edging Foot together with different types of edging, such as lace, embroidered edging or varying fabrics and the beautiful PFAFF 9 mm stitches to create beautiful edgings. Make lingerie in a snap, add lace to create beautiful handkerchiefs or delicate table toppers. This foot will easily guide the edging and the base fabric through the openings in the front of the foot, fold the base fabric and simultaneously sew the edging in place.

1. Thread your machine with regular sewing or decorative thread through the needle and regular sewing thread in the bobbin.
2. Select the stitch you would like to use. For example: the edging could be sewn onto the base fabric using a straight stitch and a 4 mm twin needle or a right justified wide decorative stitch.
Note: Decorative stitches that use forward motion work best. (Avoid stitches with too much backward motion.)
3. Fold a 1/4" (6 mm) hem of base fabric to the wrong side, finger press or iron.
4. Insert the folded edge of base fabric with the right side up into the left fabric guide and the edging (right side up) into the right guide and slide the folded fabric edge and the edging into the foot, prior to attaching the foot onto the sewing machine.
5. Make sure the base fabric and the edging slide easily through the openings.
Note: Lightweight but stable fabrics and edging work best.
6. Snap on the Join and Fold Edging Foot to the sewing machine.
7. Engage IDT system.
8. Sew carefully, not too fast. If your machine has a speed control, reduce the sewing speed to easily guide the fabric and edging as you sew. Hold the fabric in your left hand and the edging in your right hand and sew.

BI-LEVEL TOPSTITCH FOOT FOR IDT SYSTEM



820676096

DEGJKL

for IDT system

The Bi-level Topstitch Foot for IDT system guides your topstitching and edge stitching perfectly. The underside of the presser foot is designed to glide along the folded edge, and it will give you beautiful topstitching on your project. Use the Bi-level Topstitch Foot for hemming bulky projects such as waist bands, curtains etc. It will allow you to have the fabric outside the free arm for easier sewing.

1. Snap on the Bi-level Topstitch Foot for IDT system.
2. Engage the IDT system.
3. Select a straight stitch.
4. Use the inner left side of the presser foot to guide the fabric.
5. Adjust the needle position to left to get the topstitching distance you like.

RIGHT EDGE BI-LEVEL FOOT FOR IDT SYSTEM



 
821007096

D E G J K L

for IDT system

The Right Edge Bi-Level Foot guides your fabric with raised seams easily. The underside of the presser foot is designed with a groove on the left side, allowing it to glide along a folded edge or raised seam. Use the foot with straight stitch for perfect topstitching or edge stitching on pockets, collars, bindings and more or select a decorative stitch for a beautiful finish.

1. Snap on the Right Edge Bi-Level Foot.
2. Engage the IDT system.
3. Select a straight stitch or a decorative stitch.
4. Position the fabric under the foot so that the inner right side of the presser foot rides over an already stitched seam or against any edge. (See illustration to the left)
5. Adjust the needle position if necessary for your desired effect.

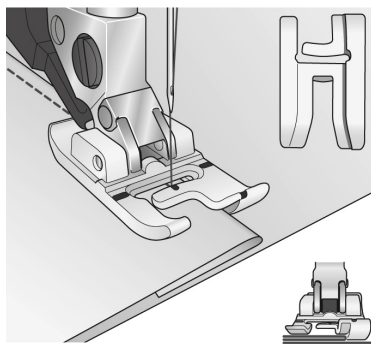

MAGNETIC SEAM GUIDE



821162096

J K L

This easy-to-use seam guide simply snaps onto the needle plate on either side of the presser foot to give you accurate seam allowances and straight lines. Use the markings on the needle plate as a guide to help position the Magnetic Seam Guide.

FREE-MOTION/DARNING FOOT



68028986 A* C D E F G

 
A* except hobby 301, 303,
307 & 309

413039601 J

The Free-Motion/Darning Foot is perfect for sewing free-motion embroidery or darning.

1. Make sure the needle is at its highest position.
2. Attach the Darning Foot: with your thumb and finger, squeezing the front and back of the foot together. Insert the pin of the Darning Foot as far as it will go into the hole at the back of the presser foot holder.
3. The "C-shaped" Guide should be positioned around the presser bar. The long arm must be behind the needle clamp. Tighten the screw.
4. Lower the feed dogs.
5. If you like, you can hoop the project in a round embroidery hoop for more stability.
6. Select a straight stitch and activate the free-motion function, or put the presser foot in the darning/free-motion position.
7. Pull up the bobbin thread and sew a few stitches to secure. Clip the thread ends close to the project and continue sewing.

TIP: Remember, when sewing with the feed dogs lowered, the stitch length is determined by you. An even, medium-to-fast sewing speed will allow you to sew a more consistent length of straight stitch. Sewing too slowly may cause small knots to appear on the reverse side of your work.

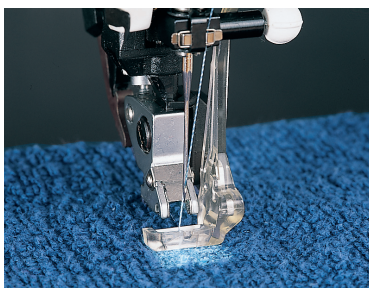

BOBBINS

No matter if you're sewing, embroidering or experimenting with the *creative* Bobbin Case – you can never own too many bobbins!



820779096

A C D E F G
10-pack, blue

821037096

J

Monet bobbins 20-pack version 2



821038096

K3, 4, 5

 
10-pack, clear



820921096

J

10-pack, grey

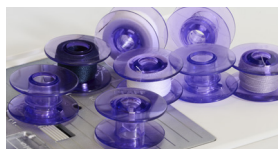

821147096

L

10-pack, violet



820905096

J

Monet bobbins 20-pack



Pre-Wound Bobbins for Embroidery

821192096

L

 
Pack of 10, white

821193096

L

Pack of 10, black

MAGNIFYING LENS SET

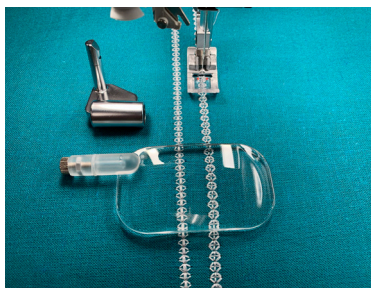

821334096

L



The Magnifying Lens Set easily attaches to your sewing machine and magnifies the sewing area in front of the needle. This gives much greater visibility when threading twin needles and when doing detailed sewing.

- The magnetic lens holder makes it easy to attach, remove or adjust the magnifying lens without requiring any tools.
- Three lenses of different strengths are included to give perfect magnification to enhance the view around the presser foot and needle.
- The set contains three lenses with 1.25x, 1.5x and 2.0x magnification.
- Easily swing the magnifying lens out of the way when changing the needle or presser foot without having to physically remove the attachment.



 


■ DECORATIVE ACCESSORIES



Do you know how much potential is hidden within a standard sewing machine? A surprising amount! With the right presser feet, you can conjure up the most amazing effects, unique details, and eye-catching accents to make each project you sew uniquely yours. Be inspired by the wide variety of decorative presser feet and the possibilities they offer. Your PFAFF dealer is a presser foot expert.

Please note the code numbers for the various PFAFF sewing machines to instantly see which presser feet are available for your model.

PINTUCK FOOT, 5-GROOVE

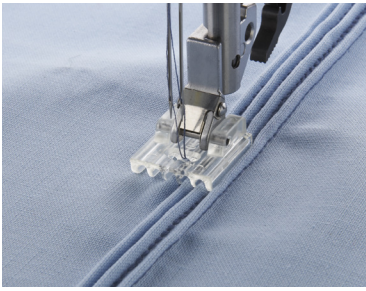

821470096
D G J K L

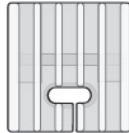  


Twin Needle
821286096: 2.0 mm

You can easily use the classic Pintuck Foot on cotton, light-weight wool or other fine fabrics. Create pintucks to add a nostalgic touch to linens, cushions, blouses or children's clothing.

1. Snap on the Pintuck Foot.
2. Insert a 2.0 twin needle
3. Thread the twin needle (see manual for threading tips).
4. Using a water-soluble marker, draw a placement line for your first pintuck.
5. Sew your first pintuck. When you start on the second pintuck, allow the first pintuck to run parallel in a groove in the foot. This will produce evenly spaced pintucks.

 PINTUCK BLADE

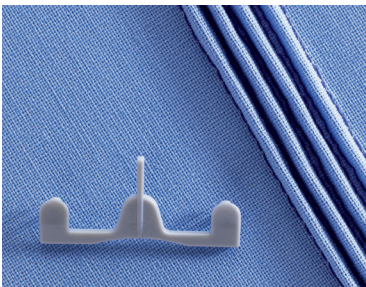



820678096
J K* L

K* except creative 1.5

Use the Pintuck Blade to accentuate the tucks. The Pintuck Blade is attached to your machine's needle plate. The fabric is raised by the blade during sewing to make the tucks higher and more visible.

For heavier materials, use the Five-Groove Pintuck Foot and the large Pintuck Blade.

  1. Attach desired Pintuck Foot to machine.
2. Snap the round knob of the Pintuck Blade into the round hole on the stitch plate with the blade pointing towards the needle. Insert a 1.6 - 2.0 mm twin needle into the machine.
3. Draw or create lines on fabric where pintucks are desired. Position the line at the center of the presser foot. Stitch slightly slower than normal, guiding the fabric. The Pintuck Blade will raise the center of the fabric to produce defined pintucks. (Gently pull the fabric taut while sewing the pintucks.)

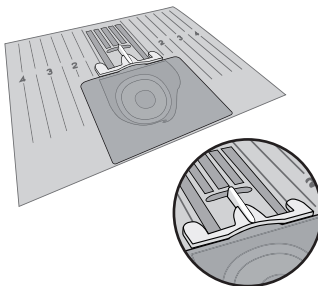

Twin Needle
821285096: 1.6 mm
821286096: 2.0 mm

CIRCULAR ATTACHMENT



821026096

J K L



 
Your Circular Attachment is the perfect tool when you want to make unique embellishments on your sewing projects, garments and quilts. You can sew simple circles, flowers, or parts of circles to create unique borders or graphic patterns. Combine circles in different sizes and create large patterns. Almost all utility or decorative stitches* can be used when stitching with this attachment so you are free to use your favorite. The possibilities available with the Circular Attachment are as unending as the circles it creates!

* Stitches with a default stitch width wider than 9 mm, and stitches with backward feeding cannot be used.


In the package you will find:

- A. Circular Attachment with Size Guide
- B. Pivot Pin
- C. Three different templates: one for sewing circles (1), one for a four-petal flower (2) and one for a six-petal flower (3). The numbers on the templates correspond to the diameter of the circle (in cm).
- D. CD with User Instructions in 11 languages, a tutorial and ideas on how to combine circles using the templates.


With the Circular Attachment, you can sew circles with a diameter measuring from 6 - 26 cm (2½ - 10¼"). The diameters of the circles are printed in both centimeters and inches.

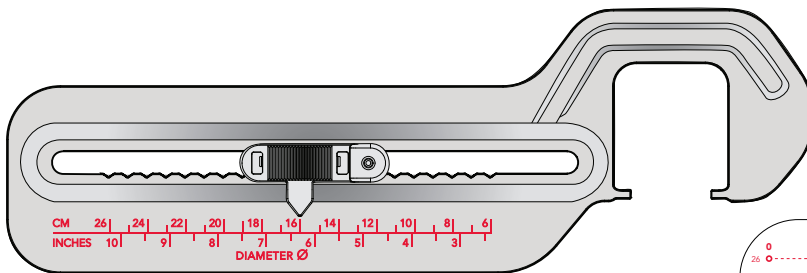

A.

 

B.

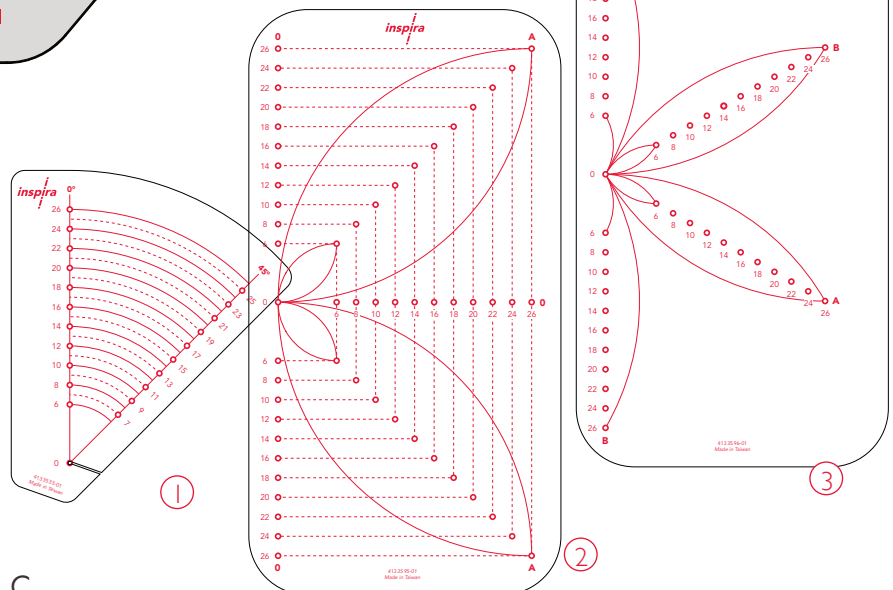 

C.

TIPS AND HINTS

Extension/Quilter's Table

When using the Circular Attachment, we recommend using an extension/quilter's table. This will give extra support to the fabric and makes it easier to control and guide the fabric. Extension/quilter's tables are available as extra accessories.

Stitch Selection

Utility and decorative stitches give wonderful results with this attachment, however, stitches with a default stitch width wider than 9 mm, and stitches with backward feeding cannot be used.

 
Tip: The shorter the stitch, the easier it is to get a nicely joined circle. When about to close the circle, slow down the sewing speed and if necessary, adjust the stitch length to fill the gap.

Appliqué

You can make appliques with the Circular Attachment. Use fabric that does not fray or make raw edge appliqué. You can also simply stitch your appliqué in place with a straight stitch, cut away the excess fabric, and finish by sewing a satin stitch over the raw edges. When using several layers of fabric, it is even more important to guide the fabric carefully making sure that all the layers feed together equally.



CIRCULAR ATTACHMENT TEMPLATE SET


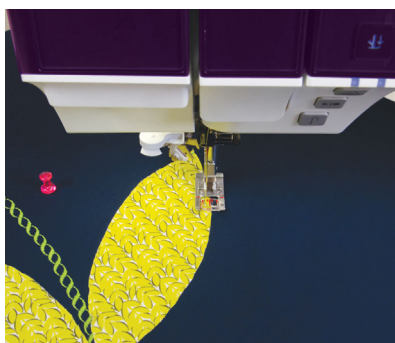


Expand the design possibilities of the circular attachment even further with the circular attachment template set. Create large hearts, tulips and leaves easily with the 3 included templates.


- Create tulips, leaves and hearts in several different sizes.
- Stitch large scale appliques or designs using built in stitches.
- All three templates have clear markings and easy to follow instructions are included.

821371096

  For use with 821026096

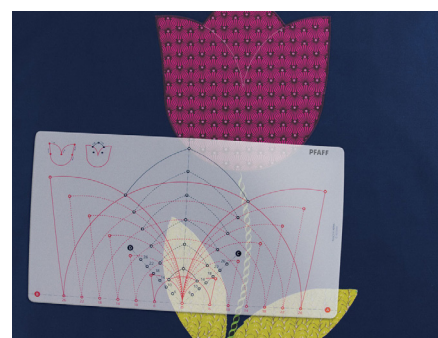
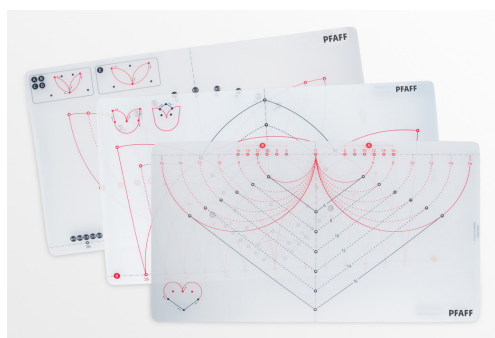


MULTI-LINE DECORATIVE FOOT

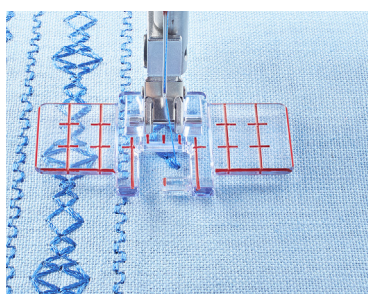 

821082096

  BCDEFGJKL

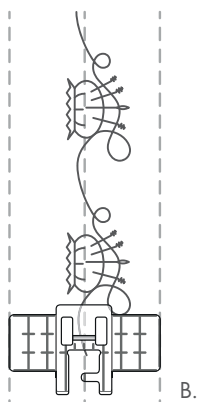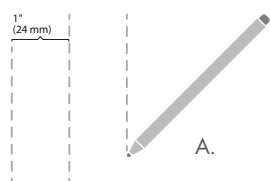

The Multi-line Decorative Foot is designed to help you create parallel rows of decorative stitches that are evenly spaced. The clear view through the foot gives greater visibility and helps to precisely align the rows of stitching. Use the vertical guidelines to evenly space your rows and the horizontal guidelines to match your starting points and accurately turn corners at $\frac{1}{4}$ " (6 mm) or $\frac{1}{2}$ " (12 mm) intervals. The Multi-line Decorative Foot can also be used as a guide when sewing Maxi Stitches.

Decorative Borders

1. Disengage the IDT system.
2. Snap on the Multi-line Decorative Foot.
3. Select a decorative stitch.
4. Mark a line on the fabric where the center of the stitching will be.
5. Place Tear-Away Stabilizer under the fabric.
6. Place the fabric under the presser foot, aligning the red center mark on the foot with the line on your fabric.
7. Sew the first row of decorative stitching.
8. Choose another decorative stitch or continue with the same stitch.
9. Move your fabric to the left. Decide the distance you'd like to have between the rows.
10. Use the red horizontal lines to match up the starting point of each row.
11. Sew the new line of stitching using the red vertical lines on the foot as a guide while sewing.
12. Move the fabric and sew another row of decorative stitching to the left of center.
13. Continue with more stitches as desired to create a wider border.
14. Remove the stabilizer.

Maxi stitches:

1. Disengage the IDT system.
2. Snap on the Multi-line Decorative Foot.
3. Select a Maxi Stitch.
4. To ensure a straight line of stitching draw a line on the fabric where the center of the stitching will be. Continue to mark one or two lines on each side of the center line. (Illustration A)
5. Place Tear-Away Stabilizer under the fabric.
6. Sew carefully, letting the machine control the feeding.
7. Keep the marked lines and the vertical red lines on both sides of the presser foot parallel to each other when sewing. (Illustration B)
8. Remove the stabilizer.

APPLIQUÉ FOOT

 


820214096

B C D E F G J K L

Perfect, narrow and dense satin stitched appliqués can be sewn with an Appliqué Foot. The short toes increase visibility. Use over a strand of crochet cotton to shirr a fabric or to sew a row of twin needle cording. Use the hand-look appliqué stitch to make up fanciful appliqués and create beautiful quilts.

1. Snap on the Appliqué Foot.
2. Select a zigzag stitch.
3. Decrease the stitch length to get a nice, dense satin stitch.
4. Place stabilizer underneath the appliqué area. Stitch over all edges to prevent fraying. Use "needle down" (if available on your machine) for smooth corners and curves.

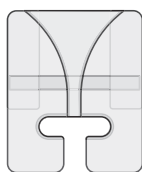

PINTUCK FOOT WITH DECORATIVE STITCH GUIDE




820776096

F G J K* L

K* except creative 1.5
9 mm

With this foot, you can accurately sew pintucks with a spacing of 5 or 11 mm. The same foot allows you to precisely space decorative stitches up to 6 or 9 mm wide between the pintucks.

 1. Attach the Pintuck Foot with guide. The foot can be attached with the guide pointing to the left or the right.
2. Insert a twin needle.
3. Thread the two needles. Sew one row of pintucks.
4. Place the first pintuck under the groove in the extended guide. Sew a second pintuck. The second pintuck will automatically be spaced to allow a decorative stitch to be sewn in the area between pintucks.
5. Sew all remaining pintucks.

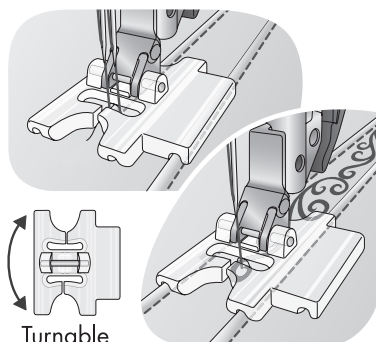

CANDLEWICKING FOOT FOR IDT SYSTEM



820613096

G* J K L

G* except 7530, 7550, 7562,
7570 and 2054

The Candlewicking Foot has a deep tunnel on the underside of the foot to feed over a build-up stitch.

1. Snap on the Candlewicking Foot for IDT system.
2. Engage the IDT system.
3. Select the stitch that you want to sew (either a programmed stitch, a built-in stitch or a downloaded stitch.)
4. Sew.



CLEAR OPEN TOE FOOT FOR IDT SYSTEM



820916096

D E F G J K L

for IDT system

The Clear Open Toe Foot is perfect for appliqué and other sewing applications requiring an unobstructed view of the sewing area. An extra-large opening in the front makes beautiful appliqué quick and easy. The clear view through the foot gives greater visibility and helps to precisely match rows of stitches. A tunnel on the underside of the foot allows your stitches to feed smoothly.

1. Snap on the Clear Open Toe Foot for IDT system.
2. Engage the IDT system.
3. Choose a decorative stitch or a satin stitch. Use pattern mirror if needed.
4. Guide the stitch along the inner edge of the foot to ensure even seams along the edge.
5. For best results use a marking pen to draw lines for exact guiding of the foot.
6. Sew.

OPEN-TOE APPLIQUÉ FOOT FOR IDT SYSTEM



820215096

D E

6 mm, for IDT system

Perfect for appliqué and other sewing applications requiring an unobstructed view of the sewing area. Produce beautiful appliqué quickly and easily with this foot. Use with a pin-stitch or shell-edging program to achieve an appliqué with the look of hand-sewn overcasting.

1. Cut the pieces to shape without any seam allowance or press under seam allowance of materials that fray easily using a template.
2. Iron paper-backed fusible web onto the design. Tear the paper backing away and iron the appliqué fabric onto the base material.
3. Attach the Open-Toe Appliqué Foot for IDT system (if available on your machine).
4. Select a stitch and guide the design edge along the inner edge on the right side of the foot to assure even seams along the edge. (Use pattern mirror if needed.) This also hides the straight stitch in the shadow of the seam for a hand-sewn look.

820213096

F G J K L

9 mm, for IDT system



820654096
DEFGJKL
for IDT system

The Sewing Star Foot is perfect when sewing wide decorative stitches. It gives your fabric the support you need, while giving an open view of the area you are stitching. The Sewing Star Foot prevents the fabric from tunneling and allows you to use the PFAFF IDT system while sewing.

1. Snap on the Sewing Star Foot for IDT system.
2. Engage the IDT system.
3. Select a satin stitch or decorative stitch.
4. Sew as desired.
5. Be sure to use proper stabilizer for your fabric and technique.



creative BOBBIN CASE



820602096
C D E F G

Create beautiful bobbin work, also called reverse decorative stitch embroidery, with the *creative Bobbin Case*. Depending on the type of decorative thread you are using for your projects, there are different ways of working with the PFAFF *creative Bobbin Case*.

For heavy or specialty threads:

Wind the bobbin with the decorative thread slowly.

Place the bobbin in the PFAFF *creative Bobbin Case*. For less texture, use finer specialty threads and adjust the bobbin tension screw, if needed, so the thread pulls evenly and has a slight tension. Put the bobbin in the *creative Bobbin Case* and pull the specialty thread into the bobbin tension.

For heavier yarns and textured specialty threads:

Wind the bobbin evenly clockwise by hand. Put the bobbin in the Bobbin Case. For the most textured bobbin work, do not pull the heavy thread or yarn into the bobbin tension, but go directly into the bypass slot. To bring up the bobbin thread, hold the needle thread, and turn the handwheel towards you.

1. Thread the top with regular sewing thread.
2. Use the recommended size needle for your fabric.
3. Snap on the presser foot 2/2A or 8.
4. Place the right side of the fabric facing down and place Tear Away Stabilizer on top.
5. Select stitches where the density is loose. Experiment with the straight stitch, zigzag stitch and decorative stitches. Increase the stitch length for best results.
6. Select slow speed and stitch at an even speed.
7. Increase needle thread tension slightly if needed.



820808096
J

821137096
L



CHENILLE FOOT FOR IDT SYSTEM



820615096
BCDEFGJKL
for IDT system



The automatic needle threader cannot be used on Group J3 & L machines.



Embellish your project with chenille effects by using the Chenille Foot. This foot will easily guide and stitch layers of chenille strips wherever you want a chenille effect.

1. Thread your machine with regular sewing thread on top and in the bobbin.
2. Select a straight stitch or a zigzag stitch. Use a short stitch length and a narrow stitch width. Another suggestion is to set the three-step zigzag stitch width to 1.5.
3. Place the strips in the presser foot as the picture show. Use three layers of the chenille strips to create a beautiful effect!
4. Snap on the Chenille Foot.
5. Engage IDT system.
6. Sew carefully. The Chenille Foot will guide the chenille strips onto the fabric where you want to have the chenille effect with the stitch forming in the middle of the strips. (You might need stabilizer underneath the fabric.)
7. Add more rows of chenille strips in the same way, to complete your project.
8. Rub the strips with a stiff brush to fray.



GRAND PIPING FOOT FOR IDT SYSTEM



820977096
GJK1,2,3 L
for IDT system

The Grand Piping Foot is perfect for inserting thick home decor piping into seams or wherever you'd like to add a finishing touch! The Grand Piping Foot is used to cover large cords with fabric for specialty piping and insert the piping into seams or edges for a tailored finish. The trim is sewn between the two layers of fabric in one step. You can also create your own piping for a custom finish. This foot can be snapped on to the right or the left of the needle which makes it possible to both create and sew the piping into the seam and to beautifully topstitch along the piping.

To make piping from your fabric:

1. Snap on the Grand Piping Foot to the right side of the needle.
2. Engage the IDT system.
3. Cut fabric strips on the bias or crosswise grain, wide enough to cover the cording plus seam allowances.
4. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
5. Place the fabric and cord under the Grand Piping Foot with the cord to the left of the foot.
6. Select a straight stitch, 2.5 mm stitch length. Move the needle position to the left. Sew.
7. Use your new piping in projects following the steps above.

TIP: When you sew this piping into a project, adjust the needle position so it stitches one setting closer to the cord, to hide the first stitching.

 
 
 
To stitch piping into a seam:

1. Snap on the Grand Piping Foot to the right side of the needle.
2. Engage the IDT system.
3. Select a straight stitch, length 2.5.
4. Place the piping on the right side of fabric, matching raw edges. Position under the foot with the piping to the left of the foot.
5. Add a second piece of fabric on top so right sides are together and piping sandwiched between the layers.
6. Position under the Grand Piping Foot with the piping to the left of the foot.
7. Sew.

Tip: Clip the seam allowance around curves and at corners to reduce bulk and allow the seams to lay flat.

Topstitching:

1. Snap the Grand Piping Foot to the left side of the needle.
2. Engage the IDT system.
3. Open the seam and fold so the piping is along the fabric edge. Press.
4. Sew a row of topstitching to the left of the seam line.

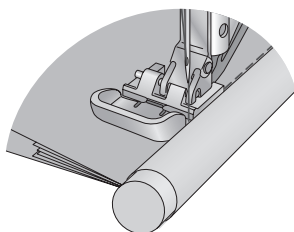
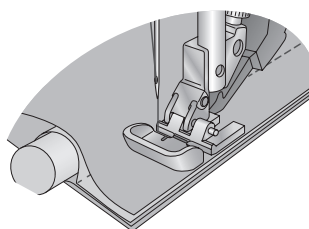
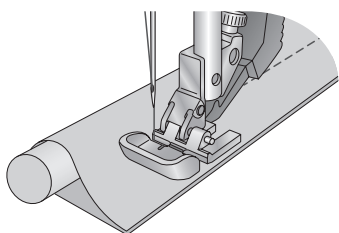


PIPING FOOT



820532096

   A B C D E F G J K L

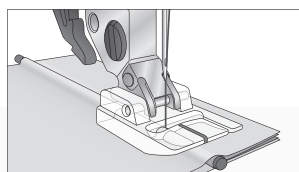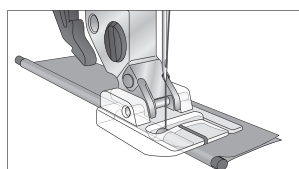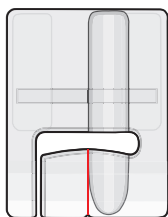

Insert packaged piping into seams and edges for a tailored finish. Cover cord with fabric for specialty piping.

To stitch piping into a seam:

1. Snap on the Piping Foot.
2. Place piping along the seam line on right side of fabric. Place second piece of fabric on top with right sides together.
3. Put fabric and piping layers under Piping Foot with the piping in the groove on the under-side of the foot. Sew with a straight stitch, length 2.5. The groove on the underside of the foot will guide the piping as you sew.

To make piping from your fabric:

 
1. Cut bias or crosswise grain strips, wide enough to cover the cording plus seam allowances.
2. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
3. Place the fabric and cord under the Piping Foot with the cord in the groove on the under-side of the foot.
4. Stitch. The groove will guide the cord so the fabric covers evenly.



TIP: When you sew this piping into a garment, adjust the needle position so it stitches one setting closer to the cord to cover the first stitching.



NARROW PIPING FOOT

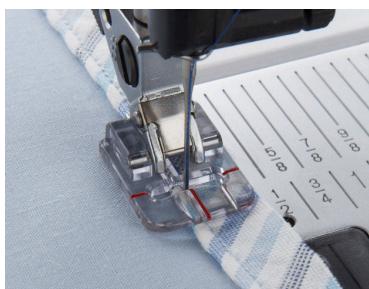

820918096

A B C D E F G J K L

The Narrow Piping Foot is used to make trim for home decor projects, fashion projects or wherever you'd like to add a finishing touch! It is used to cover 1 mm cords with fabric for specialty piping and insert the piping into seams or edges for a tailored finish. It can also be used with packaged piping. The clear view allows you to see the piping placement and know exactly where you are stitching.

To stitch piping into a seam:

1. Snap on the Narrow Piping Foot.
2. Place the piping with the raw edges along the seam line on the right side of fabric. Place second piece of fabric on top with right sides together.
3. Put fabric and piping layers under the Narrow Piping Foot with the piping in the groove on the underside of the foot.
4. Select a straight stitch, length 2.5. Sew. The groove on the underside of the Narrow Piping Foot will guide the piping as you sew.

To make piping from your fabric:

1. Snap on the Narrow Piping Foot.
2. Cut bias or crosswise grain strips, wide enough to cover the cording plus seam allowances.
3. Lay the cording on the wrong side of the fabric strip and wrap the fabric over the cord.
4. Place the fabric and cord under the Narrow Piping Foot with the cord in the groove on the underside of the foot.
5. Sew using a straight stitch, 2.5 mm stitch length. The groove will guide the cord so the fabric covers it evenly.
6. Use your new piping in projects following the steps above.

 
 
 
TIP: When you sew this piping into a project, adjust the needle position so it stitches one setting closer to the cord, to hide the first stitching.

WELTING FOOT



820530096

A B C D E F G J K 1,2,3 L

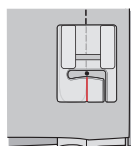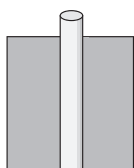

A

B

C

The Welting Foot and the Twin Welting Foot are used to make trim for your home decor projects like pillows, cushions and other home accessories. You can also make trim to cover raw edges on your upholstery, which you can then attach with a staple gun. It's quick and easy to make and insert welt cording. The Welting Foot works the same way as the Piping Foot but is designed for larger sizes of cording. Create your own trim when the color you want isn't available!

1. Cut a bias strip long enough for your cord and wide enough to cover the cord plus seam allowance.
2. Place the cord on the wrong side of the bias fabric strip and wrap it around the cord. (illustration A)
3. Place the fabric and cord under the groove of the foot, and the raw edges to the right. (illustration B)
4. Select center needle straight stitch and stitch length 3.
5. Stitch to cover the cording with the fabric.
6. Trim the seam allowance.
7. To stitch covered welt cord into a seam on your sewing project, place the covered welt cord on the right side of the fabric along the seam line. Place it under the Welting Foot with the welt cord in the groove of the foot. Stitch the welt cord to the fabric. Clip the seam allowance of the welt cord at curves and corners. (illustration C)

Perfect trims in the colors and materials of your choice – this is a job for the Welting Foot from PFAFF. The must-have for stylish home decorating.



 
TWIN WELTING FOOT



820531096

A B C D E F G J K 1,2,3 L

1. Make bias strips long enough to cover the cords and wide enough to wrap around the two cords plus seam allowance.
2. Place the cords on the wrong sides of the bias strip - side to side - and wrap the fabric around the cords. (illustration A)
3. Place the fabric and cord under the presser foot with the right cord under the left groove of the foot, and the raw edges to the right. (illustration B)
4. Adjust to center needle position – straight stitch and stitch length 3.
5. Keep the cords against the fold as you sew.
6. Trim the fabric close to the seam and press seam allowance to the left.
7. Wrap the excess fabric to the center back of the cord.
8. Put the covered cord under the two grooves of the presser foot and sew it onto your sewing project. (illustration C)

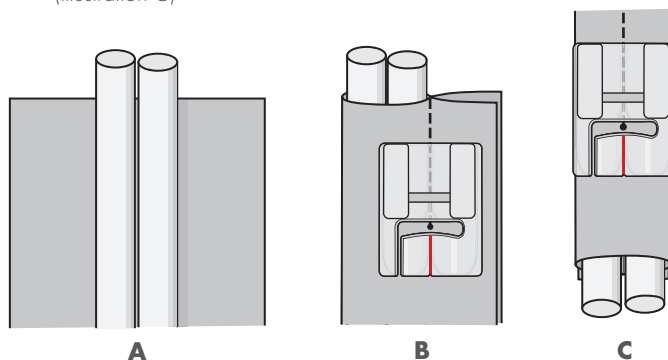

DECORATIVE TRIM FOOT FOR IDT SYSTEM



820614096

 
B C D E F G J K 1,2,3 L

Embellish your project with different types of trims by using the Decorative Trim Foot. This foot will easily guide the trims through the opening at the front and through the groove under the presser foot.


1. Thread your machine with a regular sewing thread or decorative thread on top and regular sewing thread in the bobbin.
2. Select a straight stitch, zigzag stitch or decorative stitch. Avoid using stitches with side motion and stitches with too much motion forward and back.
3. Place the trim in the presser foot as the picture shows.
4. Snap on the Decorative Trim Foot.
5. Engage IDT system.
6. Sew carefully, not too fast. If your machine has the sew slow function, engage it. (You might need stabilizer underneath the fabric)
7. The best result is achieved if you use flat trims, such as silk, velvet, satin or cotton ribbons.



The automatic needle threader cannot be used on Group J3 & L machines.

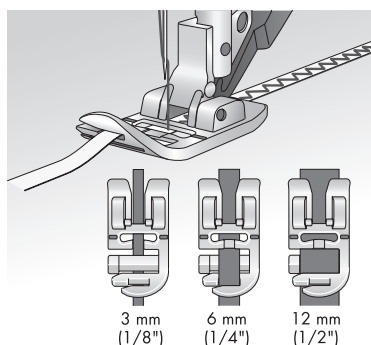3 mm
(1/8")6 mm
(1/4")12 mm
(1/2")

 7/9 HOLE CORD FOOT FOR IDT SYSTEM

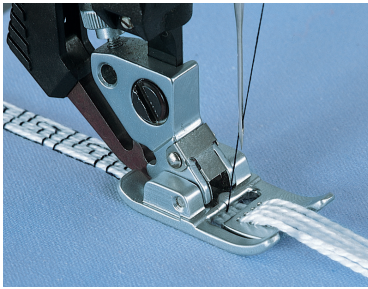


820608096
B C D E F G J K L, 2, 3 L
for IDT system

Wonderful decorative embellishments are easy with this special foot. You can sew up to nine different lengths of embroidery floss, pearl cotton or high sheen threads in place with your choice of a decorative or utility stitch.

1. Cut your cords to the desired length. Thread the cords through the holes in the foot from the top to the bottom. Lead the cords under the presser foot and out the back. Leave the thread tails extending about 1.5" - 2" (4 - 5 cm) at the back.
2. Attach the 7/9 Hole Cord Foot.
3. Choose a decorative stitch to sew over the 7 or 9 cords.

 TIP: Pearl thread or embroidery twist works well.

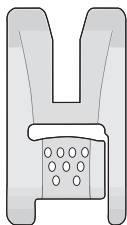

RUFFLER



820885096
J K L

 
 
 
With the Ruffler, you can make closely or widely spaced pleats automatically while sewing. This is very useful for ruffles, frills, home decor, etc. The Ruffler can be used in three different ways:

1. Folding and securing pleats in fabric.
2. Folding pleats in fabric and securing to a second fabric in one operation.
3. Folding pleats in fabric, attaching lace and securing to another fabric in one operation.

Complete instructions on how to use your Ruffler are included when you purchase it from your PFAFF dealer.



The automatic needle threader cannot be used on Group J3 & L machines.

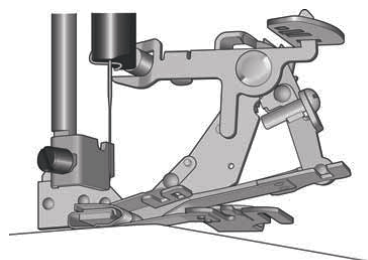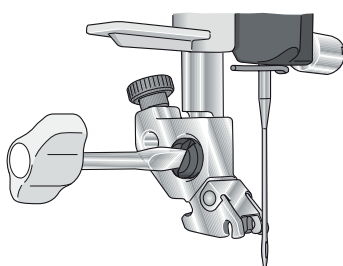




THREE HOLE YARN FOOT FOR IDT SYSTEM



820920096

F G J L

 for IDT system

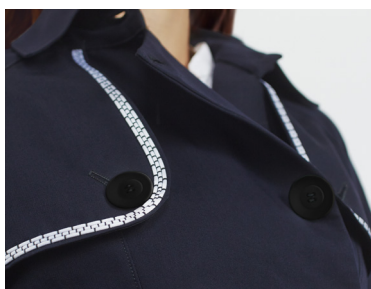

Embellish your project with different types of decorative cords or yarn using beautiful PFAFF 9 mm stitches and the Three Hole Yarn Foot. This foot will easily guide the cords or yarn through the openings in the front of the foot back through the groove under the presser foot. The decorative cords or yarn will be stitched over creating a beautiful braid embellishment.

1. Thread your machine with a regular sewing thread or decorative thread on top and regular sewing thread in the bobbin.

2. Select a 9 mm decorative stitch.

Note: Decorative stitches that use forward motion work best (avoid stitches with too much backward motion.)

3. Thread decorative cords or yarn into the holes from the top of the foot, using the Yarn Threader, prior to attaching the foot onto the sewing machine.

4. Make sure the cords or yarn slide easily through the openings. (If the yarn is too thick it will create too much tension and the feeding might be affected.)

5. Snap on the Three Hole Yarn Foot.

6. Engage IDT system.

7. Place the threaded cords or yarn under the presser foot with a 5 cm (2") tail.

8. Place a tear away stabilizer underneath the fabric and place your fabric under the presser foot.

9. Sew carefully, not too fast. If your machine has a speed control reduce the sewing speed to easily guide the fabric and yarn as you sew.

GATHERING FOOT



820668096

B C D E F G J K L

Gathering is a classic decorative technique. It's easy with this, special foot, which is especially useful for sewing flounces on cushions and curtains or for attaching gathered seams on children's clothing. You can simultaneously stitch and gather two layers of fabric quickly and easily.

1. Set the machine for straight stitch with the needle in far left position.

 
 
2. Place fabric to be gathered under the presser foot with cut edge extending slightly to the right of the presser foot. Insert non-gathering fabric fully into slot of foot. Fabrics should be right sides together.

3. Guide fabric, allowing machine to pull bottom fabric freely for uniform gathering.

TIP: Altering stitch length will alter fullness of gathers. A single layer of fabric may also be gathered by placing under foot and adjusting stitch length and tension to desired fullness.



The automatic needle threader cannot be used on Group J3 & L machines.

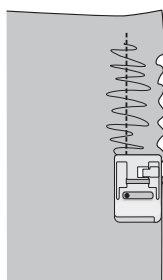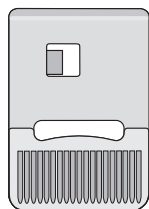

YARN COUCHING FOOT SET



820912096

 
J 1, 3 L

With the PFAFF Yarn Couching Foot set you can easily create decorative yarn embellishments both when sewing free motion and embroidering. Two different feet will suit a variety of yarn. A detailed instruction is included with the product.

1. Thread the machine with thread that matches the yarn.
2. Attach the proper yarn guides for your machine to the notches under the handle on the rear side of the machine.
3. Pull out as much yarn as you need from the ball of yarn.
4. Place the yarn in the yarn guides. It is very important that the yarn flows smoothly while you are sewing.
5. Choose Yarn Couching Foot 1 or 2, depending on the size of the yarn. For best result the yarn should fill the hole in the foot and still run easily through it. We recommend using yarn with even thickness.
6. Thread the yarn from above through the hole in the foot using the yarn threader.
7. Snap on the foot to the machine.



COUCHING/BRAIDING FOOT FOR IDT SYSTEM

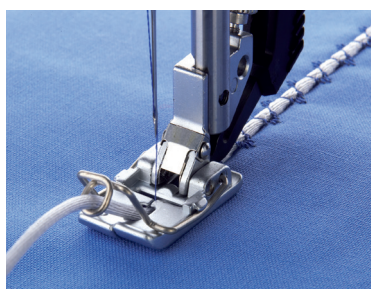

820607096
B C D E F G J K L
for IDT system



 
The automatic needle threader cannot be used on Group J3 & L machines.

You can create beautiful trims when you use the Couching/Braiding Foot and your machine's decorative stitches to sew over yarn, cords, narrow satin ribbon, soutache braid, etc.

1. To attach cords, use matching, invisible or decorative embroidery thread.
2. Insert the cording or tape from the front of the foot into the eyelet-type guide and pull it through the front hole, underneath and to the back of the sewing foot.
3. Engage the IDT system (if available on your machine).
4. Select stitch, i.e. zigzag, blind hem or decorative. Sew the design by following the pre-marked design lines, or sew random lines and waves for a decorative textured effect.

TIP: Try several smaller cords and yarns, twist them together to create texture and combine colors.

FANCY STITCH FOOT FOR IDT SYSTEM

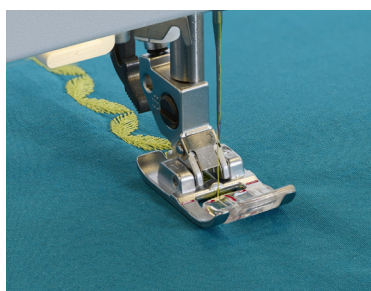

820253096
D E
for IDT system
820774096
G J K L
for IDT system

Create beautiful embellishments with the Fancy Stitch Foot. This foot has easily visible markings to help you position decorative stitches or borders on your fabric. A special groove on the bottom allows optimal feed of even the most densely stitched patterns.

creative SPOOL STAND



820612096
C D E F G J

creative Spool Stand is an accessory to make it easier to use large spools of decorative thread. The stand is mounted on the top of the sewing machine and includes the actual thread stand, a thread guide and a thread net.







QUILTING

Quilting is a passion, as millions of enthusiastic quilters around the world prove. But why is it more fun to quilt with a PFAFF machine? Maybe it's the intelligent technology of our machines, or the wide range of accessories that go with them, ensuring that every quilt, made by hand, becomes an object of breathtaking beauty and high quality.

For more information, go to pfaff.com or visit your nearest authorized PFAFF dealer.



■ ACCESSORIES

Quilts, cushions, wall hangings – their charm lies in the hand-made appeal. But more and more passionate quilters are discovering the advantages of machine quilting... and for many good reasons. Machine quilting is faster and offers more decorative possibilities. The right presser foot can simplify tricky quilting jobs and guarantee perfect results. At PFAFF you'll find accessories designed especially to fit the needs of quilters.

Please note the code numbers for the various PFAFF sewing machines to instantly see which presser feet are available for your model.

PERFECT FOR EVERY QUILTER: THE QUILTER'S TOOLBOX

The QUILTER'S TOOLBOX is packed with everything you need to sew a beautiful quilt! The $\frac{1}{4}$ inch Quilting Foot and the Straight Stitch Plate make it all so easy and professional! Attach the Extension Table for an extra-large working area! For fun and decorative free-motion quilting, use the Free-Motion Guide Grip and the Free-Motion Quilting Foot!

See how much fun quilting can be with the PFAFF QUILTER'S TOOLBOX!

Including:

- Quilting Extension Table
- $\frac{1}{4}$ inch Quilting Foot
- Straight Stitch Needle Plate
- Special Quilting Needles
- Free-Motion Quilt Foot
- Free-Motion Guide Grip



 
820840096
J 1, 2




PERFECT 1/4" FOOT WITH GUIDE FOR IDT SYSTEM




821063096
B C D E G J K L
for IDT system

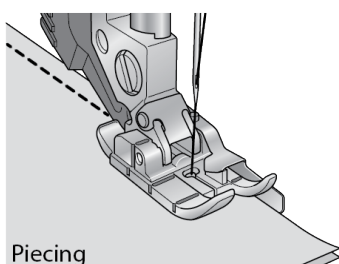

Piecing

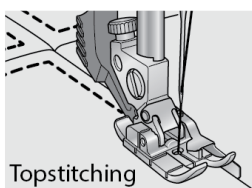 

Topstitching

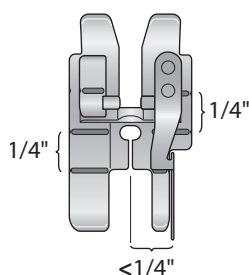 

Piecing:

The Perfect 1/4" Foot is designed to help you achieve a 1/4" (6 mm) or scant 1/4" (< 6 mm) seam when piecing. The needle hole in the foot is oval shaped allowing you to adjust the needle position. The distance between the center needle position and the guide is less than 1/4" (6 mm).

1. Snap-on the Perfect 1/4" Foot. *
2. Engage the IDT.
3. Select a straight stitch.
 - A. For a 1/4" (6 mm) seam; adjust the needle position one or two steps to the left.
 - B. For a scant 1/4" seam; select a centered needle position or one step to the right.
4. Place the fabric pieces right sides together under the presser foot, aligning the edges of the fabric with the guide on the foot.
5. Sew the fabric pieces together guiding the fabric so that the edges touch the guide.
6. Press the seam allowance and measure the block.

Note: Depending on the weight of your fabric and thread it may be necessary to adjust the needle position to achieve your desired seam allowance. Move the needle to the right to decrease the seam allowance and to the left to increase it. You can safely move the needle three steps in either direction but not more.

* Do not use the Straight Stitch Plate when using the Perfect 1/4" Foot.

Topstitching:

The Perfect 1/4" Foot is also wonderful for topstitching. Adjust the needle position and use the guide to place your stitching exactly where you want it on your blocks, garments or home decor projects.

1. Snap on the Perfect 1/4" Foot.
2. Engage the IDT.
3. Select a straight stitch, triple straight stitch or the mock hand quilting stitch. Adjust the needle position as desired if needed.
4. Place the project under the presser foot so that the guide on the foot runs in the ditch of the seam or along the edge of the fabric. Sew.

Note: Red markings on the Perfect 1/4" Foot help you align the fabric when you start sewing, at corners and at the end of your fabric.

For all machines with manual presser foot lifters: When using any of the optional quilt feet with guides and sewing with the needle set to stop in the down position, it is recommended that the presser foot be lifted only as high as necessary for pivoting. Lifting the foot to the extra high position can cause the needle holder to touch the guide on the presser foot. The foot could become dislodged, causing damage to the needle and or the foot.

1/4" QUILTING FOOT FOR IDT SYSTEM




820926096

DEGJKL

for IDT system

A quilt consists of two layers of fabric with a layer of batting sandwiched between them. Many pieces of fabric can be joined together in continually changing patterns to form the top layer of the quilt. The 1/4" Quilting Foot is particularly suitable for joining these pieces of fabric. The clearance between the needle and the outer edge of the foot is 1/4" and between the needle and the inner edge of the foot 1/8".

 1. Attach the 1/4 inch Quilting Foot.
2. Engage the IDT system, if available on your machine.
3. Sew fabric together using straight stitch.
4. When using 1/4" seam allowance, guide fabric along outer edge of foot. When using a 1/8" seam allowance, guide fabric along inner edge of foot.

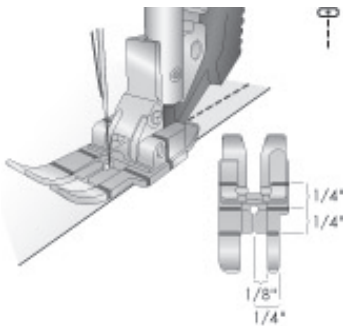

CLEAR 1/4" QUILTING FOOT FOR IDT SYSTEM



 
820883096

DEGJKL

for IDT system

The Clear 1/4" Quilting Foot is great for joining pieces of fabric as it gives clear visibility when sewing 1/4", 1/8" and 3/8" seams. The red lines on the presser foot mark 1/4" pivot points in front of and behind the needle.


1. Place two pieces of fabric right sides together.
2. Select straight stitch, stitch length 2.5.
3. Engage IDT system.
4. Place the fabric under the presser foot.
5. When using 1/8" seam allowance, guide the fabric along the inner edge of the toe. When using 1/4" seam allowance, guide the fabric along the outer edge of the toe. When using 3/8" seam allowance, guide the fabric along the outer edge of the foot.
6. To pivot 1/4" from the end of the fabric, stop sewing when the fabric edge reaches the first red mark on the foot.

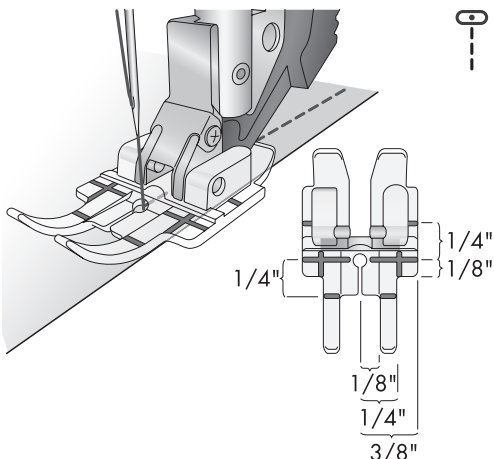

1/4" RIGHT GUIDE FOOT FOR IDT SYSTEM



 820924096
B C D E F G J K
for IDT system

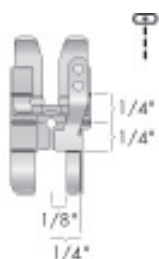

The 1/4" Right Guide Foot is designed to help you achieve perfect 1/4" seams when piecing. Simply keep the fabric edge next to the guide. The distance between the needle and the right guide is 1/4". The 1/4" Right Guide Foot also gives a perfect 1/4" topstitch distance from the edge of a block when stitching the blocks, batting and backing together.

Piecing:

1. Snap on the 1/4" Right Guide Foot.
2. Engage the IDT system.
3. Select a straight stitch.
4. Place the fabric right sides together under the presser foot with the guide at the edge of the fabric.
5. Sew the blocks together, guiding the edges so that it touches the right guide.

Topstitching:

1. Snap on the 1/4" Right Guide Foot.
2. Engage the IDT system.
3. Select a straight stitch, triple straight stitch or the hand-look straight stitch quilting stitch.
4. Place the quilt under the presser foot with the flange guide in the seam ditch or at the edge of the fabric block.
5. Sew around the block and you will get a perfect 1/4" distance from every block edge.

Note: With any of the 1/4" Right Guide feet for IDT system attached to machines with manual presser foot lift we recommend not to lift the presser foot to the extra high position.

 
This can cause the needle holder to touch the guide on the presser feet.

With the needle set to down position we recommend just to lift the presser foot as much as needed for pivoting so that the fabric can be turned freely.

CLEAR 1/4" RIGHT GUIDE FOOT FOR IDT SYSTEM



820881096
D E G J K L
for IDT system

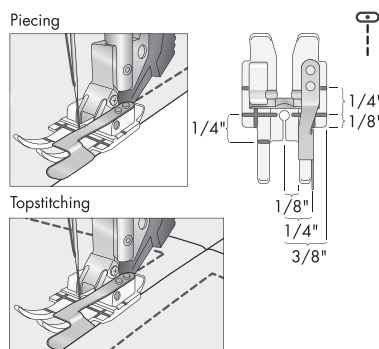

The Clear 1/4" Right Guide Foot is designed to help you achieve perfect 1/4" pieced seams. Simply guide the fabric edge next to the guide. The clear foot gives great visibility to view when sewing. The distance between the needle and the right guide is 1/4".

Piecing:

1. Snap on the Clear 1/4" Right Guide Foot.
2. Engage the IDT system.
3. Select a straight stitch.
4. Place the fabric right sides together under the presser foot with the guide at the edge of the fabric.
5. Sew the blocks together guiding the edges so that it touches the right guide.

Topstitching:

The Clear Right 1/4" Guide Foot also gives a perfect 1/4" inch topstitch distance from the edge of a block when quilting, on your garments or home décor projects.

Refer to instruction for the 1/4" Right Guide Foot.

Note: With any of the 1/4" Right Guide feet for IDT system attached to machines with manual presser foot lift we recommend not to lift the presser foot to the extra high position.

This can cause the needle holder to touch the guide on the presser feet.

With the needle set to down position we recommend just to lift the presser foot as much as needed for pivoting so that the fabric can be turned freely.

STITCH-IN-DITCH FOOT FOR IDT SYSTEM



820925096
B C D E F G J K L
for IDT system


The Stitch-in-Ditch Foot is designed to help you achieve perfect quilting on the top of your quilt. The guide rides smoothly over the seam for perfect stitching “in the ditch”.

1. Attach the Stitch-in-Ditch Foot.
2. Engage the IDT system.
3. Select a straight stitch (or another stitch that has a centered needle position like the reinforced straight stitch or the straight stitch hand look quilt stitch).
4. Place the quilt under the presser foot with the guide in the seam (ditch) of the pieced quilt patches.
5. The guide of the presser foot will follow exactly in the center of the pieced seams so you can quilt perfectly.

Note: With any of the Stitch-in-Ditch feet for IDT system attached to machines with manual presser foot lift we recommend not to lift the presser foot to the extra high position.

This can cause the needle holder to touch the guide on the presser feet.

 With the needle set to down position we recommend just to lift the presser foot as much as needed for pivoting so that the fabric can be turned freely.

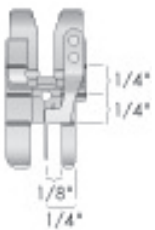

CLEAR STITCH-IN-DITCH FOOT FOR IDT SYSTEM



821143096
D E G J K L
for IDT system


The Clear Stitch-in-Ditch Foot gives excellent visibility and is designed to help you achieve perfect quilting on the top of your quilt. The guide rides smoothly over the seam for perfect stitching “in the ditch”.

1. Attach the Clear Stitch-in-Ditch Foot.
2. Engage the IDT system.
3. Select a straight stitch (or another stitch that has a centered needle position like the reinforced straight stitch or the straight stitch hand look quilt stitch).
4. Place the quilt under the presser foot with the guide in the seam (ditch) of the pieced quilt patches.
5. The guide of the presser foot will follow exactly in the center of the pieced seams so you can quilt perfectly.

Note: With any of the Stitch-in-Ditch feet for IDT system attached to machines with manual presser foot lift we recommend not to lift the presser foot to the extra high position.

This can cause the needle holder to touch the guide on the presser feet.

 With the needle set to down position we recommend just to lift the presser foot as much as needed for pivoting so that the fabric can be turned freely.

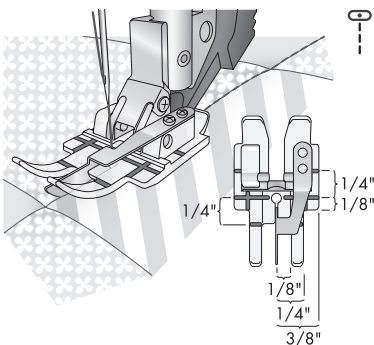


OPEN-TOE FREE-MOTION SPRING FOOT



821141096

 J L

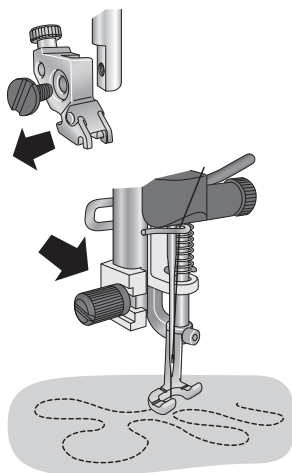

The Open-Toe Free-Motion Spring Foot is excellent for free-motion sewing and quilting. This foot is open in the front for optimum visibility while stitching. The spring action keeps the fabric from lifting with the needle as the stitch is being formed. The fabric is guided manually when free motion sewing or quilting.

1. Disengage the IDT system.
2. Loosen the presser foot holder screw completely and remove the holder.
3. Place the Open-Toe Free-Motion Spring Foot around the presser bar and attach it with the screw included in the package. Make sure the metal arm on the foot is placed above the needle clamp.

 
Hint: Lower the needle a little bit to make it easier to place the guide on the foot in the right position above the needle clamp.

4. Thread your machine.
5. Select a straight stitch or a zigzag stitch (maximum stitch width 5.0).
6. Set your PFAFF sewing machine to spring foot free-motion setting/ free-motion position. The feed dogs will drop automatically on some machines. With other machines you need to lower the feed dogs manually. (Refer to your User's Guide).

Note: When the feed dogs are dropped, the fabric is no longer fed by the machine. You must move the fabric.


7. Maintain a consistent speed and move the fabric in a smooth motion. You are creating the length of the stitch as you move the fabric. The red markings on the foot can be used as a guide when stippling or following a design.

OPEN TOE FREE-MOTION FOOT

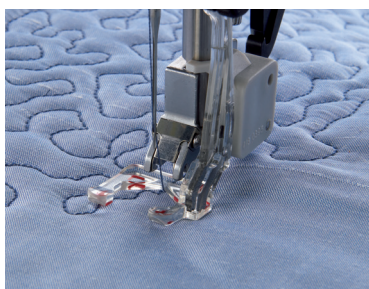

821140096

 J L

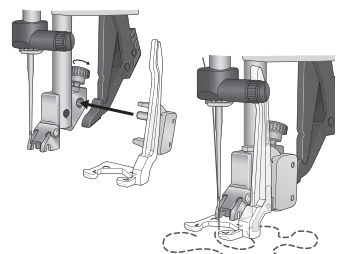

The Open Toe Free-Motion Foot is for wonderful free-motion sewing and quilting. This foot has an extra-large opening cut out in the front to give you an optimal view of your free-motion sewing and quilting.

1. Disengage the IDT system.
2. Carefully loosen the small silver screw on the back of the presser foot holder until the crosshole is accessible.
3. Squeeze the presser foot gently together and guide the pin of the foot into the crosshole of the presser foot holder as far as it will go. Make sure the clear arm is above the needle clamp.
4. Tighten the silver screw.
5. Lower the Open Toe Free-Motion Foot into the free-motion/darning position by either selecting the free-motion icon on the touch screen of your machine or manually setting the presser foot lifter in the free-motion position.
6. Lower the feed dogs.
7. Select a straight stitch or a zigzag stitch.
8. Keeping an even speed, manually move your fabric.

 
Remember, because the feed dogs are lowered, you must move the fabric manually. For even stitches, move your fabric in a smooth, even motion.

OPEN TOE FREE-MOTION FOOT



820988096

K

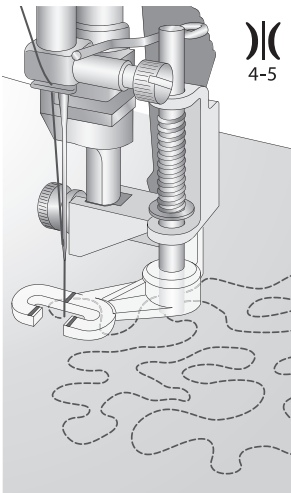

The Open Toe Free-Motion Foot is excellent for wonderful free-motion sewing and quilting. This foot has an extra-large opening cut out in the front to give you an optimal view of your free-motion sewing and quilting. The Open Toe Free-Motion Foot is used for stippling and free-motion embroidery. The foot allows for greater visibility as the opening in front of the foot gives you an optimal view of your free-motion sewing and quilting. The open front and transparency of the foot with both vertical and horizontal markings, allows you to easily do stippling or follow a design on the fabric.

1. Disengage the IDT system.
2. Remove the presser foot holder, and attach the Open Toe Free-Motion Foot to the presser foot holder bar. The pin should be on the needle clamp screw.
3. Press the Open Toe Free-Motion Foot on firmly from behind with your index finger and tighten the screw.
4. Lower the feed dogs.
5. Select a straight stitch.
6. Keeping an even speed, manually move your fabric.

Remember, because the feed dogs are lowered, you must move the fabric manually. For even stitches, move your fabric in a smooth, even motion.

EDGE GUIDE/QUILTING GUIDE



820251096

 
A* B C D E F G J K L

A* except *varimatic* 6085, 6086
and 6087

The guide is especially useful for stitching straight lines when quilting. Use the straight stitch or decorative stitch of your choice for wonderful quilted effects.


1. Loosen the screw at the back of the presser foot ankle just enough to insert the guide in the hole. Secure the guide by tightening the screw.
2. Sew a seam with a stitch of your choice.
3. Place the guide on the seam that you have sewn and sew once more. This will place the seams at the distance that you have chosen.

FREE-MOTION ECHO QUILTING FOOT

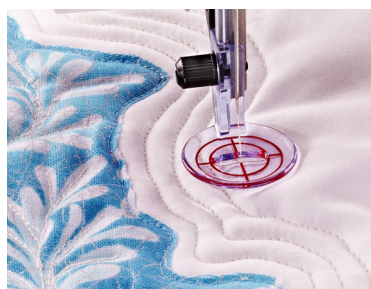

821002096

 J1,3 L

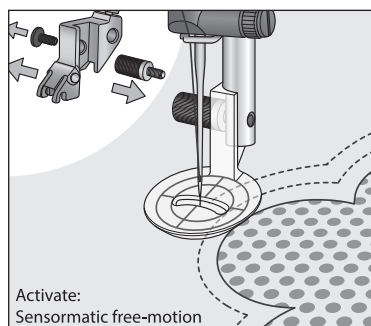

The Free-Motion Echo Quilting Foot is designed to give you more control when free-motion quilting. The large base ensures good surface contact with the fabric and provides better control of the stitching. The transparent base allows for 360° visibility. Vertical, horizontal and circular markings on the foot make it easy to follow a continuous line quilting pattern or design on the fabric. Sew straight lines or follow patterns with rounded edges in any direction.

1. Disengage the IDT system.
2. Loosen the presser foot ankle screw completely and remove the ankle.
3. Fit the Free-motion Echo Quilting Foot around the presser bar; attach it with the screw included in the package.
4. Thread your machine.
5. Select a straight stitch.
6. Set your PFAFF sewing machine to Sensormatic free-motion mode. The feed dogs will drop automatically.
Note: When the feed dogs are dropped, the fabric is no longer fed by the machine. You must move the fabric.
7. Bring the bobbin thread to the top by taking one stitch. Hold on to both threads and sew a few stitches in place to begin.
8. Maintain a consistent speed and move the fabric in a smooth motion. You are creating the length of the stitch as you move the fabric.
9. Stitch around the quilting motif, appliqué or pattern on the fabric, maintaining a uniform distance to outline the shape.
10. Stitch a second row, maintaining a uniform distance from the first row. Use the red markings on the foot as a guide to keep your spacing even. (Illustration)
11. Repeat as many times as you want to create the desired effect.

Note: When sewing in Sensormatic free-motion mode at a low speed the presser foot will raise and lower with each stitch to hold the fabric on the stitch plate while the stitch is being performed. At a higher speed, the presser foot floats over the fabric while sewing.



QUILT BINDER



821163096

J* L

J* Must be fitted with a compatible Needle Plate - 412964309 (available separately).

This quilt binder attachment is perfect for attaching binding to your quilt projects. The quilt binder has a large opening to accommodate the quilt layers and creates a finished binding size of $\frac{1}{2}$ ". The (12 mm) Quilt Binder attachment comes with a dedicated presser foot for use with IDT to ensure even feeding through the binder and a perfect result.

The Double Fold $\frac{1}{2}$ " (12 mm) binder will turn a lightweight woven fabric strip into a binding and attach it to the project edges all in one step.

To bind edges with the $\frac{1}{2}$ " (12 mm) Quilt Binder, cut a $1\frac{3}{4}$ " (45 mm) wide strip of light weight woven fabric.

1. Attach the Quilt Foot with guide.
2. Set the machine for straight stitch or hand look quilt stitch.
3. Place the attachment plate on the stitch plate of the machine. Align pin on the back of attachment plate to the top opening on the stitch plate of the machine. Screw the attachment plate in place with one thumb screw.
4. Place the binder on the attachment plate and adjust the binder to line up. Attach the binder in place with the two thumb screws and washers.
5. Measure the length of your project and add at least 6" (15 cm).
6. Cut enough $1\frac{3}{4}$ " (45 mm) strips to equal that number and join the strips together. Cut the end of the strip into a point.
7. Slide the fabric strip into the binder with the wrong side facing you using tweezers.
8. When the fabric is through the end of the binder, hold the folded strip with your left hand and continue to feed it into the binder as shown while the fabric forms a double fold tape.
9. Raise the presser foot and pull the strip under the foot and straight back 2.5" (5-6 cm) behind the needle.
10. Slide the fabric to be bound right side up into the slot of the binder. Adjust the stitch position to right or left to reach the desired needle position.

How to sew a quilt binder corner:

 
Sew to the edge of the quilt, tie off and then pull the quilt out from binder. Keep the quilt close to the binder when folding the corners. Finger press the folded fabric.

Create a mitered corner:

1. Fold and pinch the top mitered corner, pin in place with a long pin. Repeat in the same way on the back of the quilt.
2. To continue sewing the binding, pull the fabric strip back through the binder and at the same time place the quilt back under the presser foot and into the binder again.
3. To ensure that the fold is right on both top and back, pull the quilt forward and back again a couple of times.
4. Lower the needle to hold the binding in place and remove the needles. Pull out long thread tails behind the presser foot before start to sew. Backstitch and sew the binder in place. Repeat on the other corners.

How to end the binding:

1. Sew the binding all the way around the quilt edges. When the edges off the binding almost meet, cut the excess of fabric in the beginning of binding as illustration.
2. Continue to sew, overlapping the binding one more time. Remove the quilt from the binder and trim excess leaving 1" (2.5 cm) tail. Fold back the opening and pin in place. Sew a seam over the folded edge.

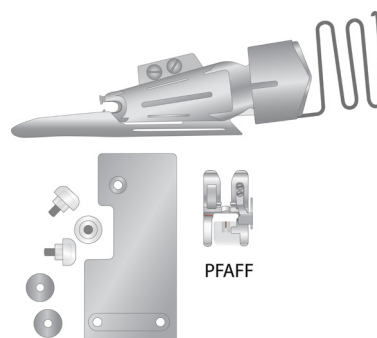

Note: See detailed instructions included with the attachment.

5/8" QUILT BINDER



821370096

J* L

* When fitted with 412964206 or 412964207 Creates an easy to apply double folded 5/8" binding to finished garments, home décor and quilt projects.

- Easy to add a double layer of binding similar to traditional methods.
- Uses a 3" (80 mm) wide strip of fabric to create a finished binding 5/8" (15 mm) wide.

FREE-MOTION RULER FOOT



821164096

J3 L

quilt expression 720, expression 710,

The Free-Motion Ruler Foot allows you to create a beautiful style of free-motion quilting in conjunction with your ruler templates. The perfectly circular shape allows you to sew a constant 1/4" away from the edges of your ruler template. Red markings on the foot indicate the center of the foot, making it easy to line the foot and the ruler up when sewing. Cutouts in the front and side of the foot make it easier to see right up to the needle.

1. Loosen the presser foot ankle screw completely and remove the ankle.
2. Place the Free-Motion Ruler Foot around the presser bar; attach it with the screw.
3. Thread your machine.
4. Select a straight stitch.
5. Set your machine to Free-Motion Ruler Foot mode. The feed dogs will drop automatically.

Note: When the feed dogs are dropped, the fabric is no longer fed by the machine. You must move the fabric.

1. Place the fabric under the foot and lower the foot.
2. Bring the bobbin thread to the top by taking one stitch. Hold onto both threads and sew a few stitches in place to begin.
3. Slide the edge of the ruler up to the foot. Place enough pressure on the ruler with your fingertips to gently glide the foot along the edge without the ruler moving.
4. Sew along the edge of the ruler. When near the end, stop the machine, lift the presser foot and slide the ruler into position to continue stitching the design.
5. When changing positions, stop the machine, and simply reposition the ruler and stitch in the direction needed to follow the ruler.

EXTENSION TABLE WITH ADJUSTABLE GUIDE



821181096
J1, 2

821372096
J3

821136096
L

Designed and manufactured for PFAFF machines, this extension table attaches to your machine the same way as your accessory box and substantially increases your work area. It is very stable, and because no legs are needed, you have the clearance underneath the extension table for circular items. The Adjustable Guide with Ruler has both centimeters and inches to allow you to sew hems, borders, and more accurately. The ruler printed right on the extension table measures from the needle in both centimeters and inches so you always have the measurements you need right at hand.

QUILT TABLE



820887096
J1, 2

821263096
L

820492096
G

Made of sturdy, smooth plexiglas. This terrific table substantially increases your work area to accommodate the extra space quilters need. Even very large quilting projects can be handled comfortably.



EXTENSION TABLE



821092096

K2

821451096

K1

The sturdy extension table has adjustable legs and allows you to convert the free arm to an extended flat bed to easily support large projects.



EXTENSION TABLE



821001096

K3



EXTENSION TABLE



821079096

K5

The sturdy extension table has adjustable legs and allows you to convert the free arm to an extended flat bed to easily support large projects.

EXTENSION TABLE WITH BAG



821035096

 
K4

Designed for the *passport* line, this extension table has a printed ruler with both centimeters and inches so needed measurements are close at hand. A branded bag for the table is included, which can be attached to the back of the machine cover. The sturdy extension table has adjustable legs and allows you to convert the free arm to an extended flat bed to easily support large projects.



STRAIGHT STITCH NEEDLE PLATE

The Straight Stitch Needle Plate guarantees even fabric feed at the beginning and end of a seam, while preventing the fabric from being pulled into the needle plate.

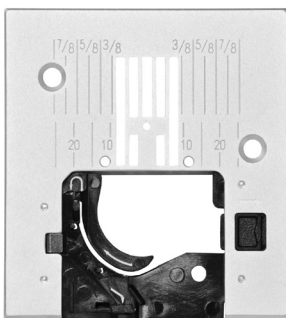

Straight Stitch Needle Plate
with Inch Markings

821472096

 
K4



Straight Stitch Needle Plate with
Inch Markings

68003080

J

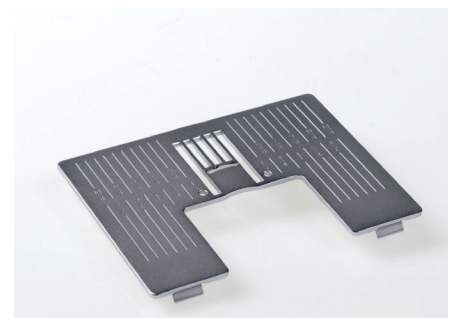

Standard Zigzag Needle Plate
with Inch Markings

412964309

J



■ ■ ■ EMBROIDERY

The owner of a PFAFF sewing and embroidery machine has the key to a never-ending source of creativity. Embroidery is a popular decoration for fashion, accessories and home decorating items. Combine your machine with the right accessories, and you'll get professional results every time! It's fun and the new ideas will just keep coming!

For more information, go to pfaff.com or visit your nearest authorized PFAFF dealer.



■ EMBROIDERY COLLECTIONS

An unlimited source of inspiration! Breathtakingly large or delightfully small; flowers or borders, romantic or modern; intricate patterns or clean lines – there is an embroidery collection for every taste.

EMBROIDERY DESIGN COLLECTIONS

Explore a world of creative possibilities with CREATIVATE's Embroidery Design Catalog*, featuring a wide variety of designs in multiple sizes to fit your PFAFF embroidery machine. Each design collection includes a detailed guide with everything you need to bring your projects to life. New designs are added regularly, so be sure to browse the latest selections in the Design Catalog at creativate.com to explore the latest additions and spark ideas for your next project.

*Some CREATIVATE features require a paid subscription.

■ *creative* HOOPS

With the *creative* hoops from PFAFF, you can expand your embroidery machine's potential and achieve the most professional results. All designs will be perfect, no matter what the size. To guarantee even more embroidery pleasure, the range of *creative* hoops is constantly being expanded. You can learn more from your PFAFF dealer.



creative PETITE METAL HOOP 100 X 100 MM



821098096

creative icon 2, creative icon, creative sensation pro II, creative sensation pro, creative sensation, creative performance, creative vision, creative 4.5, creative 3.0, creative 1.5

creative METAL HOOP 180 X 130 MM



821034096

creative icon 2, creative icon, creative sensation pro II, creative sensation pro, creative sensation, creative performance, creative vision, creative 4.5, 4,0, 3,0, 2,0

Some fabrics are more difficult to hoop than others or should not be hooped at all since hooping can damage the fabric. Thick and coarse fabrics can be difficult to hoop, as can thin and glossy fabrics. Hooping ready-to-wear garments is difficult or impossible due to seams, narrow areas or buttons/rivets. When using the PFAFF creative metal hoop, hooping won't be a problem!

When you want to embroider on quilts or other projects where you do not want residuals from the stabilizer on the back side, the Metal Hoops are perfect! Embroider without stabilizer. Embroidering several designs after each other or doing endless embroideries is easy, just remove the magnets and move the fabric, and you will be ready to embroider the next design in no time!

creative GRAND METAL HOOP 240 X 150 MM



821097096

creative icon 2, creative icon, creative sensation pro II, creative sensation pro, creative sensation, creative performance, creative vision, creative 4.5, creative 3.0

SET OF 4 MAGNETS

 


620132696

For
METAL HOOP

There is an extra set of four magnets available as an optional accessory. They can be used to fix the fabric more securely to the hoop when not using adhesive stabilizer.

creative QUILTER'S METAL HOOP 200X200MM

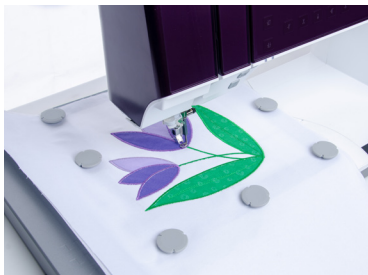

821335096

creative icon 2, creative icon

The *creative* Quilter's Metal Hoop is perfect for when you want to embroider on larger projects and stitch out larger designs. The metal hoop design and included eight magnets allow you to hoop challenging projects easily no matter if its a large quilt block, a pillow front, part of a jacket or even fabric that you can't hoop conventionally such as leather or velvet. The large 200 mm x 200 mm (8" x 8") embroidery area is ideal for larger embroideries such as quilt blocks or combinations of designs and it comes with five unique embroideries.

The designs can be found in the quilt category on your machine once your machine has been updated to take the *creative* Quilter's Metal Hoop.

creative METAL HOOP FABRIC GUIDE SET



821165096

These useful guides easily attach onto any metal hoop and act as a barrier to keep the rest of your project out of the way while embroidering. Use the guides with the *creative* Petite Metal Hoop (821098096) to easily embroider on small garments as they hold the excess fabric out of the way.



creative
PETITE SQUARE HOOP
821006096
80 x 80 mm



creative
120 SQUARE HOOP
412968202
120 x 120 mm



creative
ELITE HOOP
413116502
260 x 200 mm



creative
GRAND QUILTERS HOOP
821218096
260 x 260 mm



 
creative
DELUXE HOOP
412944502
360 x 200 mm




creative
PETITE METAL HOOP
821098096
100 x 100 mm



creative
METAL HOOP
821034096
180 x 130 mm

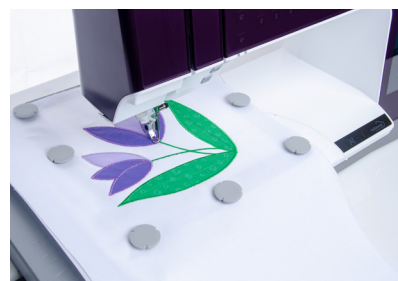

 creative
QUILTER'S METAL HOOP
821335096
200 x 200 mm

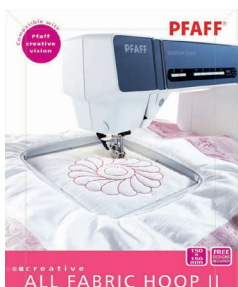

creative
ALL FABRIC HOOP II
820889096
150 x 150 mm



creative
QUILTERS HOOP
820940096
200 x 200 mm



creative
MASTER HOOP
412968502
240 x 150 mm



creative
SUPREME HOOP
68000058
360 x 260 mm



creative
GRAND DREAM HOOP
820888096
360 x 350 mm



creative
PETITE SPRING HOOP
821453096
40 x 40 mm



creative
GRAND METAL HOOP
821097096
240 x 150 mm



creative
GRAND ENDLESS HOOP
820987096
260 x 150 mm



creative
ENDLESS HOOP II
820893096
180 x 100 mm



creative icon 2
creative icon
creative performance 950

MAX. EMBROIDERY AREA		360 x 350 mm
EMBROIDERY HOOP	FRAME SIZE	
820888096 creative GRAND DREAM HOOP	360 x 350 mm	•
68000058 creative SUPREME HOOP	360 x 260 mm	•
412944502 creative DELUXE HOOP	360 x 200 mm	•
821218096 creative GRAND QUILTERS HOOP	260 x 260 mm	•
413116502 creative ELITE HOOP	260 x 200 mm	•
820987096 creative GRAND ENDLESS HOOP	260 x 150 mm	•
821097096 creative GRAND METAL HOOP	240 x 150 mm	•
821335096 creative QUILTERS METAL HOOP	200 x 200 mm	•
820940096 creative QUILTERS HOOP	200 x 200 mm	•
821034096 creative METAL HOOP	180 x 130 mm	•
412968502 creative MASTER HOOP	240 x 150 mm	•
820893096 creative ENDLESS HOOP II	180 x 100 mm	•
68027143 creative RECTANGLE HOOP	170 x 100 mm	
820889096 creative ALL FABRIC HOOP II	150 x 150 mm	•
412968202 creative 120 SQUARE HOOP	120 x 120 mm	•
821098096 creative PETITE METAL HOOP	100 x 100 mm	•
821098096 creative 100 SQUARE HOOP	100 x 100 mm	
821006096 creative PETITE SQUARE HOOP	80 X 80 mm	•
821453096 creative PETITE SPRING HOOP	40 X 40 mm	

EMBROIDERY ■ HOOP / MACHINE COMPATIBILITY CHART



creative sensation pro II
creative sensation pro
creative sensation
creative vision
creative performance*
creative 4.5*, 4.0*
creative expression 750



creative performance**
creative 4.5**, 4.0**
creative 3.0, 2.0



creative 1.5
creative ambition 640



creative expect 350

360 x 350 mm	260 x 200 mm	240 x 150 mm	170 x 100 mm
•			
•			
•	•		
•	•		
•***	•***		
•	•		
•	•		
•	•	•	
•	•	•	
			•
•	•	•	
•	•	•	
•***	•***	•	
creative expression 750			•
•	•	•	•
creative expression 750			•

** When sold with the **small** embroidery unit | *** not available for creative 4.0, 2.0

creative EMBELLISHMENT ATTACHMENT



 
821461096

creative icon 2
creative performance 950

Adding embellishments has never been easier. Create beautifully embellished embroidery projects with the press of a button using the PFAFF *creative* Embellishment Attachment. Applies beads, ribbon, cording and yarn in all directions for perfect placement to create the ultimate in custom embellishment.

- First attachment of its kind in the home embroidery market
- 360° Motorized rotation
- Embellish your projects using beads, yarn, cording and ribbons
- Holds up to 26 feet (8 m) of beads, yarn, cording and ribbons
- Easily adjusted to work with various widths of ribbon

Four free designs are included with the *creative* Embellishment Attachment. Visit creativate.com to access 250+ free designs in the Design Catalog.

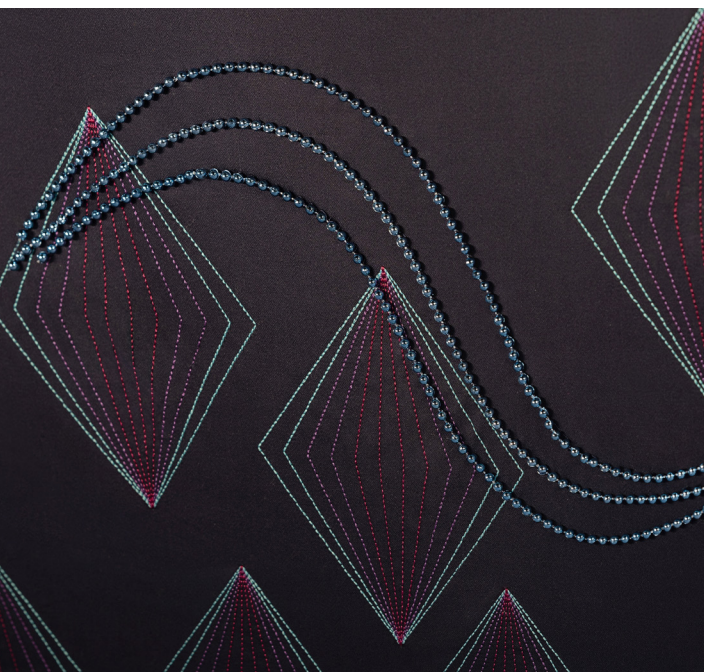



creative RIBBON EMBROIDERY ATTACHMENT



A true innovation in the home embroidery machine. *creative* ribbon embroidery attachment will guide and stitch down ribbon in embroidery mode. Adding ribbon to your embroidery designs has never been easier!

- 360° Rotation
- Holds up to 26 feet (8 m) of ribbon
- Easily adjusted to work with different ribbon widths.

821463096

creative icon 2, creative icon, creative performance 950



EMBROIDERY/SENSORMATIC FREE-MOTION FOOT



820671096

J 1, 3 L

The Sensormatic Free-Motion Foot is used for stippling and free-motion embroidery. The foot allows for greater visibility for both stippling and free-motion embroidery.

When sewing free-motion at a low speed the presser foot will raise and lower with each stitch to hold the fabric on the stitch plate while stitch is being formed. At higher speed, the presser foot floats over the fabric while sewing.

OPEN TOE SENSORMATIC FREE-MOTION FOOT



820976096

J 1, 3 L

The Open Toe Sensormatic Free-Motion Foot is used for stippling and free-motion embroidery. The foot allows for greater visibility as the opening in front of the foot gives you an optimal view of your free-motion sewing and quilting. The open front and transparency of the foot with both vertical and horizontal markings, allows you to easily do stippling or follow a design on the fabric.

1. Thread your machine with a thread of your own choice.
2. Make sure the IDT system is disengaged.
3. Set your sewing machine in Sensormatic free-motion mode. The feed dogs will drop automatically.
4. Select the stitch you would like to use (straight stitch or zigzag stitch). The stitch length doesn't matter because when the feed dogs are dropped the fabric is no longer fed by the machine. You must feed (move) the fabric.
5. Stitch manually moving the fabric.

Note: When sewing in Sensormatic free-motion mode at a low speed the presser foot will raise and lower with each stitch to hold the fabric on the stitch plate while the stitch is being performed. At a higher speed, the presser foot floats over the fabric while sewing.



 
creative FELTING EMBROIDERY SET



With the PFAFF *creative* Felting Embroidery Set, you can create the most amazing felted embroideries. The effect is created when embroidering without threads but with a special needle that felt fibers together. The effect of the embellishment can be changed dramatically by using different types of fabric/wool.

Contents

- A. Felting Foot
- B. Felting Bobbin
- C. Felting Needle Plate Cover
- D. Five Felting Needles
- E. Screw

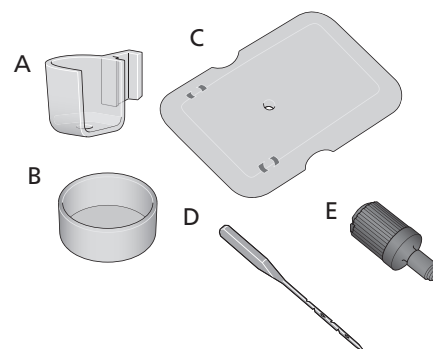

821068096

J L for embroidery machines

Fabrics

Just about any fabric can be felted using the *creative* Felting Embroidery Set. However, some fabrics produce more favorable results when embellished or laundered afterward. For optimal outcomes, we recommend using fabrics made from natural fibers, such as wool and wool roving.

Fabrics with a napped or textured surface are ideal, as they adhere well to natural fiber, napped, or mixed fiber bases. Avoid synthetic fabrics with "wash and wear" types of weaves and finishes that have a smooth surface.

Since results can vary depending on the fabric, always test on a scrap piece before starting your project.

Hooing

When embroidering with the felting needles, no threads are used. The fabric is hooped with the right side facing down.

When embroidering free standing designs or when using wool roving, a water soluble stabilizer is needed.





 
Felting Techniques

Three designs are available for download from pfafl.com. Each design represents a felting technique, Free Standing, Single-Layer and Multi-Layer embroidery. These techniques are explained below.



Visit creativite.com to access 40 free felting designs in the Design Catalog. Additionally, over 150 felting designs are available with a paid CREATIVE membership.



1. FREE-STANDING EMBROIDERY

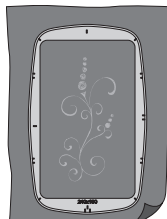

  2. SINGLE-LAYER EMBROIDERY

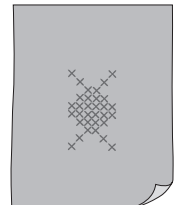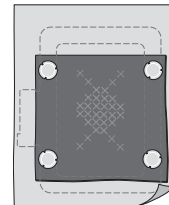

3. MULTI-LAYER EMBROIDERY



DYNAMIC SPRING FOOT



820991096

J1, 3
except quilt expression 4.0

68003167

L

The Dynamic Spring Foot is used for embroidery, and free-motion sewing or quilting. The foot is designed to give a great view so you easily can do stippling or follow a design in the fabric. The spring action keeps the fabric from lifting with the needle as the stitch is being formed, giving you more control of your sewing.

 
1. Disengage the IDT system and carefully loosen the small screw on the back of the presser foot holder.
2. Squeeze the Dynamic Spring Foot together. Guide the pin of the foot into the cross-hole of the presser foot holder. The arm of the foot should be placed behind the needle screw.
3. Tighten the screw.
4. Thread your machine.
5. Set the machine in the Dynamic Spring Foot 6D mode. The feed dogs will drop automatically.

Embroidery


In embroidery the presser foot will move up and down with the needle which gives a more even balance between top and bobbin thread.

Free Motion

1. Place the quilt under the presser foot.
2. Select a straight stitch and start sewing. You will manually guide your fabric. Your movement will determine the length of the stitch.
3. Move your quilt in a smooth motion, maintaining a consistent speed for even stitches.

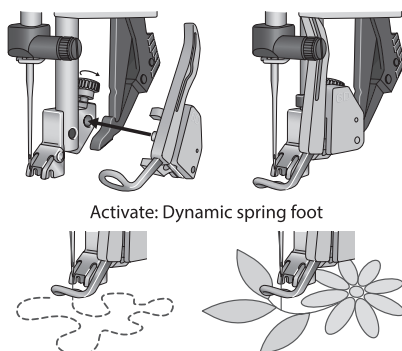

creative EMBROIDERY FOOT

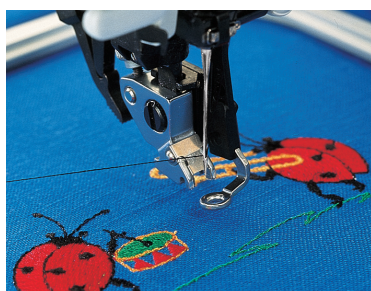 

820280096

creative 2170, 2144, 2140,
2134, 2124

The embroidery foot is developed especially for use with the embroidery functions of the PFAFF sewing and embroidery machines.



creative EMBROIDERY CUTWORK NEEDLE KIT



 
820945096

EFGJLK

for Embroidery machines

With the *creative* Embroidery Cutwork Needle Kit set you can easily create cutwork embroidery. This kit will help you get started!

Contents: INSPIRA™ Cutwork Needles, Multipurpose Tool/ Button Reed, CD with instructional video, embroidery designs, more tips and inspiration to get you started!

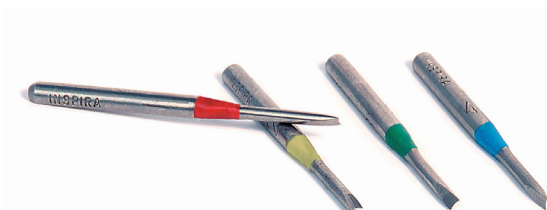

creative EIGHT SPOOL THREAD RACK



821161096

JL

Snap onto top of machine and features pins for up to eight spools of thread. Thread pins are numbered for embroidery color changes.

creative EIGHT SPOOL THREAD RACK HOLDERS

821171096

L

Already own the PFAFF *creative* Eight Spool Thread Rack and have just bought a *creative icon* then no problem. These holders will allow you to attach the eight spool thread rack to the back of the machine. The increased working height allows you to see the spools of thread even when the lid is open.





SERGER/OVERLOCK

Do you love to sew? Do you enjoy working with all of today's wonderful fabrics and trims? Do you want the results to be as perfect as the best ready-to-wear? Then you need a PFAFF serger/overlock! It's the ideal complement to your sewing machine.

 
For more information, go to pfaff.com or visit your nearest authorized PFAFF dealer.



admire™ 1000



admire™ 3000

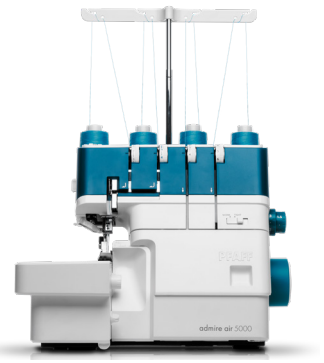

admire™ air 5000



admire™ air 6000



admire™ air 7000



hobbylock™ 2.5



coverlock™ 3.0



coverlock™ 4.0



OVERLOCK FEET KIT

 
 
 


821283096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

Expand the capabilities of your PFAFF *admire*TM air 7000/6000 Overlock Machine with the Overlock Feet Kit.

1. Gather fabric with ease using the Gathering Foot
2. Add elastic to garments and control the amount of contraction with the Elastic Foot
3. Sew invisible hems or apply lace with the Blind Hem and Lace Foot
4. Create and insert piping into home dec projects effortlessly with the Piping Foot
5. Stabilize and prevent seams stretching with the Taping Foot.

Note: A single layer of fabric may also be gathered by placing it under the foot and adjusting the stitch length, differential feed and needle tension to the desired fullness.

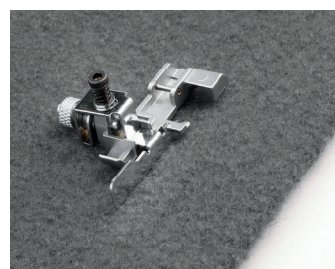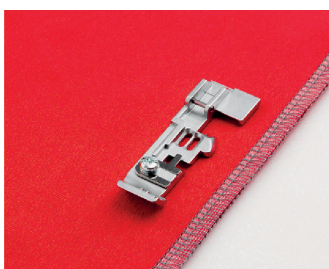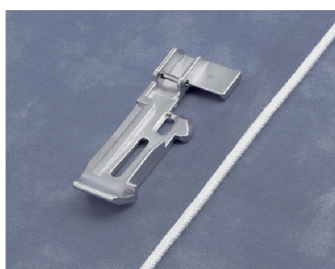

CORDED WAVY EDGE FOOT



 
821443096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

Sewing a decorative wavy edge is easy with the Corded Wavy Edge Foot. The curvy, softly ruffled edge is a perfect finish for bridal veils, figure skating costumes, ballet skirts, crafts and more.

Note: For best results, use fabric with stretch. For fabric with no stretch, cut on the bias.

1. Set the machine for a 3-thread rolled edge.
2. Snap on the Corded Wavy Edge foot.
3. Insert a 0.3 mm nylon fishing line (or similar) into the opening in the foot. The fishing line will be covered by the rolled edge.
4. Start to sew slowly. Make sure the fishing line is hidden in the rolled edge as you sew.

Tip: 40 wt. rayon embroidery threads in a contrasting color in the upper and lower loopers will give a shiny colorful edge.

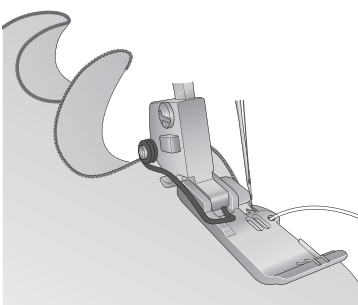

ELASTIC FOOT



821437096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Elastic Foot guides and stretches narrow elastic ($\frac{1}{4}$ " - $\frac{1}{2}$ ", 6 to 12 mm) as you sew it to fabric. It is great for sewing for active wear, lingerie and other elastic insertion techniques.

1. Set the overlock machine for the desired stitch.
2. Loosen the screw at the front of the Elastic Foot to release the tension on the roller. Insert the elastic into the foot.
3. Snap on the foot and pull the elastic until it reaches behind the foot.
4. Tighten the tension screw to stretch the elastic.
5. Turn the handwheel to sew the first few stitches to secure the elastic.
6. Place the fabric under the foot and sew both the elastic and the fabric together.
7. Check the stitch and adjust the tension if necessary.

Note: To adjust the stretch of the elastic:

- Turn the tension screw to the right for more stretch.
- Turn the screw to the left for less stretch.
- Be careful not to stretch the fabric while sewing.

BLIND HEM & LACE FOOT



821442096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Blind Hem Foot is perfect for sewing invisible hems and for applying lace. The hem is sewn, overcast and trimmed in one step.

Blind hem:

1. Set the overlock machine for the desired stitch.
2. Snap on the Blind Hem Foot.
3. Fold and press the hem in place. Turn the hem back on itself toward the right side of the fabric. Leave $\frac{1}{4}$ " (6 mm) of the edge exposed.
4. Place the hem under the foot with the fold against the guide on the foot.
5. Loosen the guide screw to adjust the guide so that the needle just catches the thread of the fold.
6. Guide the fabric as you sew, making sure the fold of the fabric is always against the guide.
7. Open the fabric and press lightly on the wrong side.
8. Test on a scrap piece of fabric before sewing your project.

Lace:

1. Set the overlock machine for the desired stitch.
2. Snap on the Blind Hem Foot.
3. Place the wrong side of the lace to the right side of the fabric.
4. Place under the foot with the fabric extending to the right of the guide. The header of the lace will be against the left side of the guide.
5. Loosen the guide screw to adjust the guide so the needle just catches the header of the lace.
6. Guide the fabric as you sew, making sure the header of the lace is always against the guide.
7. When finished, open the lace flat. Fold the seam allowance to the back of the fabric and press.
8. If using insertion lace, repeat on the other side of the lace.

PIPING FOOT



821438096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Piping Foot is perfect for inserting packaged piping into seams and on edges for a tailored finish. The trim is sewn between the two layers of fabric in one step. A groove under the foot helps guide the piping. You can also create your own piping for a custom finish. The Piping Foot makes it fast and easy to cover cording with fabric and to insert piping into seams for a professional look!

 
To stitch piping into a seam:

1. Set the overlock machine for the desired stitch.
2. Snap on the Piping Foot.
3. Place the piping along the seam line on right side of fabric. Place second piece of fabric on top with right sides together.
4. Put fabric and piping layers under the Piping Foot with the piping in the groove on the underside of the foot.
5. Sew piping into the seam.
6. The groove on the underside of the foot will guide the piping as you sew.

To make piping from your fabric:

1. Cut bias or crosswise grain strips wide enough to cover the cord plus the seam allowances.
2. Lay the cord on the wrong side of the fabric strip and fold the fabric over the cord.
3. Place the fabric and cord under the Piping Foot with the cord in the groove on the underside of the foot.
4. Sew. The groove will guide the cord as you sew.

BEADING FOOT

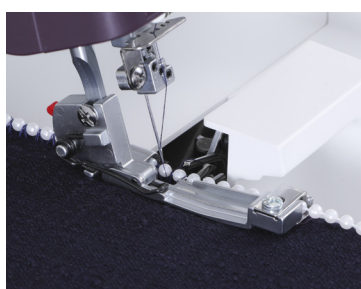

821441096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Beading Foot smoothly guides beads and pearls through a channel on the foot for easy application on garments or crafts.

1. Set the overlock machine for the desired stitch.
2. Pull the bead string through the channel on the underside of the foot.
3. Snap the Beading Foot onto the machine.
4. Turn the handwheel to sew the first two stitches to keep the beads in place.
5. Sew pearls onto the edge of fabric, cutting just a little bit of fabric as you sew. Or sew along the fold without cutting.

Note: The needle should penetrate about $\frac{5}{8}$ " (1.5 mm) from the fabric edge.

GATHERING FOOT



821439096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Gathering Foot is perfect for gathering a single layer of fabric or simultaneously gathering and stitching two layers of fabric. (The bottom fabric layer will be gathered and the top layer remains flat.) Suitable for light and medium weight woven fabrics.

1. Set the overlock machine for the desired stitch.
2. Snap on the Gathering Foot.
3. Insert the bottom fabric layer (fabric to be gathered) between the needle plate and the Gathering Foot all the way up to the cutter, with right side up.
4. Insert the top fabric layer in the opening of the Gathering Foot and even with the bottom layer right side down.
5. Lower the presser foot and sew. Guide the fabric against the fabric guide, letting the bottom layer feed freely to gather.

Tip: To increase the fullness of the gathering:

- Increase the needle thread tension.
- Set the differential feed to a higher number.
- Adjust the stitch length to a higher number.

A single layer of fabric may also be gathered by placing it under foot and adjusting stitch length, differential feed and needle thread tension to desired fullness.

TAPING FOOT



 
821440096
coverlock 4.0 and 3.0
hobbylock 2.5
admire air 7000, 6000

The Taping Foot is used to apply seam tapes to seams to prevent stretching. It is especially good for stabilizing shoulder seams. With this foot you can reinforce and construct seams in one step.

1. Set the overlock machine for the 4-thread overlock.
2. Place the seam tape in the guides on the foot.
3. Adjust the screw to fit the width of the tape.
4. Snap the taping foot onto the machine.
5. Sew the seam.

Note: Works best with ¼" (8 mm) seam tape.



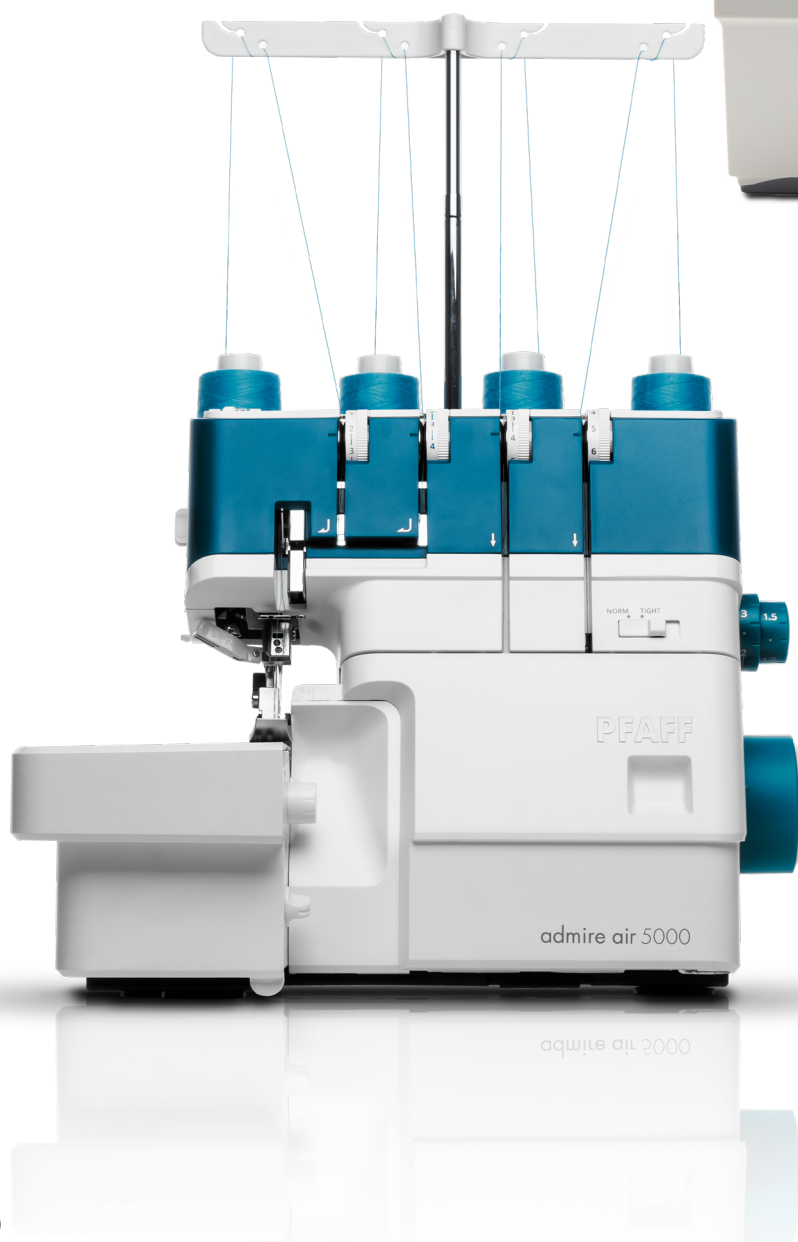

admire air 5000 Embellishment Feet Kit



 
821221096
admire air 5000

This kit contains six accessories, perfect for embellishment, garment sewing, home furnishings and more.

It Includes:

- Cording Foot (Type A) For yarn or nylon cord, to secure edges, hems, or create decorative wavy edges
- Cording Foot (Type B) To add cord or seam tape to prevent stretching
- 1/8" Piping Foot For sewing packaged piping into seams and onto edges for a tailored finish
- 3/16" Piping Foot
- Beading Foot & Guide Easily attach strings of beads or pearls to garments

admire air 5000 Utility Feet Kit

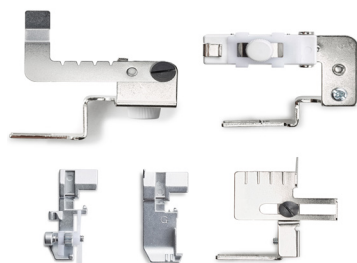


821220096
admire air 5000

This kit contains 5 accessories, perfect for utility sewing.

It Includes:

- Gathering Attachment Perfect for gathering one layer of fabric on to another
- Blind Hem Foot Creates an invisible hem, trims and overcasts in one step
- Gathering Foot Creates gathers in light to medium weight fabrics
- Elastic Gathering Foot Stretches and sews narrow elastic in place on to the edge of the fabric. Great for active wear, lingerie and other projects
- Cloth Guide For keeping seams straight while sewing and to flatlock seams when knife is lowered

 GATHERING FOOT

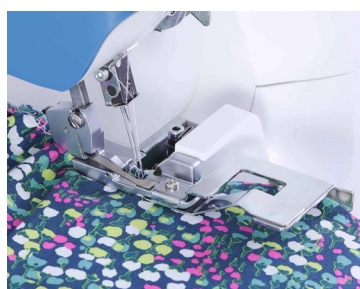

821365096
admire 1000



821117096
admire 3000

The Gathering Foot is perfect for gathering a single layer of fabric or simultaneously gathering and stitching two layers of fabric. (The bottom fabric layer will be gathered and the top layer remains flat.) Suitable for light and medium weight woven fabrics.

1. Set the overlock machine for the desired stitch.
2. Snap on the Gathering Foot.
3. Insert the bottom fabric layer (fabric to be gathered) between the needle plate and the Gathering Foot all the way up to the cutter, with right side up.
4. Insert the top fabric layer in the opening of the Gathering Foot and even with the bottom layer right side down.
5. Lower the presser foot and sew. Guide the fabric against the fabric guide, letting the bottom layer feed freely to gather.

Tip: To increase the fullness of the gathering:

- Increase the needle thread tension.
- Set the differential feed to a higher number.
- Adjust the stitch length to a higher number.

A single layer of fabric may also be gathered by placing it under foot and adjusting stitch length, differential feed and needle thread tension to desired fullness.

BLIND HEM FOOT



 
821366096
admire 1000



821119096
admire 3000

The Blind Hem Foot is perfect for sewing invisible hems. The hem is sewn, overcast and trimmed in one easy step.

1. Set the overlock machine for the desired stitch.
2. Snap on the Blind Hem Foot.
3. Fold and press the hem in place. Turn the hem back on itself toward the right side of the fabric. Leave ¼" (6 mm) of the edge exposed. (See illustration.)
4. Place the hem under the foot with the fold against the foot's guide.
5. Loosen the guide screw to adjust the guide so that the needle just catches the thread of the fold.
6. Guide the fabric as you sew, making sure the fold of the fabric is always against the guide.
7. Open the fabric and press lightly on the wrong side.
8. Test on a scrap piece of fabric before sewing your project.

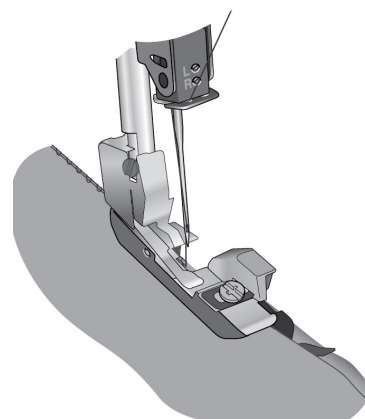

ELASTIC FOOT



821367096
admire 1000



821145096
admire 3000

The Elastic Foot guides and stretches narrow elastic as you sew it to fabric. It is great for sewing activewear, lingerie and other elastic insertion techniques.

1. Set the overlock machine for the desired stitch.
2. Loosen the screw at the front of the Elastic Foot to release the tension on the roller. Insert the elastic into the foot.
3. Snap on the foot and pull the elastic until it reaches behind the foot.
4. Tighten the tension screw to stretch the elastic.
5. Turn the handwheel to sew the first few stitches to secure the elastic.
6. Place the fabric under the foot and sew both the elastic and the fabric together.
7. Check the stitch and adjust the tension if necessary.

Note: To adjust the stretch of the elastic:

- Turn the tension screw to the right for more stretch.
- Turn the screw to the left for less stretch.
- Be careful not to stretch the fabric while sewing.

PIPING FOOT



821368096
admire 1000

The Piping Foot is perfect for inserting packaged piping into seams and on edges for a tailored finish. The piping foot also makes it fast and easy to cover cording with fabric and insert piping into seams for a professional finish.

 
To stitch piping into a seam:

1. Set the overlock machine for the desired stitch.
2. Snap on the Piping Foot.
3. Place the piping along the seam line on right side of fabric. Place second piece of fabric on top with right sides together.
4. Put fabric and piping layers under the Piping Foot with the piping in the groove on the underside of the foot.
5. Sew piping into the seam.
6. The groove on the underside of the foot will guide the piping as you sew.

To stitch piping into a seam:

1. Cut bias or crosswise grain strips wide enough to cover the cord plus the seam allowances.
2. Lay the cord on the wrong side of the fabric strip and fold the fabric over the cord.
3. Place the fabric and cord under the Piping Foot with the cord in the groove on the underside of the foot.
4. Sew. The groove will guide the cord as you sew.

BEADING FOOT

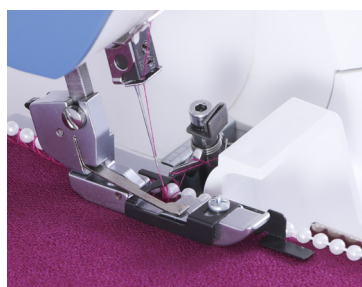


821369096
admire 1000

The beading foot smoothly guides beads and pearls through a channel on the foot for easy application on garments or craft projects

1. Set the overlock machine for the desired stitch.
2. Pull the bead string through the channel on the underside of the foot.
3. Snap the Beading Foot onto the machine.
4. Turn the handwheel to sew the first two stitches to keep the beads in place.
5. Sew pearls onto the edge of fabric, cutting just a little bit of fabric as you sew. Or sew along the fold without cutting.

Note: The needle should penetrate about $\frac{5}{8}$ " (1.5 mm) from the fabric edge.

 PIPING & BEADING FOOT

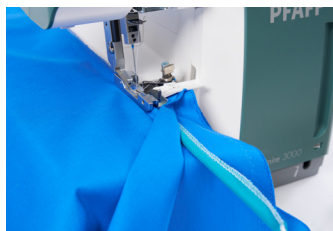

The piping and beading foot is ideal for inserting piping into seams or attaching strands of beads, pearls or sequins. The groove on the underside of the foot guides the piping as it is being made and sewn in. The open guide at the front of the foot easily guides strands of beads, pearls and sequins while stitching.

 
 
 
821118096
admire 3000

COVERSTITCH FEET KIT



- Increase your visibility while sewing with the clear coverstitch foot.
- Create beautiful decorative edges with the Flat Trim Foot and the Join and Fold Edging Foot.
- Straps and belt loops are effortless to create with the Strap and Belt Loop Foot.
- Add piping, corded tucks and even create wonderful decorative trims with the Piping Foot with Cording Guide.

821284096
admire air 7000, 6000,
coverlock 4.0, 3.0

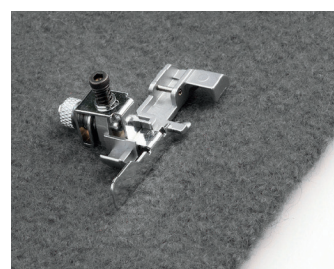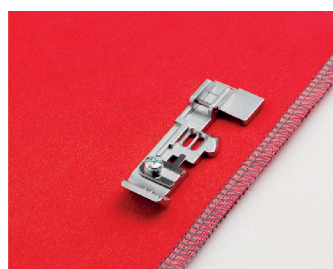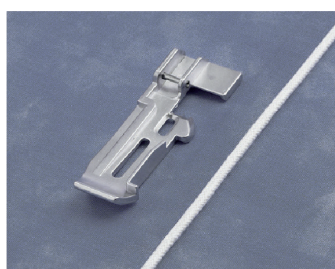


FLAT TRIM FOOT



With the Flat Trim Foot, you can easily add lace and trims to the top of the fabric with a coverstitch to create beautiful decorative edges and effects.

1. Set the machine for a Coverstitch wide.
2. Snap on the Flat Trim Foot.
3. Use default stitch settings. Adjust if needed.
4. Insert the fabric edge into the lower section on the left side of the foot. Slide the fabric under the foot and under the needles.
5. Insert the trim into the upper section on the right side of the foot. Slide the trim toward the back of the foot beyond the needles, leaving a short tail of trim behind the needles. while sewing.
Tip: Use tweezers to slide the fabric and the trim to the correct position under the needles.
6. Lower the needles into the trim and the fabric. Lower the Flat Trim Foot.
7. As you sew, hold the fabric in your left hand and the trim in your right hand.

 Tip: If you want a finished fabric edge, press a ¼" (6 mm) hem to the right side of the fabric before inserting the fabric into the Flat Trim Foot. The lace will cover the fabric raw edge when sewn in place.

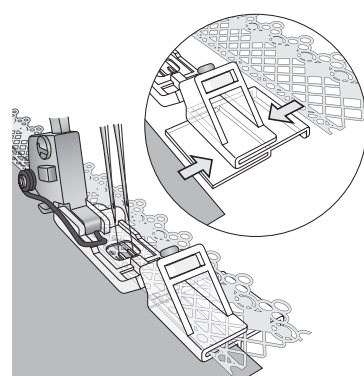



JOIN AND FOLD EDGING FOOT



Use the Join and Fold Edging foot to hem the fabric edge and attach lace at the same time.

1. Set the machine for Coverstitch, wide.
2. Use the default stitch settings. Adjust if needed.
3. Snap on the Join and Fold Edging foot.
4. Slide the raw edge of the fabric right side up, into the fabric guide (Illustration 1).
5. Slide the fabric to the back underneath the presser foot and the needles.
6. Insert the lace into the right lace guide and pull a lace tail about 1" (2.5cm) behind the foot (Illustration 2). Use tweezers if needed.
7. Lower the presser foot. Hold the fabric in your left hand and the lace in your right hand and start to sew.

  Note: Adjust the screw on the guide to adjust the stitch position if needed.

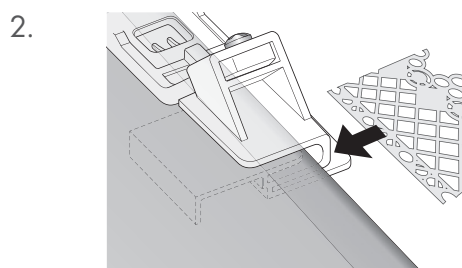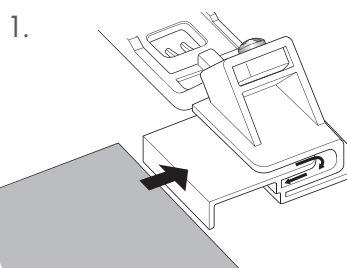


CLEAR COVERSTITCH FOOT




With the Clear Coverstitch Foot, you can see your fabric and marked line under the foot as you sew.

 1. Set the machine for a Coverstitch or a Chainstitch.
2. With a water soluble marker, draw a line on the fabric to mark the stitching line.
3. Snap on the Clear Coverstitch Foot.
4. Use default stitch settings. Adjust if needed.
5. Place the fabric under the presser foot and the needles. Start to sew into the fabric without chaining off first.
6. Use the red center marking on the foot as a guide as you follow a line drawn on the fabric. The Clear Coverstitch Foot will give you a great view of the marked line and of your fabric while sewing.

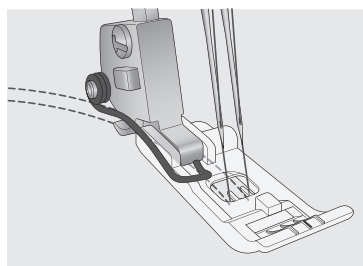

STRAP AND BELT LOOP FOOT


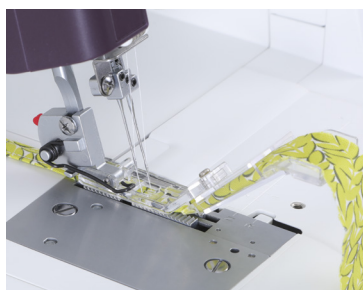 


With the Strap and Belt Loop Foot, create straps and belt loops easily using a cover stitch. Just put a strip into the foot and the strip is folded automatically and stitched in place.




1. Set the machine for a Coverstitch wide.
2. Use the default stitch settings. Adjust if needed.
3. Cut a strip of fabric, 1" (25 mm) wide.
4. Cut the top corner of the strip at a 45 degree angle to form a point.
5. Insert the cut angle into the guide, right side of the fabric facing up. Pull the strip through the slot and under the foot. Extend the tail of the strip behind the foot (Illustration 1). Use a tweezers to feed the strip into the foot if needed.
6. Snap the Strap and Belt Loop foot onto the machine.
7. Slide the strip approximately 2" (5 cm) behind the foot.
8. Lower the presser foot. Be sure both raw edges of strip are turned under before stitching. Sew the first few stitches. Stop and clip the needle threads close to the presser foot and continue sewing.
9. For even feeding, hold the fabric strip slightly below the first guide in the front of the foot (Illustration 2).
10. Sew at medium speed. Check the fabric as you sew to ensure proper feeding.



  Note: Sew the folded fabric strip without additional fabric underneath to create straps and belt loops or sew the folded strip onto another fabric for decorative effects.

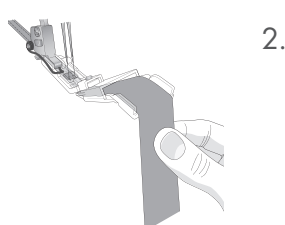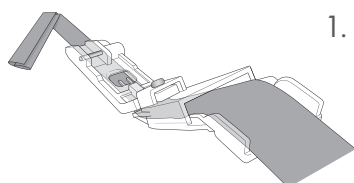

PIPING FOOT WITH CORDED GUIDE

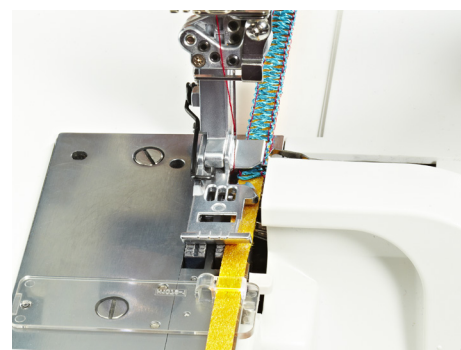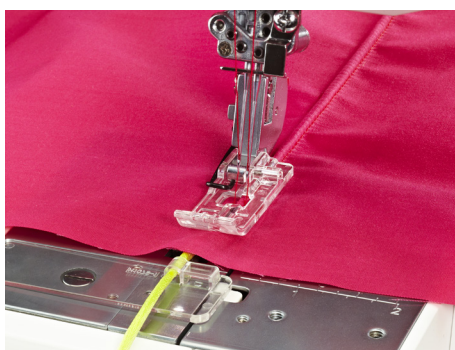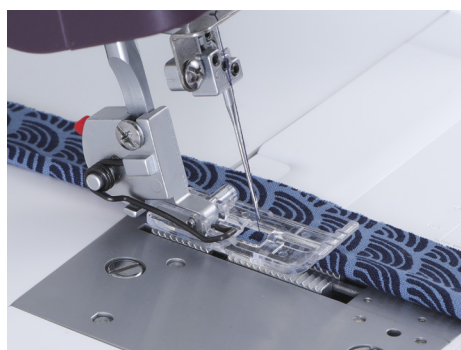   

With the Piping Foot with Cording Guide, you can create piping, corded tucks and decorative trims.



PIPING



 
CORDED TUCKS



DECORATIVE TRIM

PIPING

1.

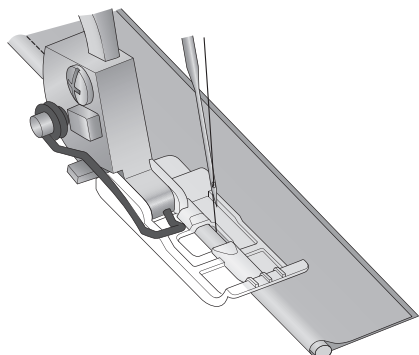


Easily create your own piping:

1. Set the machine for Chainstitch.
2. Use the default stitch settings. Adjust if needed.
Note: Although the machine recommends needle D, you will use needle E for this technique instead.
3. Snap on the Piping foot. (The cording guide is not used for this technique.)
4. Place the cord in the groove on the bottom of the foot and pull the cord tail behind the foot about 2½" (5 cm).
Note: ¼" - 5/8" (1.5 - 2.0 mm) cord can be used.
5. Cut a strip of fabric on the bias, 1" (25 mm) wide.
6. Wrap the fabric around the cord in the front of the foot. Slide the fabric under the foot.
7. Lower the presser foot and sew over the cord and fabric (Illustration 1). (Hold the cord behind the foot as you begin to sew.)

CORDED TUCKS

 
2.

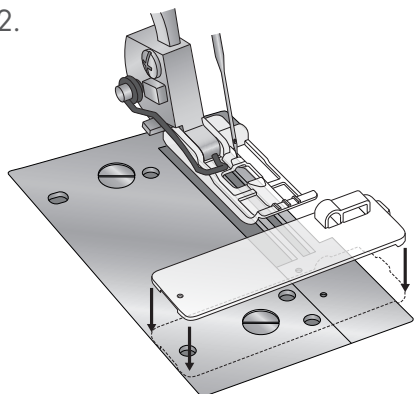

Achieve a trapunto effect when a coverstitch is sewn over a cord in the guide.


1. Set the machine for coverstitch, wide.
Note: Although the machine recommends needles C and E, you will use needles D and E for this technique instead.
2. Snap on the Piping Foot and attach the cording guide as illustrated (Illustration 2).
3. Insert the cord into the round hole of the cording guide and position it in the groove on the bottom of the Piping Foot.
4. Lay the fabric right side up on top of the cord. Slide it under the foot until it is underneath the needles (Illustration 3).
5. Lower the needles into the fabric. Lower the presser foot and start to sew at a medium speed. (Hold the cord behind the foot as you begin to sew.)

 3.

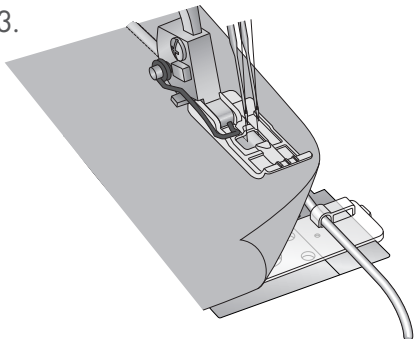

DECORATIVE TRIM

 4.

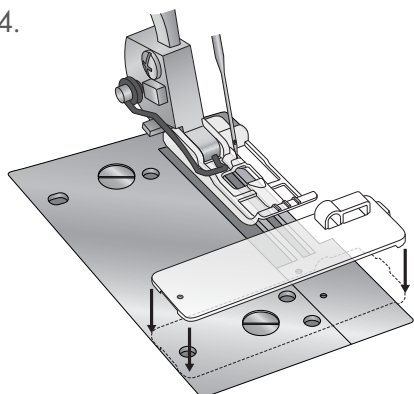


Use decorative thread and ribbons to create special effects and unique trims.

1. Set the machine for 3-thread ornamental flatlock stitch, wide with decorative thread in the loopers.
2. Snap on the standard presser foot and attach the cording guide as illustrated (Illustration 4).
3. Insert a ribbon 1/4" (6 mm) wide right side down into the rectangular opening in the guide.
4. Place the ribbon under the presser foot to the right side of the needle, leaving a 2" (5 cm) tail behind the foot.
5. The needle should go down into the machine just beyond, not into, the edge of the ribbon (Illustration 5).
6. Sew over the ribbon to make a decorative trim.

Tip: Make your decorated ribbon long enough to cut it in three pieces, then braid (Illustration 6).

 
5.

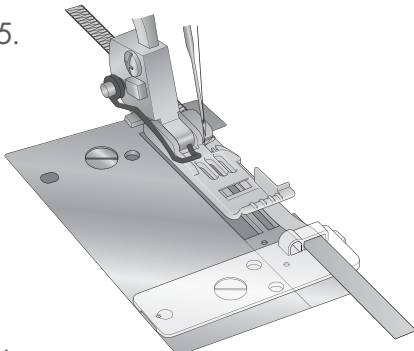

6.



 COVERSTITCH HEMMER ATTACHMENT

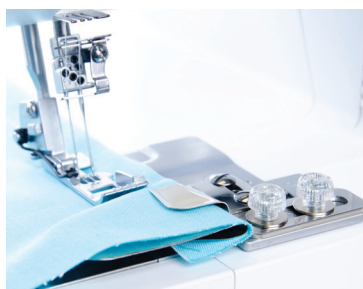

821264096

coverlock™ 4.0 and 3.0
admire™ air 7000, 6000



The Coverstitch Hemmer Attachment is used to turn under 1" (25 mm) of fabric, creating a perfectly straight hem without the need for lots of pressing.

Recommended fabric: Woven (light and medium) fabrics and stretch (light and medium) fabrics.

1. Set the machine for coverstitch either wide, narrow or triple with stitch length 3.0. Place the attachment plate on the machine. Place the two screws in the opening and screw the attachment plate in place.
2. Place the hemmer on the attachment plate and adjust the hemmer to the far right. Secure the hemmer in place with the two thumb screws and washers.
3. Fold under a 1 inch (25 mm) hem of fabric and finger press the first few inches in place.
4. Slide the fabric right side up into the hemmer from the right-hand side so that the hem curls under the attachment.
5. Raise the presser foot and pull the fabric under the foot and straight back 1 - 2" (2 - 3 cm) behind the needle. Lower the presser foot and turn the hand wheel to make a few stitches to secure the stitching in the fabric.
6. Sew a few stitches to see if the coverstitch is in desired position. To change the stitch position, loosen the thumb screws and move the hemmer the left to reach the desired needle position. Test sew a sample before sewing your project.
7. Keep the fabric turned under when feeding into the attachment to ensure the fabric will roll under when sewing.

Tips & Hints

1. If free-arm is available on machine, it will make sewing a continuous / circular hem even easier.
2. Increase the stitch length up to 4.0 if you have heavier fabric or when crossing a seam.
3. When crossing a seam give the fabric some extra help when it feeds through the hemmer guide.

■ ■ ■ LUGGAGE



PFAFF SERGER ROLLING CASE



821458096

Designed To Safely Store And Easily Transport Your Machine

- Padded interior protects machine from dust and damage
- With four 360° casters and a telescoping handle, traveling is easy
- Convenient storage inside and out
- Size: 20.5" x 16.5" x 20"
- Cool Grey polyester twill exterior fabric

PFAFF SMALL MACHINE ROLLING CASE



821459096

The PFAFF Small Roller Bag safely transports both the machine and accessories with convenient storage and elegant design.

- Padded interior protects machine from dust and damage
- With four 360° casters and a telescoping handle, traveling is easy
- Convenient storage inside and out
- Size: 24.5" x 15" x 19.5"
- Cool Grey polyester twill exterior fabric

PFAFF LARGE MACHINE ROLLING CASE



821460096

The PFAFF Large Roller Bag safely transports both the machine and accessories with convenient storage and elegant design.

- Padded interior protects machine from dust and damage
- With four 360° casters and a telescoping handle, traveling is easy
- Convenient storage inside and out
- Size: 30" x 16" x 20"
- Cool Grey polyester twill exterior fabric

CREATIVE EXPECT LUGGAGE SET



821475096

Safely transport and store both your PFAFF creative expect 350 Sewing & Embroidery Machine and accessories with ample storage and elegant design.

- Made with premium fabric
- With extension handle and rollers, transportation is easy
- Embroidery luggage contains a rear strap, making it easy to attach to the machine bag
- Includes large pockets for accessory storage



EMBELLISHMENT SAMPLER KIT

 


821330096

The PFAFF Embellishment Attachment Sampler Kit provides samples of various yarn, beads, cording, and ribbons to allow consumers to try these on the new embroidery unit (12 feet / 3.7 meters of each). Also includes a link to a free design!

- 4mm white beads
- 3mm black cording
- 6mm organza ribbon
- 10mm organza ribbon
- 6mm satin ribbon
- 10mm satin ribbon
- Chenille Yarn

QUILTING KIT

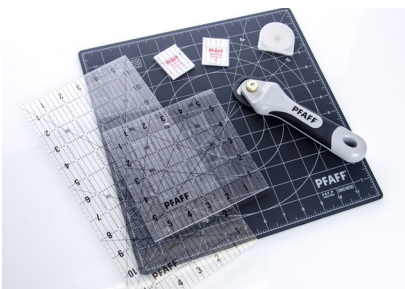

821332096

The PFAFF Quilting Kit provides a premium assortment of must-have accessories for quilters.

- Rotating self-healing cutting mat (12" x 12")
- Rotary cutting tool + replacement blades
- Ruler set (6" x 12" & 6" x 6")
- PFAFF Needles:
 - Universal 80/12 5-pack
 - Assorted Quilting 5-pack

BOBBIN WINDER



821376096

J, L

Time Saving - Easily wind bobbins away from you machine.

- Easy, one-touch bobbin winding with auto shut-off when the bobbin is full
- Portable compact Bobbin Winder allows you to easily take it anywhere
- Power Adapter (included) or battery-operated
- Custom designed for use with PFAFF Bobbins



SCISSORS

PFAFF scissors are specially curated for any type of thread and fabric cutting in your sewing process. Each scissor has a specific task and helps achieve a more professional finish

For more information, go to [pfaff.com](https://www.pfaff.com) or visit your nearest authorized PFAFF dealer.





821288996

3.5" / 8.9 CM CURVED EMBROIDERY

- Curved blades for hard-to-reach areas.
- Extra-fine sharp point for close cuts and to ensure better accuracy.



821286996

4" / 10.2 CM MICRO TIP EMBROIDERY

- Great for snipping tiny hard-to-reach places, poking through fabric, snipping tiny tight threads
- Extra-fine sharp point for close cuts and to ensure better accuracy.



821287996

4" / 10.2 CM CURVED MICRO TIP EMBROIDERY

- Great for snipping tiny hard-to-reach places, poking through fabric, snipping tiny tight threads
- Curved blades help protect your projects
- Extra-fine sharp point for close cuts and to ensure better accuracy.



821289996

4.5" / 11.4 CM EASY SNIP

- Spring action allows both left-handed and right-handed people to use
- Perfect for people with ailments that prevent them from using normal thread scissors.
- Eliminate those accidental snips of the fabric.
- Thin Curved Blade – allows you to get as close as you want without snagging, jabbing or poking your work.



4.5" / 11.4 CM OPPOSABLE CURVED TWEEZER

- Easy Operation - Squeeze to open and let go to close.
- Perfect tool for holding your fabric or thread without having to keep the pressure on the tweezers.
- Excellent choice for many needle arts and craft projects, and other situations that require a controlled hold of fine objects in place.

821290996



6" / 15.2 CM DOUBLE CURVED EMBROIDERY

- The double-curved design allows comfortable hand positioning above work in the embroidery hoop or at the sewing machine.
- The curved blades allow safe controlled cuts ensuring no snagging or gouging of fabric.

821291996



821292996

6" / 15.2 CM RIGHT HAND APPLIQUÉ

- ½" duckbill to provide a high degree of precision that makes it possible to trim around edges with ease.
- Perfect tool for trimming appliqué and stabilizer from the back of your embroidery as well as cutting close to your seams.



821293996

6" / 15.2 CM LEFT HAND APPLIQUÉ

- True left-handed scissors put your view on the correct side of the cutting blade.
- ½" duckbill to provide a high degree of precision that makes it possible to trim around edges with ease.
- Perfect tool for trimming appliqué and stabilizer from the back of your embroidery as well as cutting close to your seams.



821297996

6" / 15.2 CM APPLIQUÉ SCISSOR

- Perfect tool for trimming fabric edges and threads closely, accurately and quickly.
- Razor sharp edges and tips allow you to cut along the entire length of the blade, all the way to the tip.



821294996

6" / 15.2 CM SAFETY STILETTO

- Compact storage with power lock screw design.
- Remove fine stitches and use as a guide for holding or pushing fabric up to the needle.



6" / 15.2 CM SEAM RIPPER

- Extra sharp blade cuts through unwanted stitches easily.
- Screw-lock handle for easily replacing blades.

821296996



8" / 20.3 CM BENT TRIMMER

- Bent handle design holds fabric flat.
- Long cut ideal for patterns, seams or long cuts.
- Sharp edge cuts multiple layers.
- Ergonomic, left- or right-handed shears make cutting large projects easy and pain-free.

821295996





NEEDLES

No matter what type of project you're sewing, PFAFF has the right sewing machine needle for the job. Be sure to change your needle every 6-8 hours or type of fabric to achieve optimal sewing results. The below icon is a helpful reminder.

For more information, go to pfaff.com or visit your nearest authorized PFAFF dealer.



 


134R TITANIUM

821349096 (size 100/16 - 10 pack)

821352096 (size 110/18 - 10 pack)

The titanium coating resists adhesives, improves needle wear and penetration of densely woven fabrics.

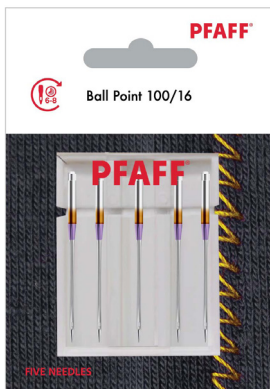

BALL POINT

821300096 (size 70/10 - 5 pack)

 
821301096 (size 80/12 - 5 pack)

821302096 (size 90/14 - 5 pack)

821356096 (size 100/16 - 5 pack)

821303096 (Assorted - 5 pack)

Designed to slide between the yarns of knit fabrics without snagging due to the rounded tip.

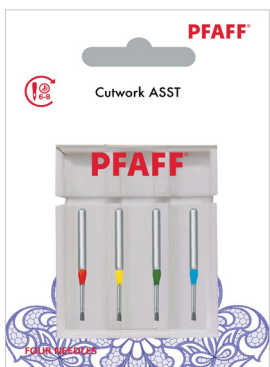


CUTWORK

821206096 (Assorted - 4 pack)

Create beautiful cutwork and reverse appliqué designs quickly and easily, without any tedious trimming.



 For optimal performance, PFAFF® recommends changing your needle every 6-8 hours of sewing and/or type of fabric.

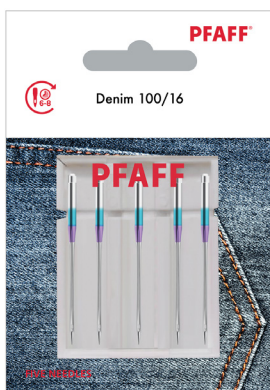

DENIM

- 821354096 (size 70/10 - 5 pack)
- 821290096 (size 80/12 - 5 pack)
- 821291096 (size 90/14 - 5 pack)
- 821292096 (size 100/16 - 5 pack)
- 821293096 (size 110/18 - 5 pack)
- 821208096 (Assorted - 5 pack)

Reduces breakage and skip stitches due do reinforced blade with the rounded tip and tapered end.



EMBROIDERY (TITANIUM)

- 821198096 (size 80/12 - 5 pack)
- 821297096 (size 90/14 - 5 pack)

Guard against excess friction allowing trouble-free embroidery and decorative stitching.



 
EMBROIDERY

- 821295096 (size 80/12 - 5 pack)
- 821296096 (size 90/14 - 5 pack)
- 821197096 (Assorted - 5 pack)

Guard against excess friction allowing trouble-free embroidery and decorative stitching.



For optimal performance, PFAFF® recommends changing your needle every **6-8 hours of sewing and/or type of fabric.**

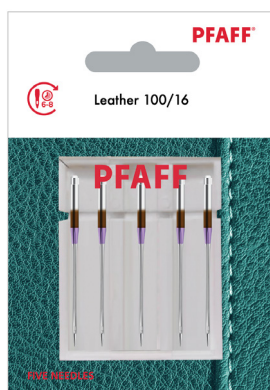

LEATHER

 
821304096 (size 80/12 - 5 pack)

821200096 (size 90/14 - 5 pack)

821305096 (size 100/16 - 5 pack)

821306096 (size 110/18 - 5 pack)

Cuts through leather and other heavy non-woven imitation leathers and suedes without creating large holes due to the needles wedge shape slightly sharp cutting point.

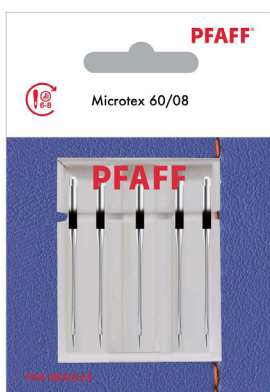

MICROTEX

821307096 (size 60/08 - 5 pack)

821308096 (size 70/10 - 5 pack)

821309096 (size 80/12 - 5 pack)

821310096 (size 90/14 - 5 pack)

821202096 (Assorted - 5 pack)

Perfect for microfibers, polyester and other synthetic fabrics. This needle is indicated for topstitching and precision quilt piecing due do very slim acute point.



OVERLOCK

821311096 (size 80/12 - 5 pack)

821199096 (size 90/14 - 5 pack)

Designed specifically for overlock stitching.



QUILTING (TITANIUM)

821314096 (size 80/12 - 5 pack)

821315096 (size 90/14 - 5 pack)

Allows easier fabric penetration and helps eliminate skipped stitches with a special tapered tip of the needle.



 
QUILTING

821312096 (size 80/12 - 5 pack)

821313096 (size 90/14 - 5 pack)

821201096 (Assorted - 5 pack)

Allows easier fabric penetration and helps eliminate skipped stitches with a special tapered tip of the needle.

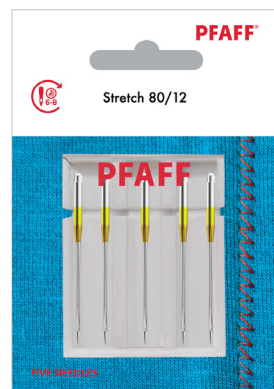

STRETCH

821343096 (size 80/12 - 5 pack)

821207096 (size 90/14 - 5 pack)

Perfect for sewing through stretch fabrics, with the rounded point to pierce through thicker fabrics.



For optimal performance, PFAFF® recommends changing your needle every **6-8 hours of sewing and/or type of fabric.**



TOPSTITCH

821317096 (size 80/12 - 5 pack)

821196096 (size 90/14 - 5 pack)

821318096 (size 100/16 - 5 pack)

Achieve perfectly straight stitch lines for heavy or multiple threads with the long eye of the needle.



TWIN DENIM

821353096 (4.0mm - size 100/16 - 1 pack)

Create two rows of stitches simultaneously and uses two spools of thread and one bobbin thread.

Reduces breakage and skipped stitches due to reinforced blade with the rounded tip and tapered end.



TWIN EMBROIDERY

821358096 (2.0mm - size 75/11 - 1 pack)

Create two rows of stitches simultaneously and uses two spools of thread and one bobbin thread.

Large eye and rounded point provide trouble-free embroidery and decorative stitching.

 


TWIN STRETCH

821204096 (2.5mm - size 75/11 - 1 pack)

821205096 (4.0mm - size 75/11 - 1 pack)

Creates a dual stitch through stretch fabric with a rounded tip of the needle to pierce through thicker fabric.

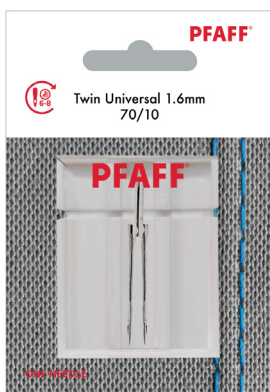

TWIN UNIVERSAL

821361096 (1.6mm - size 70/10 - 1 pack)

821285096 (1.6mm - size 80/12 - 1 pack)

821286096 (2.0mm - size 80/12 - 1 pack)

821203096 (2.5mm - size 80/12 - 1 pack)

821288096 (3.0mm - size 90/14 - 1 pack)

821289096 (4.0mm - size 80/12 - 1 pack)

821287096 (4.0mm - size 90/14 - 1 pack)

821357096 (4.0mm - size 100/16 - 1 pack)

 
Create two rows of stitches simultaneously and uses two spools of thread and one bobbin thread.




TWIN WING

821362096 (2.5mm - size 100/16 - 1 pack)

For beautiful hem stitches, a wing needle punches a hole into your fabric while the sewing machine stitches around the piercing.



 For optimal performance, PFAFF® recommends changing your needle every **6-8 hours of sewing and/or type of fabric.**

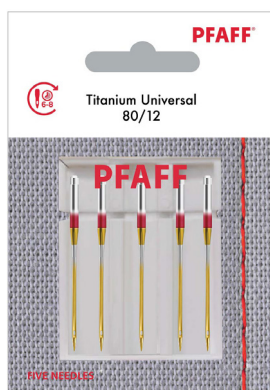

UNIVERSAL (TITANIUM)

821328096 (size 80/12 - 5 pack)

821329096 (size 90/14 - 5 pack)

Easily slips through weave of knits and woven fabric with rounded tip and tapered end.



UNIVERSAL

821345096 (size 60/08 - 5 pack)

821319096 (size 70/10 - 5 pack)

821324096 (size 70/10 - 5 pack)

821194096 (size 80/12 - 5 pack)

821344096 (size 80/12 - 5 pack)

821325096 (size 80/12 - 10 pack)

821320096 (size 90/14 - 5 pack)

821326096 (size 90/14 - 10 pack)

821321096 (size 100/16 - 5 pack)

821327096 (size 100/16 - 10 pack)

 
821322096 (size 110/18 - 5 pack)

821346096 (size 120/21 - 5 pack)

821323096 (Assorted - 5 pack)

821195096 (Assorted - 10 pack)

Easily slips through weave of knits and woven fabric with rounded tip and tapered end.

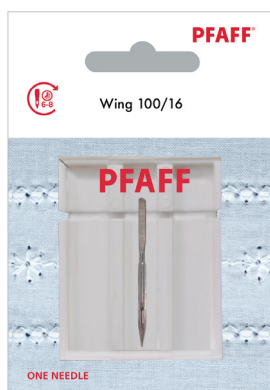

WING

821298096 (size 100/16 - 1 pack)

821299096 (size 120/21 - 1 pack)

For beautiful hem stitches, a wing needle punches a hole into your fabric, while the sewing machine stitches around the piercing.



STABILIZERS



AQUA MAGIC STABILIZER 15" X 10 YD



821423096

PFAFF Aqua Magic is a soft fabric-like stabilizer that dissolves easily in water. Aqua Magic is ideal for any application that requires 100% of the stabilizer to be dissolved away. Because PFAFF Aqua Magic stabilizer rinses away completely, it will leave your project soft and pliable, not stiff.

Reccomended Uses: For free standing lace, emblems and 3-D appliqué pieces, cut Aqua Magic stabilizer large enough to fit in hoop (hoop dimension plus at least 1" on all four sides).

1. To remove the stabilizer when the embroidery is complete, cut away all large pieces.
2. Submerge embroidery in plenty of very warm to hot water. Move around continuously in hot water bath to remove any remaining fibers.
3. Keep submerged for at least 10 minutes in hot water bath. Rinse thoroughly with very warm water. Repeat process if needed for dense stitching or heavier fabrics.
4. Place item on flat surface until thoroughly dry

WHISPER WEB MESH STABILIZER 12" X 10 YD



821400096

PFAFF Whisper Web Mesh is a semi-sheer polyester stabilizer that is very soft yet strong. It is used as a permanent backing and is ideal for delicate fabrics as well as light colored garments and fabrics. The translucent nature of this stabilizer eliminates the bulk, stiffness and shadowing characteristic of other types of permanent stabilizers. Whisper Web Mesh stabilizer is perfect for applications that will be close to the skin.

1. Cut a piece of Whisper Web Mesh stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Hoop Whisper Web Mesh stabilizer and fabric without stretching the fabric as you hoop.
3. Stitch the embroidery.
4. Trim the excess stabilizer away as close to the outer edge as possible.
5. Follow normal care instructions for washing and drying, according to fabric type.

TEAR-A-WAY STABILIZER BULK 15" X 25 YD



821397096

PFAFF Tear-A-Way is a crisp medium weight tear away. It is easy to hoop 1-2 layers of stabilizer based on stitch count or fill density of embroidery. The crisp quality makes it easy to tear away and leaves little residue around stitch edges.

1. Cut a piece of Tear-A-Way stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Place stabilizer on wrong side of fabric. Hoop fabric and stabilizer as together. Tighten hoop, pulling fabric and stabilizer equally.
3. Stitch the embroidery.
4. Tear away excess stabilizer

AQUA MAGIC STABILIZER WIDE 20" X 10 YD



821424096

PFAFF Aqua Magic is a soft fabric-like stabilizer that dissolves easily in water. Aqua Magic is ideal for any application that requires 100% of the stabilizer to be dissolved away. Because PFAFF® Aqua Magic stabilizer rinses away completely, it will leave your project soft and pliable, not stiff.

Recommended uses: For free standing lace, emblems and 3-D appliqué pieces, cut Aqua Magic stabilizer large enough to fit in hoop (hoop dimension plus at least 1" on all four sides)

1. To remove the stabilizer when the embroidery is complete, cut away all large pieces.
2. Submerge embroidery in plenty of very warm to hot water.
3. Move around continuously in hot water bath to remove any remaining fibers.
4. Keep submerged for at least 10 minutes in hot water bath.
5. Rinse thoroughly with very warm water. Repeat process if needed for dense stitching or heavier fabrics.
6. Place item on flat surface until thoroughly dry

TEAR-A-WAY WIDE STABILIZER 20" X 10 YD



821399096

PFAFF Tear-A-Way is a crisp medium weight tear away. It is easy to hoop 1-2 layers of stabilizer based on stitch count or fill density of embroidery. The crisp quality makes it easy to tear away and leaves little residue around stitch edges.

1. Cut a piece of Tear-A-Way stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Place stabilizer on wrong side of fabric.
3. Hoop fabric and stabilizer as together. Tighten hoop, pulling fabric and stabilizer equally.
4. Stitch the embroidery.
5. Tear away excess stabilizer

TEAR-A-WAY STABILIZER 15" X 10 YD



821396096

PFAFF Tear-A-Way is a crisp medium weight tear away. It is easy to hoop 1-2 layers of stabilizer based on stitch count or fill density of embroidery. The crisp quality makes it easy to tear away and leaves little residue around stitch edges.

AQUA MAGIC PLUS STABILIZER 15" X 10 YD



821404096

PFAFF Aqua Magic Plus is a water soluble stabilizer with the addition of a water dissolvable adhesive. PFAFF Aqua Magic Plus is a fabric-like stabilizer with a thin layer of adhesive that allows you to "stick" your fabric to the stabilizer in the hoop. It is great for small items or fabrics that should not be hooped. Because PFAFF Aqua Magic Plus stabilizer rinses away completely, it will leave your project soft and pliable, not stiff.

1. Cut Aqua Magic Plus stabilizer large enough to fit in hoop (hoop dimension plus at least 1" on all four sides).
2. Hoop with paper side up, score release paper with an X using a needle or pin. Peel back paper to expose the tacky surface. Place article to be embroidered, with right side up, in center of exposed sticky surface.
3. To make yarn or ribbon scarves, lay the ribbons and yarns on the sticky surface and then cover with a water dissolvable film prior to embroidering.
4. When completed, cut away outer edge and submerge in plenty of warm to hot water.
5. Move item around continuously to remove all stabilizer fibers.
6. Keep submerged in hot water bath for 10 minutes.
7. Rinse thoroughly with very warm water. Repeat process if needed for dense stitching or heavier fabrics.
8. In case of hard water, use a water softener or distilled water for improved dissolvability.
9. Place item on flat surface until thoroughly dry

TEAR N WASH STABILIZER 15" X 10 YD



821433096

PFAFF Tear-N-Wash is a medium weight tear away stabilizer with the unique ability to wash out the remaining pieces after laundering. Tear-N-Wash leaves little or no visible signs of backing but, retains support in the embroidered area.

Recommended Uses: Recommended uses: Perfect to use as backing stabilizer for embroidery on towels, blankets, woven shirts, robes, sportswear and scarves. Once washed, tiny fibers are locked inside underside of embroidery stitches to give permanent support to embroidery.

Important: Do not use as a topper or as a stabilizer for lace, 3-D appliqué, eyelet, cutwork or badge embroideries.

1. Cut piece of Tear-N-Wash large enough to fit in hoop (hoop dimension plus at least 1" on all four sides).
2. Place stabilizer on the wrong side of fabric. Hoop fabric and stabilizer as together.
3. Tighten hoop, pulling fabric and stabilizer equally.
4. Embroider, remove from hoop.
5. Tear away as much of the stabilizer as possible, most of remaining pieces will wash out in the laundry.
6. A tiny amount of residual fibers may remain around edges.

WHISPER WEB WIDE 20" X 10 YD



821402096

Whisper Web Mesh is a semi-sheer polyester stabilizer that is very soft yet strong. It is used as a permanent backing and is ideal for delicate fabrics as well as light colored garments and fabrics. The translucent nature of this stabilizer eliminates the bulk, stiffness and shadowing characteristic of other types of permanent stabilizers. Whisper Web Mesh stabilizer is perfect for applications that will be close to the skin.

1. Cut a piece of Whisper Web Mesh stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Hoop Whisper Web Mesh stabilizer and fabric without stretching the fabric as you hoop.
3. Stitch the embroidery.
4. Trim the excess stabilizer away as close to the outer edge as possible.
5. Follow normal care instructions for washing and drying, according to fabric type.

TEAR-A-WAY FAST/EASY STABILIZER 15" X 10 YD



821434096

Tear-A-Way Fast & Easy is a temporary stabilizer that can be used as a backing for most woven fabrics. A slightly textured surface helps to grip the fabric and reduce movement during the hooping process. Fast & Easy Tear-A-Way stabilizer is manufactured from recycled cotton fibers, offering an eco-friendly alternative to traditional tear-a-way products. This stabilizer is very easy to remove and leaves very little fiber residue even when multiple layers are used.

1. Cut a piece of Fast & Easy Tear-A-Way stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Hoop fabric and stabilizer together, pulling them taut in the hoop.
3. Float additional layers of Fast & Easy Tear-A-Way stabilizer between the hoop and the machine for additional support for designs with a high stitch count.
4. Stitch the embroidery.
5. Gently tear to remove the excess stabilizer.
6. If multiple layers are used, remove one layer at a time to avoid distortion of fabric and/or stitches.

TEAR-A-WAY LIGHT STABILIZER 15" X 10 YD



821395096

PFAFF Tear-A-Way Light is for light stitch count designs such as, redwork or outline designs. Use up to 3 layers of Tear-A-Way Light in the hoop. Recommended for all woven fabrics and any stable material.

1. Cut a piece of Tear-A-Way stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Place stabilizer on wrong side of fabric. Hoop fabric and stabilizer as together.
3. Tighten hoop, pulling fabric and stabilizer equally.
4. Stitch the embroider
5. Tear away excess stabilizer

 
WHISPER WEB MESH LIGHT STABILIZER 12" X 10 YD



821401096

PFAFF Whisper Web Mesh is a semi-sheer polyester stabilizer that is very soft yet strong. It is used as a permanent backing and is ideal for delicate fabrics as well as light colored garments and fabrics. The translucent nature of this stabilizer eliminates the bulk, stiffness and shadowing characteristic of other types of permanent stabilizers. Whisper Web Mesh stabilizer is perfect for applications that will be close to the skin.

1. Cut a piece of Whisper Web Mesh stabilizer large enough for the selected hoop (hoop dimension plus at least 1" on all four sides).
2. Hoop Whisper Web Mesh stabilizer and fabric without stretching the fabric as you hoop.
3. Stitch the embroidery.
4. Trim the excess stabilizer away as close to the outer edge as possible.
5. Follow normal care instructions for washing and drying, according to fabric type.

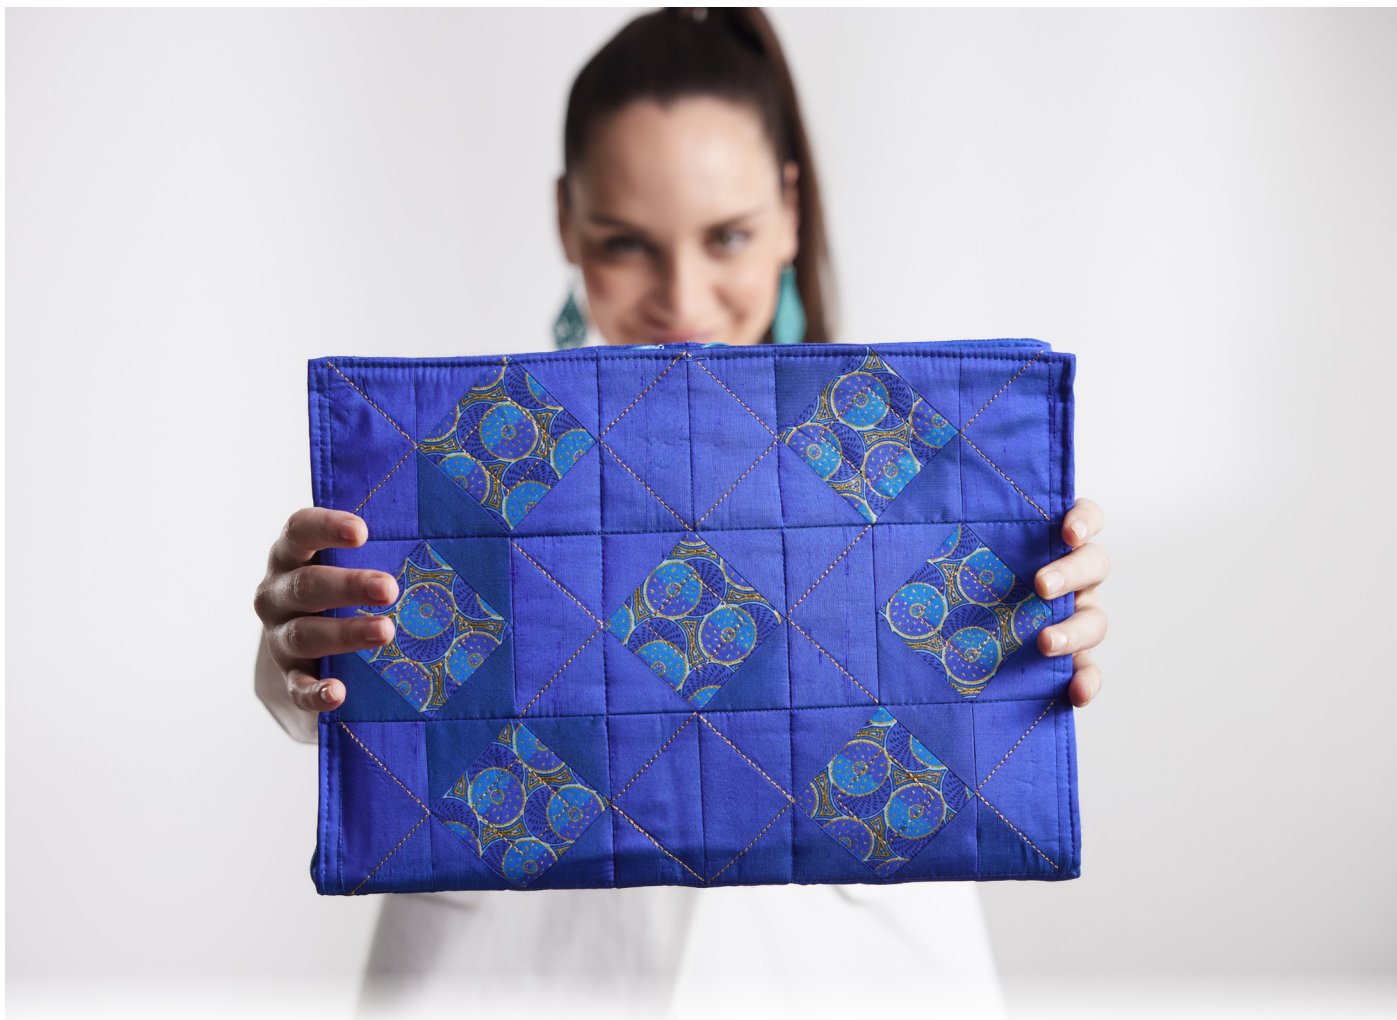

WHAT IS THE SECRET TO A PERFECT SEAM?

The fabric is fed from both the top and bottom at the same time with any stitch, no matter the stitch length or width. The result is absolutely no fabric slipping or shifting, which is perfect for quilting. Only PFAFF machines have the original IDT system built right onto the sewing machine!



Fabric feeds evenly from both the top and bottom.



For more information go to [pfaff.com](https://www.pfaff.com)

Printed for SVP Sewing Brands LLC, 300 2nd Ave S, Nashville, TN 37201.

PFAFF, CREATIVE, CREATIVE ICON, CREATIVE PERFORMANCE, PERFORMANCE, PERFORMANCE ICON, IDT, VARIMATIC, HOBBY, TIPTRONIC, EXPRESSION, QUILT EXPRESSION, CREATIVE EXPRESSION, SELECT, STRETCH & JEANS, CLASSICSTYLE, FREESTYLE, QUILT AMBITION, AMBITION, AMBITION ESSENTIAL, PASSPORT, SMARTER BY PFAFF, CREATIVE SENSATION, CREATIVE VISION, MYSEWNET, and CREATIVE are the exclusive trademarks of Singer Sourcing Limited LLC or its Affiliates. © 2026 Singer Sourcing Limited LLC or its Affiliates. All rights reserved.

ITEM #821387096



2022-1A