

BERNINA

made to create

Bernina 5 & 7 Series Sewing Station by Koala Studios

Assembly Instructions

Your Sewing Station Includes:



Cabinet Top
Work Surface



Back Panel



Bottom Shelf



Screwdriver



Caps



5 Shelf Supports



Universal Leg Set



Cam-lock Pins and Wood Dowels



6 Caster Washers



6 Casters

Assembling Your Sewing Station

NOTE: Do not install cam-lock pins until instructed. Use the packing material from the box to protect your new Sewing Station from damage or scratches. Legs are symmetrical and interchangeable.



Step 1



Step 2

Lay out your leg pieces as shown. Position legs so the top section (*with holes*) are facing each other.

Install three cam-lock pins on each leg toward the back as shown. Install and secure the cam-lock pins by tightening them flush to the surface into their designated holes on both legs, as shown. (*Cam-lock pins in back holes only*).



Step 3

The 3-front unused cam-lock pin holes should be plugged with supplied caps.




Step 4

Add washers to casters as shown in inset image. Tilt each leg up and install casters to bottoms of leg. Tighten with wrench. *(Casters are optional).*



Step 5

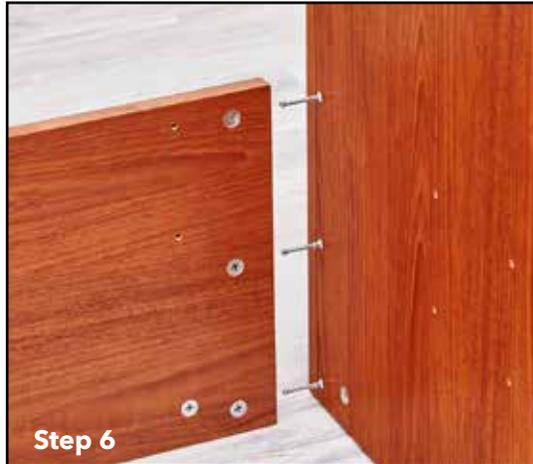

Step 6



Step 7

(5) When attaching the back panel, rotate all cam-locks on both legs and back panel into the open position with arrows facing cam-lock pins *(see inset)*. **(6)** Position back panel between both legs. **(7)** Guide cam-lock pins into the holes. Use screwdriver to turn the cam-locks clockwise one half turn to lock together.



Step 8

Insert cam-lock pins into the holes on remaining leg and lock together by rotating cam clockwise one half turn so arrow points away from pin.



Step 9

When finished locking the 6 cams, flip the full assembly over with assistance so that the casters are on the floor. *(Lock casters to avoid movement).*




Step 10

Lay the top section upside down on the included packing foam (or other soft surface) to avoid damage. Install wood dowels. (Do not install wood dowels in the legs).



Step 11

Position cam-lock pins as shown.

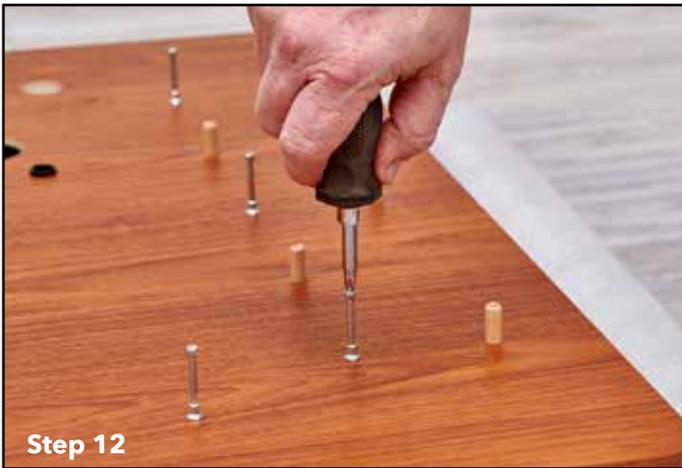

Step 12

Secure the cam-lock pins by tightening them flush to the surface as shown.



Step 13

Cam-lock pin locations.



Step 14



Step 15

(14) In preparation for positioning the cabinet top, make sure the top cam-locks on both legs, and back panel are opened (*arrows pointing up*) to receive the cam-lock pins. (See Steps 5 & 6). Align cam-lock pins and wood dowels into both legs and back panel. **(15)** With assistance, invert the top and align the cam-lock pins and wood dowels with the corresponding holes atop both the left and right legs and back panel as shown.



Step 16

With the cabinet top section fitted flush to the legs and back panel, lock all the top cam-locks on both legs and back panel by tightening the cam-locks one half turn clockwise, until arrow points away from pin.



Step 17

Insert shelf supports into holes in the legs and back panel.



Step 18

Insert bottom shelf onto the shelf supports as shown.



Step 19

When installing the optional Slimline LED Table Lamp, Model U35107 (*sold separately*), insert the base of the lamp into the lamp grommet, as shown.



Step 20

Completed Sewing Station.

BERNINA
made to create

Contact your authorized Bernina retailer for information.

Koala
studios
Fine Sewing Furniture Custom Built For You

KL- BSSTL_10/18