

This article describes how to move the printing to the left or the right on a Zebra LP2824 printer. Begin with Solution 1, and if that does not correct the issue, then continue with Solution 2.

## **Solution 1: Reset printer width setting**

1. In TRS, click on POS->Options, if prompted enter your security code.
2. Click the button labeled "Send Special Code Now".
3. In the input box on the next screen, enter:  
q448  
Click "Ok"
4. Try printing a label again. If the problem persists, continue with Solution 2 below.

## **Solution 2: Change margins in TRS**

1. In TRS, click on POS->Options, if prompted enter your security code.
2. Click on the printing tab.
3. In the Label printer area where it says Eltron/Zebra Label Horizontal Offset (in dots), you need to increase the number to move the printing to the right or decrease the number to move it to the left. It's a good idea to use numbers in increments of 10 and then when you get it close you can use smaller numbers to adjust if finer.

Typically most people are trying to move the printing to the right and normally the number is set to 0 in that case you would set it to 10 and try to print and then go from there.