

BASIC Sewing Machine Cover #1



Front

Cover
20" (W) x 13" (H) x 8" (D)



Back



Front

Cover
20" (W) x 13" (H) x 8" (D)



Back

Sewing Machine Cover #1

A Main Body
1- 1/4 yards

B Panel Pockets
2/3 yard (panel)*

C Lining of Pockets
& Lining of Body
1-1/4 yards

Suggested: 1-1/8 yards Fusible Fleece

*Pocket size may vary depending on the finished size of Fabric 'A' Panel.

Prints as shown may not
be to exact scale.

BASIC Sewing Machine Cover #1

Please read all instructions carefully AND identify all fabrics before beginning.

All instructions include a 1/4" seam allowance and strips are cut selvege to selvege, unless stated otherwise.

1. Cut the following:

NOTE: This sewing machine cover finishes at 20" across the front, 8" front to back, and 13" tall. Measure your machine and reduce piece sizes as needed to fit your machine if desired.

Fabric A - Cut (2) 13-1/2" strips, subcut (2) 13-1/2" x 20-1/2" and (2) 8-1/2" x 13-1/2" pieces
Cut (1) 8-1/2" strip, subcut (1) 8-1/2" x 20-1/2" piece


Fabric B - Fussy cut 1/4" beyond outside edges of 2 panels to approximately 11-1/2" square

Fabric C - Cut (2) 13-1/2" strips, subcut (2) 13-1/2" x 20-1/2" pieces, (2) 8-1/2" x 13-1/2" pieces, and (2) 12" squares
Cut (1) 8-1/2" strip, subcut (1) 8-1/2" x 20-1/2" piece

Fusible Fleece - Cut (2) 13" strips, subcut (2) 13" x 20" pieces, (2) 8" x 13" pieces, and (2) 11" squares
Cut (1) 8" strip, subcut (1) 8" x 20" piece

2. Piecing Order:

1. Center a 13" x 20" fusible fleece on wrong side of each **Fabric A** 13-1/2" x 20-1/2" piece. Fuse in place. Repeat with 8" x 13" fusible fleece on wrong side of **Fabric A** 8-1/2" x 13-1/2" pieces, 8" x 20" fusible fleece on wrong side of **Fabric A** 8-1/2" x 20-1/2" piece, and fusible fleece 11" squares on wrong side of **Fabric B** 11-1/2" squares.

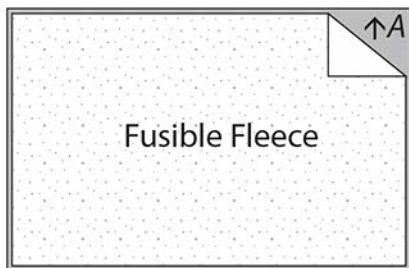


2. Quilt pieces from Step 1 as desired.

Arrows indicate orientation of directional prints, if used.


Letters in italics indicate wrong side of fabric.

Shading of diagrams may vary depending on fabrics used.

3. Arrange a quilted **Fabric B** 11-1/2" square piece right sides together centered on a **Fabric C** 12" square. Stitch around edges of **Fabric B** with 1/4" seam allowance, leaving a 4" opening on the bottom edge for turning.

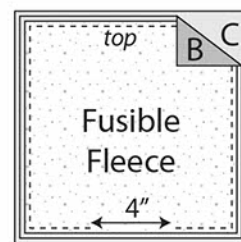


4. Trim seam allowance to 1/4". Trim corners to reduce bulk. Turn pocket right side out. Poke out corners. Turn in edges of opening. Press edges flat. Topstitch across the top edge of pocket (approximately 11" square).

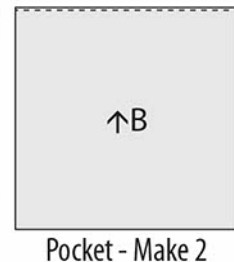

5. Repeat Steps 3-4 to make a second pocket.




6. Center a pocket on a quilted **Fabric A** 13-1/2" x 20-1/2" piece. Pin in place. Topstitch 1/8" from sides and bottom to secure pocket. Make a total of 2 Pocket Sections (13-1/2" x 20-1/2" unfinished).

Pocket Section
Make 2

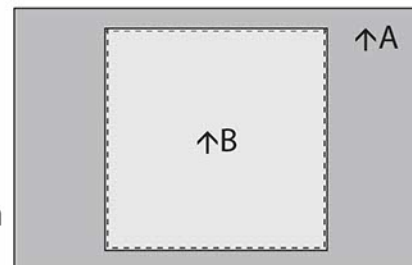


7. Sew the quilted **Fabric A** 8-1/2" x 20-1/2" piece lengthwise between the Pocket Sections to create the Top/Front Section (20-1/2" x 34-1/2" unfinished). Press seams open.

Top/Front Section
Make 1

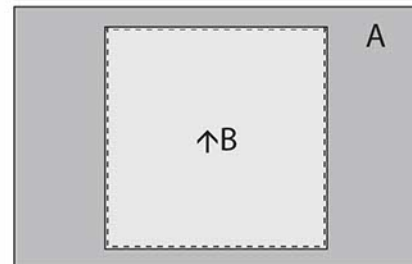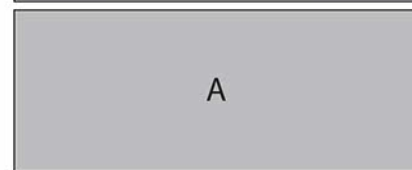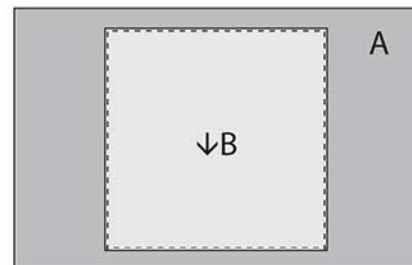


BASIC Sewing Machine Cover #1


8. Sew a **Fabric A** 8-1/2" x 13-1/2" piece to each side of the Top/Front Section as shown. Press seams open.

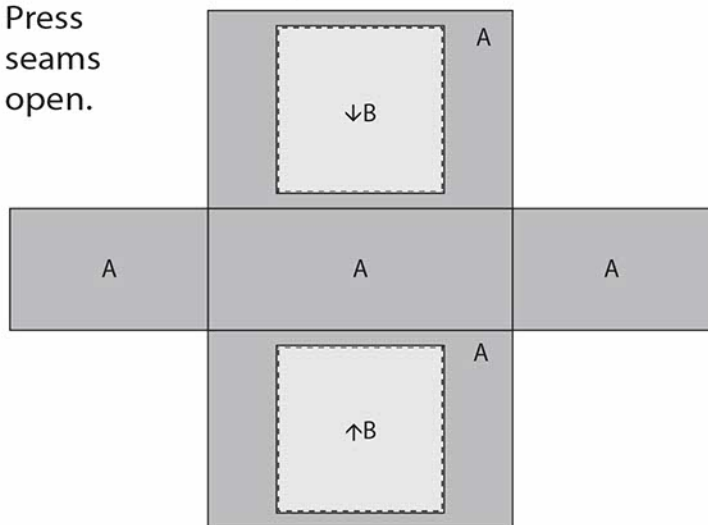


9. Sew the 4 side seams to create Sewing Machine Cover top. Press seams open.

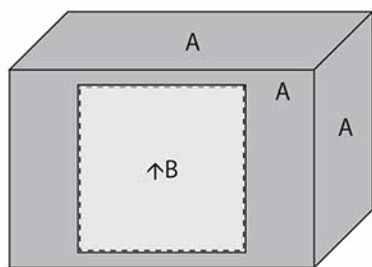


10. Referring to Steps 7-9, sew the same sized **Fabric C** pieces together to create lining.

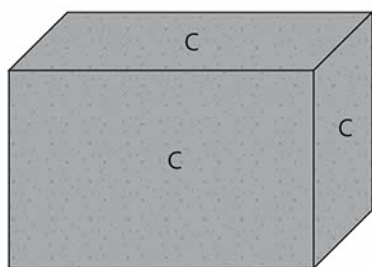


11. With **Fabric C** lining wrong side out and Sewing Machine Cover top right side out, slide top inside the lining. Align raw edges and seams.

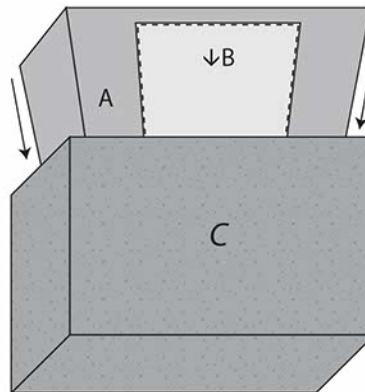

12. Sew around the raw edge with 1/4" seam allowance, leaving a 6" opening for turning.

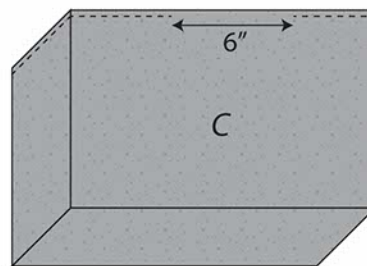

13. Turn right side out and tuck the lining inside the Sewing Machine Cover. Turn in edges of opening. Press bottom edge flat. Topstitch 1/8" around bottom edge. If desired, tack layers together at top corners. Sewing Machine Cover finishes at 20" across the front, 8" front to back, and 13" tall unless adjusted to fit your machine.

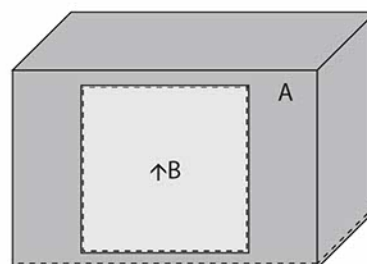

14. Place over sewing machine to prevent dust when machine is turned off. Enjoy!

Arrows indicate orientation of directional prints.

Letters in italics indicate wrong side of fabric.

Shading of diagrams

may vary depending on fabrics used.