

**FREE
PATTERN**

CAMELOT®

Freshly Made to bring your ideas to life.

 **Tea and Poetry** 

Sam Vale

Soft Shell Tablet Case (P-007)

by Michelle Lopez of Hypernoodle

Difficulty Level: Beginner

Finished Size: 10.25" x 8.5" x 0.5"



Exclusive Project Design by Michelle Lopez from Hypernoodle for Camelot Fabrics.
The direction of the fabrics in the digital imagery may not be accurate to the final product.



camelotfabrics.com
info@camelotfabrics.com

**FREE
PATTERN**


CAMELOT®

Freshly Made to bring your ideas to life.

**COLLECTION:
TEA & POETRY**

Soft Shell Tablet Case (P-007)

Fabric Requirements

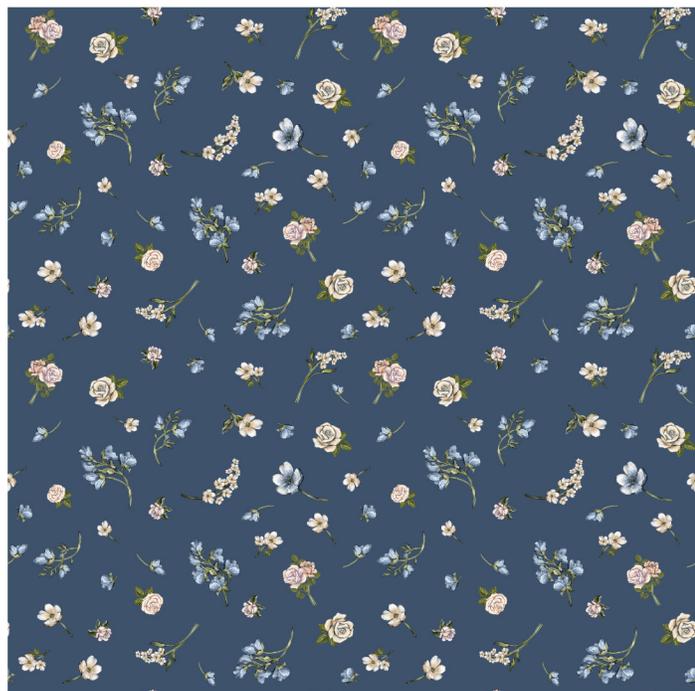

Fabric A: 49240604-02
1/2 Yard



Fabric B: 49240602-01
1/2 Yard

Additional Requirements

Double-Sided Fusible Foam
1/2 Yard

Fusible Cotton Interfacing
1/2 Yard

Fusible Fleece
4" x 4"

OTHER TOOLS & SUPPLIES

- 1 complete Kam Snap + Kam Snap Pliers or Press*
- Coordinating thread and of course your sewing machine!
- Basic sewing supplies:
 - Sewing machine & coordinating thread
 - Iron & pressing surface
 - Scissors & fabric shears
 - Measuring tape & straight edge
 - Fabric marker and quilting clips

* You can substitute a Kam Snap with Velcro if you wish; we recommend the "Iron On" type.

NOTES

This case will fit most "standard" sized tablets without a skin or with a slim skin, but if you'd like your tablet to fit to a different size, simply measure the dimensions of your tablet (with or without your skin, depending whether you'd like to keep the skin on when the tablet goes in the case) and add 1.5 – 2" to those dimensions, according to the desired snugness of the final fit.

CUTTING

Fabric A

- Cut (2) 11" x 9-1/2" rectangles
- Cut (1) Flap piece from the Tablet Case Template

Fabric B

- Cut (2) 11" x 9-1/2" rectangles & (1) 5-1/2" x 10" rectangle
- Cut (1) Flap piece from the Tablet Case Template


Fusible Foam

- Cut (2) 10" x 7-3/4" rectangles


Fuse the (2) Fabric A rectangles and the Fabric B Flap by placing them Right Sides down on your ironing surface and covering them with your cotton interfacing, glue side down. Press well to bond the layers and trim the excess interfacing.

Fuse the Fabric A Flap in the same manner, using Fusible Fleece.

ASSEMBLY

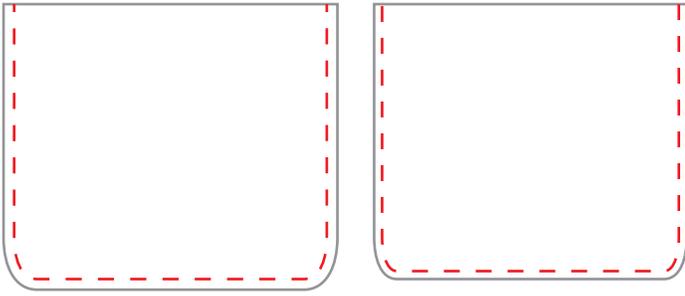


1. Sew the (2) Flap pieces, Right Sides together, with a 1/4" seam around the sides and bottom; leave the top edge open.
2. Trim the curved corners, turn the Flap Right Side out and press the seam.
3. Topstitch around the bottom & sides of the Flap with a 1/8" seam allowance.

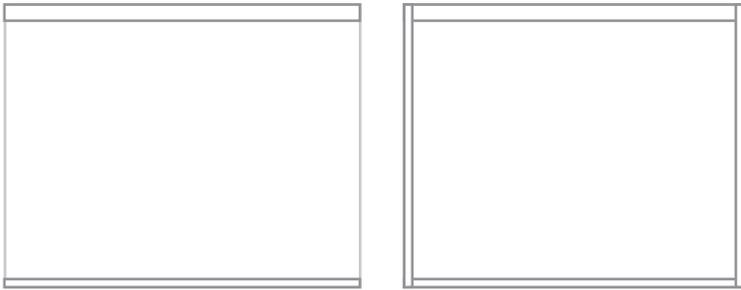

4. Turn & press a 1/2" fold, Right Sides together, along the top edges of all 11" x 9-1/2" rectangles (Fabrics A & B), and a 1/4" fold along the bottom edges.
5. Turn & press a 1/4" fold along both sides of each rectangle in the same manner.




6. Fold & press your 5-1/2" x 10" Fabric B strip lengthwise, Wrong Sides together, so that the long edges meet at the center of the strip.

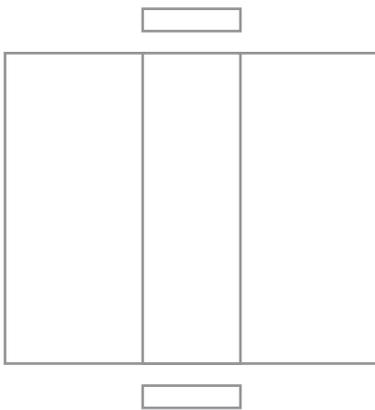

7. Center the Fabric B strip on (1) Fabric A rectangle as shown, with the strip's Wrong Side against the Shell's Right Side. Pin & topstitch in place with a 1/8" seam allowance, and trim any excess length from the strip.

8. Layer (1) 10" x 7-3/4" rectangle of fusible foam between the Fabric A rectangle which has the strip and (1) Fabric B rectangle, with their Wrong Sides inward. Press well to bond the layers.

Note: the foam will be a little smaller than the cotton pieces - this is correct.





9. Layer the second pair of Fabric A & B rectangles, with the second piece of foam between them. However, this time you'll insert the Flap between the foam & Fabric B, with its Fabric A side toward the outside (Fabric A rectangle) and its Fabric B side toward the inside (Fabric B rectangle).

Press the layers to bond them.

9. To miter your corners, first fold in each corner so that its diagonal fold line crosses through intersection of the creases from Steps 4-5. Then fold the fabric's edges along these pre-existing creases, overlapping the diagonal fold you just made.

Press the corners to smooth out any wrinkles.

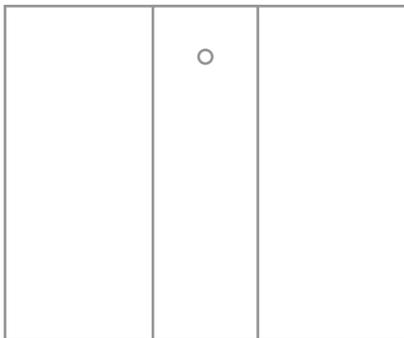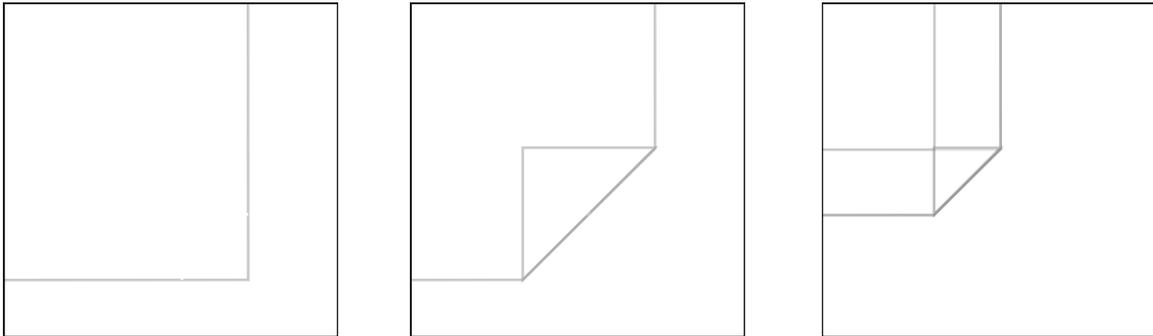


10. Mark the Kam Snap placement on Fabric B strip. The snap will be centered on the strip's vertical axis, about 3/4" from the fabric's top edge.

Install the base of your Kam Snap as directed by the instructions on the packaging of your snap press/pliers.

11. Topstitch along the top edges of the front & back units with a 1/8" seam allowance, to finish the edge and secure the Flap in place.

12. Place the front & back units together, Fabric B sides facing, and clip in place. Topstitch the (2) pieces together with a 1/8" seam allowance.

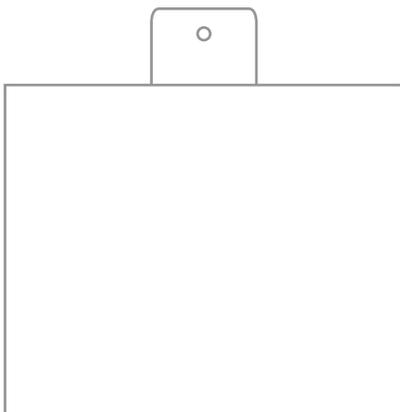

13. Fold the Flap over to its "closed" position and press it lightly with your iron, just enough so that the snap on the front piece makes a bump through the Flap.

Unfold the Flap and mark the placement of the snap's top half on its Fabric B side, directly over the bump.

14. Install the top half of your Kam Snap as directed by the tool's packaging, and you're done!

Tablet Case

(P-007)

