

## Magic Wand: Turning Satin



### Open the Artwork


- Open BERNINA Embroidery Software 8.
- Select Insert Artwork.
- Navigate to Libraries> Pictures> BERNINA 8 Pictures> Artwork.
- Open A\_East\_005.jpg.
- Open Color Film. There is now a placeholder for the artwork in Color Film.



### Process the Artwork

- Open the Auto-Digitize Toolbox.
- Select Magic Wand Block Digitizing.
- Click on the picture.
- In the Bitmap Artwork Preparation dialog box, under Processing Options, reduce the number of colors to four.
- Click OK.
- Click on each colored area of the picture to add turning satin stitches.
- Select Design> Optimize Color Changes to combine colors for a more efficient stitch out.
- In the dialog box that opens, select OK.
- Select File> Save As and name the file Magic Wand Block Digitizing.

### Notes:

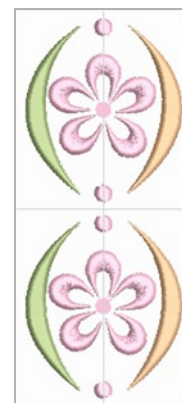

This new Magic Wand option makes it easy to create satin stitches that have multiple angles, accomplishing multiple tasks with one click!

## Magic Wand: Centerline




### Open the Artwork

- Select New.
- Select Insert Artwork.
- Navigate to Libraries> Pictures> Artwork> Centerline.
- Open Row of Houses.



### Selecting Hoop

- Right click on the Show Hoop icon.
- From the drop-down Machine choices, select BERNINA 5 series.
- Select the BERNINA Mega Hoop. Select Foot #26.
- Click OK.

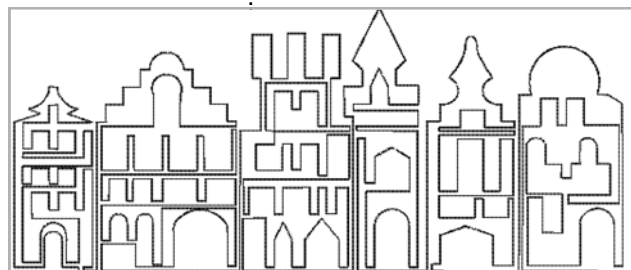

For scanned images, it is important that the colors be reduced to two colors—black and white. You may need to edit the pictures in Corel PhotoPaint.



## Processing the Artwork

- In the Auto-Digitize Toolbox, select Magic Wand Centerline.
- Click on the Artwork.
- In the Bitmap Artwork Preparation dialog box, there are two colors.
- Click OK.
- Zoom in on the picture and click on the line. You can right or left click, but make sure you click on the line.
- A double run continuous stitch is applied.
- Press Esc.
- Select File> Save As and name the file Magic Wand Centerline.
- Close the file.

## Magic Wand: Fill Without Holes



### Open the Artwork

- Select New.
- Select Insert Artwork.
- Navigate to Libraries> Pictures> BERNINA 8 Pictures> Artwork.
- Open A\_East\_006.jpg.

### Processing the Artwork

- In the Auto-Digitize Toolbox, select Magic Wand Fill Without Holes.
- Click on the Artwork.
- In the Bitmap Artwork Preparation dialog box, click OK.
- Select To Fit in the Zoom Toolbar (or press the 0 key).
- Click on each turquoise area of the butterfly.
- Repeat for the purple sections of the body and the antennae.
- Press Esc.
- Open Color Film.




### Editing the Design

- Press Esc.
- Click on the turquoise color chip in Color Film.
- Click on the Lacework Fill icon.
- Deselect the wings.
- Click on each purple area of the butterfly while holding the Ctrl key.
- Click on the Ripple Fill icon. Press Esc.
- Select each antenna with the Ctrl key.
- Click on Backstitch Outline.
- Click on Show Bitmaps to hide the picture.



### Notes:

*If the outline stitching added outlines in the middle of the picture instead along the black line, that means you clicked in a white area. You must click on a black outline. Select Undo and try again.*

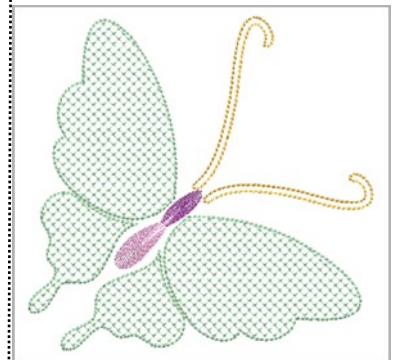

When Fill Without Holes is used, right clicking on the picture will add a second fill instead of an outline.



## Adding Outlines

- In Color Film, select the butterfly wings.
- In the Edit Toolbox, select Outlines and Offsets.
- Place a check mark by Object Outlines.
- Uncheck Offset Outlines if it is selected.
- Select the color of the butterfly wings from the drop-down color choices. You will find the butterfly colors at the end of the colors in the palette. Select the butterfly wing color.
- Outlines & Offsets dialog box has been updated to include lots of choices of Outline stitches.
- In the drop-down box by type, select Backstitch.
- Click OK.
- Save the file as, Magic Wand Fill Without Holes.

### Notes:

