

# Dog Placemat



## Supplies Needed

- 1 18" x 21" (45.72cm x 53.34cm) Fat Quarter\*
- 1 10" x 18" (25.4cm x 45.72cm) Fusible fleece batting


Finished Size: 10" x 17" (25.4cm x 43.18cm)

- Coordinating thread
- Basic sewing supplies
- Sewing machine
- Iron and pressing surface

\*Project made with these items from Walmart :: (items sold separately) WM-FQ22-PUPLV7 - FQ22 PUPLV HEARTS


# Before You Begin

Read all instructions before beginning project. Press fabric on cotton setting. Use a 1/4" (6.35mm) seam allowance and backstitch at the beginning and end of stitching. Make pattern by tracing and taping together; cut out. Note: For directional designs, another fat quarter may be needed; check before cutting.

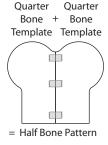

## Cutting

- 1. Fold fat quarter in half right sides together with long sides matching. Place the pattern on the fold and trace two as shown in Diagram A; cut out. **Note:** One is for the Placemat front and one is for the back.
- 2. Use one Placemat shape as a pattern to cut out the batting.
- 3. Following manufacturer's instructions, fuse the batting to the wrong side of the Placemat front.

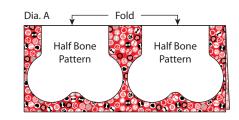



# Sewing

- 4. Pin the Placemat front to the back with right sides together and edges even. Begin sewing at the center of the bottom edge. Sew around the sides, stopping six inches before the beginning stitch to leave an opening for turning.
- 5. Turn Placemat right side out through the opening; smooth edges flat and press.
- 6. Pin opening closed and hand stitch.
- 7. Topstitch  $\frac{1}{4}$ " (6.35mm) around the edges to secure the batting.

# Finished Care Instructions

Machine wash cold water, gentle cycle. Do not bleach. Hang to dry.

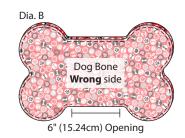

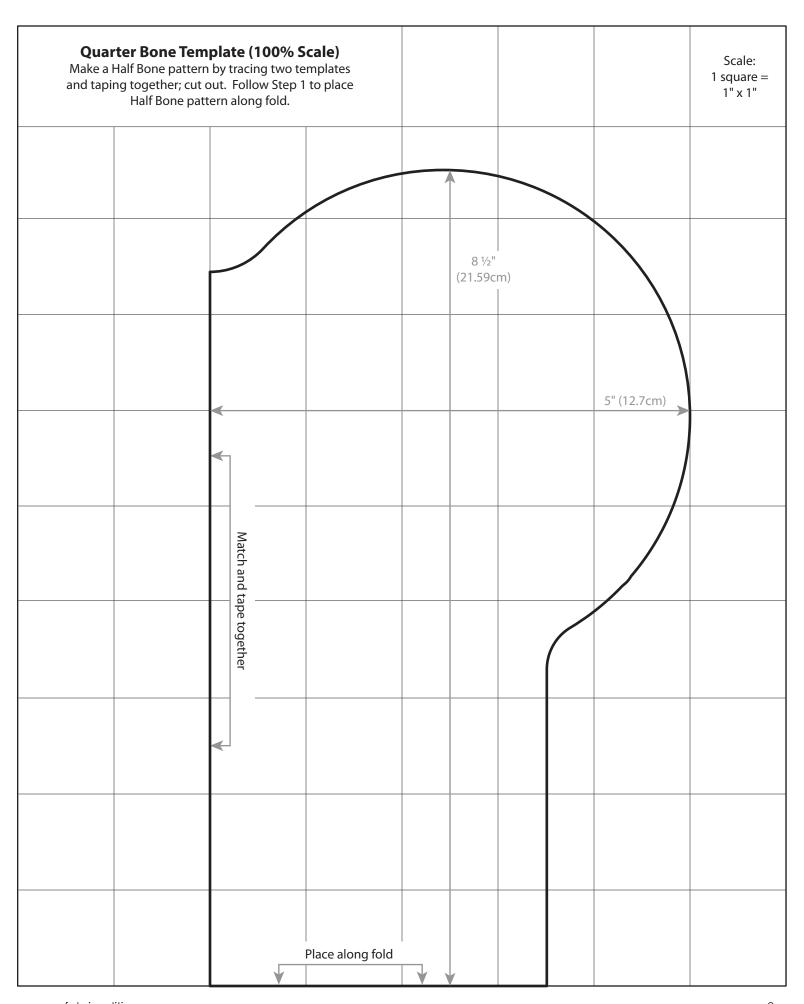

www.fabriceditions.com page 2