

Finished size: 10 ½" x 20"

## Supplies Needed

- Fabric Central® Delicate By-the-Yard:  
¾ yd *Gray Lace Flower*
- Fabric Central® Delicate Fabric Quarters:  
*Blue Bird Tonal, Citron Tonal, Gray Multi Hearts*
- Pellon Décor Bond - ⅔ yd (45" wide)
- Gray thread
- 2 Silver 1 ¼" D-rings
- CD for corner template
- Temporary fabric marker
- Rotary cutter, mat, and acrylic ruler
- Basic sewing supplies
- Sewing machine, zipper foot
- Iron, pressing surface

## Instructions

*Read all instructions before beginning project. Do not prewash fabrics. Before cutting, press fabrics with a dry iron on cotton setting. Use a ½" seam allowance and sew fabrics with right sides together (RST) unless otherwise noted.*

### 1. Cut the following:

*Gray Lace Flower:*

- 2 - 11 ½" x 21" (caddy front & back) (fussy cut pieces centering medallions, if desired.)
- 1 - 4" x 9" (short strap)
- 1 - 4" x 20" (long strap)

*Blue Bird Tonal:*

- 1 - 11 ½" x 11 ½" (pocket)

*Gray Multi Hearts:*

- 1 - 11 ½" x 11 ½" (pocket)

*Citron Tonal:*

- 1 - 11 ½" x 11 ½" (pocket)

*Décor Bond:*


- 1 - 11 ½" x 21" (caddy)
- 1 - 5 ¾" x 11 ½" (bottom pocket)
- 2 - 5 ⅞" x 11 ½" (top & middle pockets)



## Project Instructions Continued

2. Following manufacturer's directions, fuse Décor Bond 11 ½" x 21" to **wrong** side of *Gray Lace Flower* front. Layer caddy front and back **wrong** sides together, matching corners and edges. **Note:** Check that birds are flying right side up! Trace along curve of a CD at top corners; trim on drawn lines to round off (Dia. A).

Dia. A

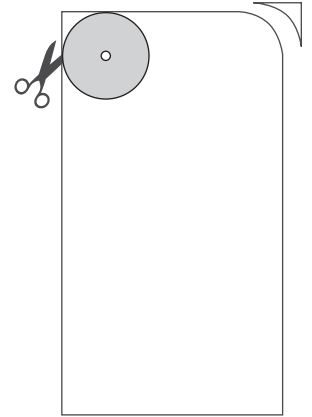


### 3. Pockets

- Fold the *Blue Bird Tonal* (bottom) pocket in half with **wrong** sides together; press. Open flat; match one long edge of Décor Bond 5 ¾" x 11 ½" rectangle to the crease; fuse. Fold pocket in half, enclosing the interfacing; press.
- For remaining pockets, fold in half with RST and sew along the long edges to make a tube; turn right side out. Press pocket flat with seam running along the bottom edge. Insert Décor Bond 5 ⅞" x 11 ½" rectangle inside the tube; fuse. Top and middle pockets should measure 5 ¼" x 11 ½".
- Topstitch ¼" from the top edge along all three pockets.
- Place *Blue Bird Tonal* pocket at bottom edge of caddy front with topstitched edge at top and sides and bottom edges even; baste around sides and bottom close to edge. Place bottom edge of *Gray Multi Hearts* pocket 1 ½" above top edge of the bottom pocket; pin in place. Repeat to place *Citron Tonal* pocket.
- Sew ¼" along bottom edges of middle and top pockets. Baste sides in place (Dia. C).

### 4. Straps

- Fold the *Gray Lace Flower* 4" x 20" strap ½" to the **wrong** side on one short end; press. Fold in half lengthwise with **wrong** sides together; press. Open, then fold long edges to the center crease; press. Fold in half so long edges meet and stitch ¼" from three sides, omitting the open end. For the short strap, repeat for the *Gray Lace Flower* 4" x 9" strap **except do not fold under one short end**.
- To attach D-rings to short strap, fold one open end over ½"; place folded end through flat sides of D-rings. Fold end over ¾"; pin to enclose the rings (Dia. B). Use a zipper foot to sew through all layers to attach D-rings. Stitch seam several times to reinforce.
- Place marks 2 ¼" from center at the top edge of caddy front. Place straps as shown in Diagram C. Sew in place, reinforcing stitches. **Note:** Place end of long strap in bottom pocket to prevent catching in seam in the next step.

Dia. B

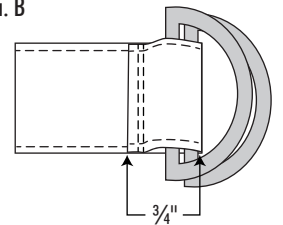

### 5. Caddy

- Pin front and back of caddy RST; sew around the outside edges leaving a 5 ½" opening at the bottom for turning; reinforce the seam and clip corners and curved edges. Turn right side out and press edges well. Hand stitch opening closed.
- Place strap around headrest supports, threading the long strap end through the D-rings. Adjust as needed.

Dia. C

