



Sanyu Diaper Bag

Finished Size: 13" x 12" x 3"



Supplies Needed:

- 3 Wishes Fabric™ Sanyu Collection
 - $\frac{5}{8}$ yd. Dot Gray with White and Turquoise (Fabric A)
 - $\frac{1}{3}$ yd. Chevron (Fabric B)
 - $\frac{1}{2}$ yd. Sunshine Yellow with White (Fabric C)
 - $\frac{5}{8}$ yd. Giraffe Line (Fabric D)
- $\frac{5}{8}$ yd. Pellon® fusible fleece (987F)
- $\frac{3}{4}$ yd. Pellon® Décor-Bond® fusible interfacing (809)
- Coordinating thread

- Basic sewing supplies
- Rotary cutter, mat, and acrylic
- Sewing machine
- Iron, pressing surface
- Size 90-100 Topstitching needle
- Removable marker
- Chopstick or tube turner

Before You Begin

Read all instructions. Do not pre-wash fabrics. Before cutting, press with a dry iron on cotton setting; remove selvages. Sew fabrics with right sides together (RST) unless otherwise noted. Angled cut edges will be slightly bias. Do not pull edges of pieces through machine while sewing or stretch when pressing.



Cutting

Note: Label pieces after cutting.

Fabric A: 2 - 14" x 13" (Bag Front and Back)

1 - 4" x 27" (Gusset)

1 - 4" x 42" (Strap)

1 - 14" x 11" (Outer Pocket Lining)

Fabric B: 1 - 14" x 11" (Outer Pocket)

2 - 14" x 8" (Inner Pockets)

Fabric C: 2 - 14" x 11" (Flap and Flap Lining)

2 - 14" x 8" (Inner Pockets Linings)

Fabric D: 2 - 14" x 13" (Bag Front Lining and Back Lining)

1 - 4" x 27" (Gusset Lining)

1 - 4" x 42" (Strap Lining)

Interfacing: 2 - 14" x 13"

1 - 14" x 11"

2 - 14" x 8"

1 - 4" x 27"

Fusible Fleece: 2 - 14" x 13"


1 - 14" x 11"

1 - 4" x 27"

1 - 4" x 42"


Fabric A - Dot Gray

$\frac{5}{8}$ yd.

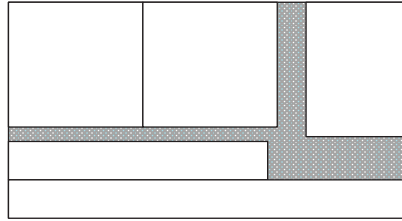


Fabric C - Sunshine Yellow

$\frac{1}{2}$ yd.

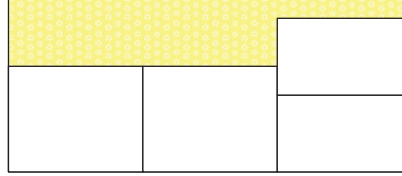


Fusible Fleece

$\frac{5}{8}$ yd.

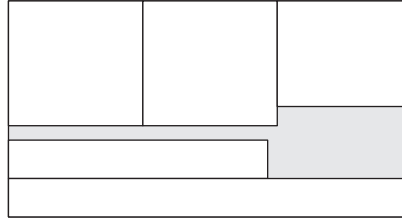


Fabric B - Chevron

$\frac{1}{3}$ yd.

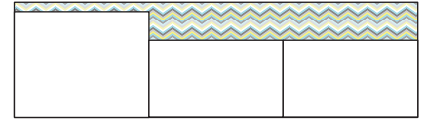


Fabric D - Giraffe Line

$\frac{5}{8}$ yd.

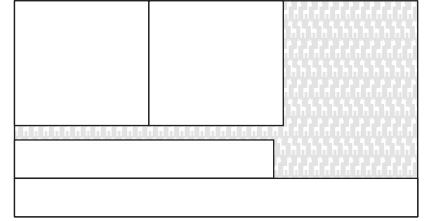

Fusible Interfacing


$\frac{3}{4}$ yd.

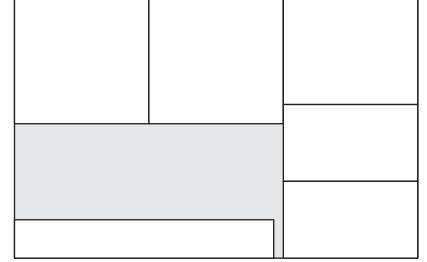

Preparing the Bag Pieces

1. Follow manufacturer's instructions to fuse fusible fleece to the **wrong** side of the Bag Front and Bag Back, Flap, Strap and Gusset. Fuse interfacing to **wrong** side of Bag Front Lining and Back Lining, Gusset Lining, Outer Pocket and Inner Pockets.
2. Place the 4" circle template (page 3) on the bottom corners of the **wrong** sides of the Bag Front and trace around the edge to round off the corner. Repeat for Bag Back, Bag Front Lining, Back Lining, Flap and Flap Lining (Dia. A). Cut along lines to round off corners.

Dia. A

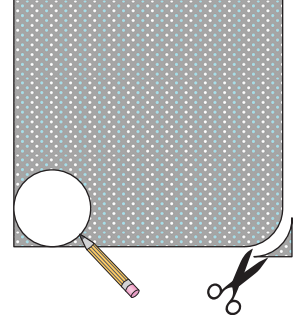


Sewing



3. Use a $\frac{3}{8}$ " seam allowance to staystitch along sides and bottoms of Lining. Make three clips along the curve up to, but not through, the staystitching (Dia. B).
4. Place the Inner Pocket and Pocket Lining RST and sew with a $\frac{1}{4}$ " seam allowance along the long edges. Turn right side out and press sewn edges well. Topstitch along top edge. Repeat for the second Inner Pocket.
5. Place top edges of Inner Pockets 3" below the top edge of Bag Lining and pin in place. Sew Inner Pockets along the bottom edge to attach to Lining.
6. To make sections in the pockets, draw a straight line through the center of one pocket from top to bottom and sew along the line. Divide the second Pocket into three sections by drawing lines $4\frac{1}{2}$ " from each short end and sew along the lines (Dia. C).

Dia. B

Lining

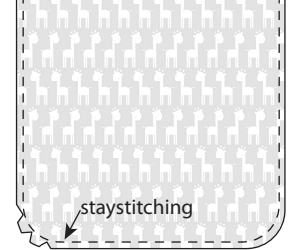

Dia. C Inner Pockets

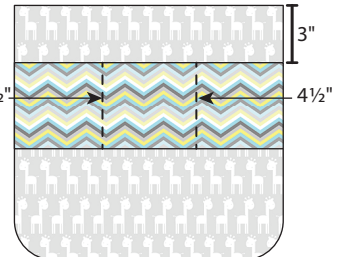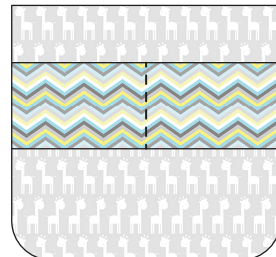

7. Pin one edge of Gusset Lining to Lining Back; sew. Pin remaining Gusset edge to Lining Front. Sew a $\frac{1}{2}$ " seam allowance, leaving a 6" opening along the bottom edge of the Lining Front.
8. Trim top edges of Gusset Lining even with the top edges of the bag, if needed.
9. Place Outer Pocket and Outer Pocket Lining RST with edges matching; sew along one long edge. Fold Outer Pocket in half along the seam with **wrong** sides together matching sides and bottom edges; press well. With **wrong** sides matching, topstitch $\frac{1}{4}$ " from the sewn edge. Using the 4" circle template, trace and trim bottom corners. Measure and mark a center line from the top edge to the bottom of Outer Pocket.
10. Place Outer Pocket on Bag Front with bottom edge and sides matching; baste. Sew along marked line to divide the Pocket into two sections.

11. Using a $\frac{3}{8}$ " seam allowance, staystitch the long sides of the Gusset, then the sides and bottom of Bag Front and Bag Back. On the curved corners of the Front and Back, carefully clip up to, but not through, the seam allowance. Pin Gusset to the Bag Front with edges matching; sew using a $\frac{1}{2}$ " seam allowance. **Note:** *If needed, trim the top edge of the Gusset even with top of Bag after sewing.* Repeat to pin and sew the Bag Back to the Gusset.
12. With RST, use a $\frac{3}{8}$ " seam to sew around the Flap and Flap Lining leaving the side opposite the curved corners open. Turn right side out and press edges well; topstitch.
13. Find the center of the Bag Back edge and mark. Find the center of the unsewn side of the Flap. Place the right side of the Flap against the right side of the Bag Back, matching the center marks; sew.
14. With RST, use a $\frac{1}{2}$ " seam allowance to sew the Strap and the Strap Lining together along the long edges. Turn right side out; press edges well and topstitch.
15. With Strap and Gusset RST, center and pin the ends of Straps. Sew to attach the Strap to the Bag, stitching several times to secure. Set aside.
16. With Lining **wrong** side out, place the Bag inside the Lining with RST and top edges even. Match the Gusset seams of Bag and Lining; pin well. Sew around the top edge of the Bag. Turn Bag right side out through the opening in the Lining. Stuff lining down into Bag.

Finishing

17. Stitch opening in Lining closed. Press top edge well and topstitch close to edge.

Finished Care Instructions

Machine wash in cold water; gentle cycle. Hang to dry or tumble dry low. Press if needed.

