

## Quick Mask—Illustrations not to scale

- FRONT: Cut (1) 7" x 11" piece.
- BACK POCKET: Cut (2) 5" x 11" pieces; mark 1" in from one long edge on each piece; fold edges up to line and sew 1/8"-1/4" seam to secure (Fig. 1).
- NOSE PIECE: Cut pipe cleaner into 6" length.
- RST, overlap back pieces, align the outer edges with front piece. Sew 7" edges with 1/4" seam. Turn right side out and press.
- TIES: Cut (2) 2-1/2" x WOF strips. Fold in half, press; fold both long edges to center and press, fold in half and press.
- Find center of each tie and mark.
- At the top of the front panel mark the center. Mark 3-1/4" to each side of the center (Fig. 2).
- Align center of tie with top of front panel. Insert pipe cleaner under the flap of the tie centering it within the marks made in step 6 and secure in place (Fig. 3).
- Start at one end of the tie and sew 1/4" seam. Watch for the pipe cleaner to be sure it is not caught in the seam.
- Sew to the end of the tie.
- Secure the pipe cleaner into the tie by sewing a line perpendicular to the outer edge at the 3-1/4" marks ending at the 1/4" seam line (or little beyond) (Fig. 3).
- Align the center of the second tie with center mark on mask; pin place and sew the tie starting at one end with 1/4" seam.
- PLEATS: Turn mask wrong side up with pipe cleaner away from you.
- Mark the panel on each short side at 1" from the outer edge (Fig. 4).
- Make a second mark at 1-1/2" from first mark.
- Make a third mark at 1" from second mark.
- Make a fourth mark at 1-1/2" from third mark.
- Bring bottom 1" marks up to meet 1-1/2" marks and pin across.
- Bring second 1" marks up to meet top 1-1/2" marks and pin across.
- Start at top of tie edge and sew 1/4" seam from top to bottom edge to secure pleats. Repeat on other side.
- Press and tie knots in ends of ties.

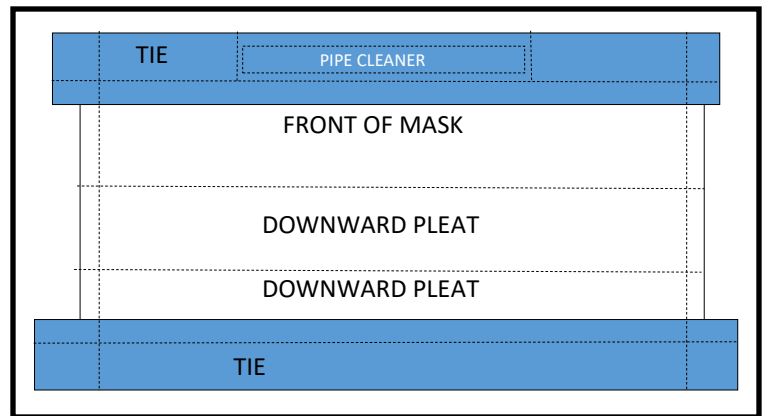


Fig. 1

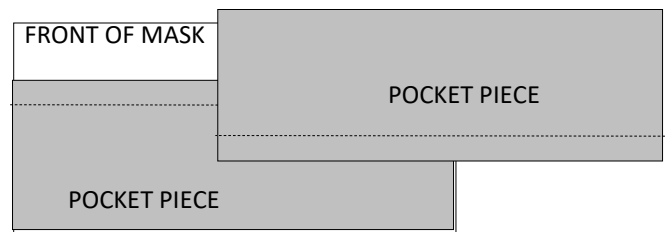


Fig. 2

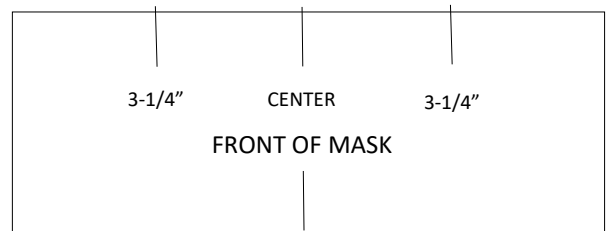


Fig. 3

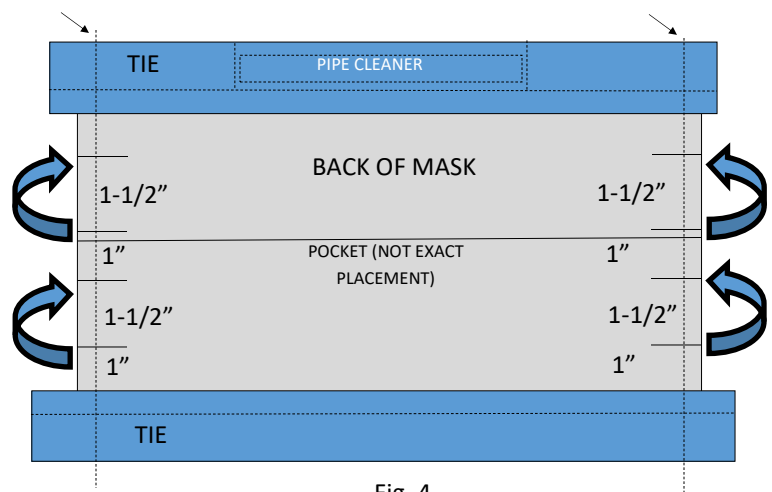


Fig. 4