


Upper Accessories Holder

Overlocker



1

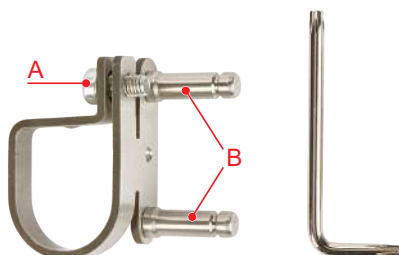

Information

Purpose

- To attach accessories above the presser foot.

For Your Safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

Scope of Delivery

- Upper Accessories Holder
- Screwdriver, Torx Long

Application

How to Prepare/Mount the Accessory Holder

BERNINA recommends having the accessories holder fitted by an authorized BERNINA dealer.

- > Remove the needles.
- > Deactivate the knife.
- > Remove the presser foot.
- > Loosen the fixing screw on the presser foot bar using the screwdriver supplied and remove the presser foot shaft. (Fig. 2)
- > Loosen the clamping screw (A) but do not remove it.
- > With the curve of the accessories holder facing forward, hold the fixing pins (B) to the right and position around the presser foot bar from below.
- > Lower the needle threader and hold on to it, then push the accessories holder behind the needle threader head up as far as it will go. (Fig. 3)
- > Let the needle threader slide back.
- > Tighten the clamping screw (A) using the screwdriver supplied. (Fig. 4)
- > Place the presser foot shaft on the presser foot bar, move it up to the fixing screw and tighten it.
- > Prepare the machine for sewing.
- > If necessary, align the accessories holder after having fitted this accessory. To do this, loosen the fastening screw slightly, turn the accessories holder into the desired position and tighten the fastening screw.

The upper accessories holder can remain fitted for other applications.

2



3



4

