

Supplemental Installation Instructions for Installing A Quilter's Eye on an IntelliQuilter Equipped Machine

Congratulations on purchasing A Quilter's Eye (AQE) for use with your IntelliQuilter. The AQE is a perfect accompaniment tool to use with your IQ. You can see what is quilting on the top of your quilt but you can also now see how your quilting is going on the back side of your quilt.




This is what your final installation should look like.

After you have carefully unpacked your AQE from the box, gather the monitor, the IQ adapter bracket, and the foam backed monitor mounting pad.



This is the monitor, IQ adapter bracket and monitor-mounting pad.

The first thing you will want to do is to remove your IQ tablet from the holding bracket and set it aside. Then you want to remove the tablet holding bracket by removing the thumbscrews and two allen head button screws. Then carefully lay the tablet holding bracket down supporting it so that it does not fall or pull on any of the wires.

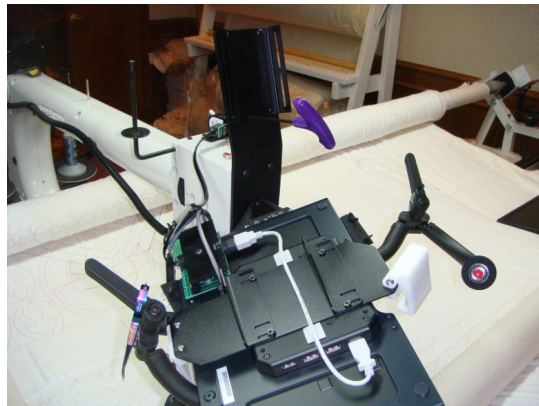

Remove the two thumbscrews and two allen head button screws and support the tablet holding bracket.

Next remove the bracket that holds the tablet holding bracket. It is attached with four allen head button screws.



Removing the tablet holding bracket, bracket.

Now take the AQE supplied IQ adapting bracket and line up the holes/slots where you just removed the tablet holding bracket, bracket. The long thin portion of the adapting bracket should be on the left side. Re-install the four allen button head screws.



This is how the adapting bracket should look installed.

Take apart the AQE monitor-mounting bracket as shown below. Also carefully peel back the double side foam adhesive pad from the bracket as shown so the mounting base bracket can be removed.



Remove the three screws that hold the mounting base to the mounting bracket.

Install the mounting base on the adapter bracket.



Re-assemble the monitor holding bracket as shown above.



Slide the monitor onto the bracket and your monitor installation is complete! If you have any questions or problems, please contact your AQE dealer.