



REFURBISHED ROOM AIR CONDITIONER Use and Care Guide

Table of Contents

AIR CONDITIONER SAFETY	2
INSTALLATION REQUIREMENTS	3
Electrical Requirements—All Models	3
Model BTUs—Cooling Only 115V 8000, 10000, 12000	3
Model BTUs—Cooling and Heating 115V 8000; 230V 10000, 12000, 14000 Cooling Only 230V 10000, 12000, 14000	3
Recommended Grounding Method.....	3
Power Supply Cord—All Models	4
Tools Required—All Models	4
Packing List	4
Universal Wall—Sleeve Dimensions	5
INSTALLATION INSTRUCTIONS	6
Prepare Air Conditioner for Installation.....	6
Dual Intake Grille	7
Trim Kit Installation Instructions.....	8
USING AIR CONDITIONER	9
Turning on the Air Conditioner.....	9
Selecting the Mode	9
Features.....	9
Selecting the Fan Speed	9
Adjusting the Temperature.....	9
Using the Timer	10
Changing Air Direction.....	10
Use of the Directional Louvers	10
Normal Operating Sounds.....	10
Clean Filter Reminder	10
Using the Remote Control	11
Replacing the battery	11
AIR CONDITIONER CARE	12
Air Filter Removal	12
Cleaning the Air Filter	12
Cleaning the Front Panel	12
Repairing Paint Damage.....	12
Winter Storage.....	12
TROUBLESHOOTING	13
ASSISTANCE OR SERVICE	14

Models:

R-WHAT081-HAW	R-WHAT081-1AW
R-WHAT121-HAW	R-WHAT101-1AW
R-WHAT141-HAW	R-WHAT102-2AW
R-WHAT101-HAW	R-WHAT121-1AW
	R-WHAT122-2AW
	R-WHAT142-2AW

AIR CONDITIONER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury when using your air conditioner, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter.
- This appliance is not intended for use by people (including children) whose physical, sensory or mental capacities are different or impaired or who lack the necessary experience or knowledge/expertise to do so, unless such persons are supervised or are trained to operate the appliance by a person who accepts responsibility for their safety.
- Do not use an extension cord.
- Unplug air conditioner before servicing.
- Use two or more people to move and install air conditioner.
- Do not drink water collected in the water bucket.
- Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

INSTALLATION REQUIREMENTS

Electrical Requirements—All Models

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.


Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

The electrical ratings for air conditioner are listed on the model and serial number label. The model and serial number label is located on the right-hand side of the air conditioner cabinet.

Specific electrical requirements are listed in the "Electrical Requirements" sections. Follow the requirements for the type of plug shown in these sections.

Model BTUs—Cooling Only 115 V 8000, 10000, 12000

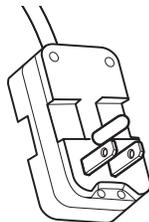

All models

- 115 V – (103.5 min. - 126.5 max.)
- If there is a "Single Circuit Only" label on the unit, use on a dedicated single-outlet circuit only. If a dedicated single-outlet circuit is not available, then it is the customer's responsibility to have a single-outlet circuit installed by a qualified electrician.
- If there is no "Single Circuit Only" label on the unit, the unit may be used on any branch circuit of correct voltage and adequate current protection rating.

8,000 BTU 115 V Cooling Only models

- 0-8 A
- 10 A time-delay fuse or circuit breaker


10,000-12,000 BTU 115 V Cooling Only models

- 0-12 A
- 15 A time-delay fuse or circuit breaker

Model BTUs—

**Cooling and Heating 115 V 8000;
230V 10000, 12000, 14000**

Cooling Only 230V 10000, 12000, 14000

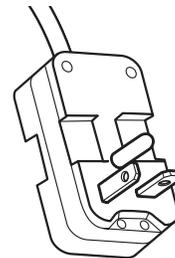

10,000-14,000 BTU 230 V Cooling Only models

- 230 V (208 min. - 240 max.)
- 0-8 A
- 10 A time-delay fuse or circuit breaker

8,000 BTU 115 V and 10,000-14,000 BTU 230 V Cooling & Heating models

- 4-15 A
- 20 A time-delay fuse or circuit breaker
- If there is a "Single Circuit Only" label on the unit, use on a dedicated single-outlet circuit only.
- If a dedicated single-outlet circuit is not available, then it is the customer's responsibility to have a single-outlet circuit installed by a qualified electrician.
- If there is no "Single Circuit Only" label on the unit, the unit may be used on any branch circuit of correct voltage and adequate current protection rating.

Recommended Grounding Method

This air conditioner must be grounded. This air conditioner is equipped with a power supply cord having a grounded 3 prong plug. To minimize possible shock hazard, the cord must be plugged into a mating, grounded 3 prong outlet and grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3 prong outlet installed by a qualified electrical installer. It is the customer's responsibility:

- To contact a qualified electrical installer.
- To assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70—latest edition, and all local codes and ordinances.

Copies of the standards listed may be obtained from:

National Fire Protection Association
1 Batterymarch Park
Quincy, MA 02269

Power Supply Cord—All Models

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

NOTE: The air conditioner's power supply cord may differ from those shown.

The air conditioner is equipped with a power supply cord that is required by UL. This power supply cord contains state-of-the-art electronics that sense leakage current. If the cord is damaged, the electronics detect leakage current and power will be disconnected in a fraction of a second.

To test your power supply cord:


1. Plug power supply cord into a grounded 3 prong outlet.
2. Press RESET (on some models, a green light will turn ON).
3. Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn OFF).
4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn ON). The power supply cord is ready for operation.

NOTES:


- The Reset button must be pushed in for proper operation.
- The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset.
- Do not use the power supply cord as an OFF/ON switch. The power supply cord is designed as a protective device.
- A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired.
- The power supply cord contains no user-serviceable parts. Opening the tamper-resistant case voids all warranty and performance claims.

Tools Required—All Models

Gather the required tools and parts before starting installation. Read and follow the instructions provided with any tools listed here.

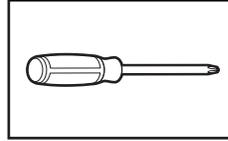


Phillips screwdriver

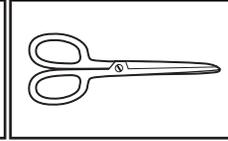


Scissors




Level

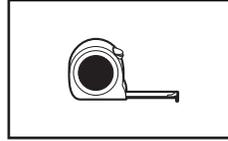


Tape measure

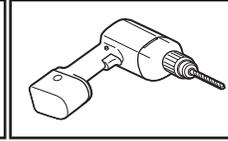

Cordless drill and 3/16" bit

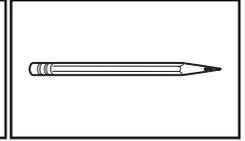

Pencil

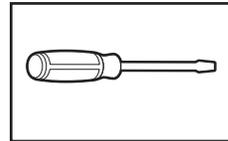

Flathead screwdriver

Packing List

IMAGE	PART	QUANTITY
	Through-The-Wall Air Conditioner	1
	Remote Control	1
	Trim Frame 1 (Left&Right legs)	2
	Trim Frame 2 (Top&Bottom legs)	2
	Grille Aluminum	1
	Rear plastic net	1

DIMENSIONS	PART	QUANTITY
1" x 3/4" x 14"	Seal Sponge	2
1" x 3/8" x 14"	Seal Sponge	2
1" x 3/8" x 25"	Seal Sponge	3
1" x 1 1/2" x 25"	Seal Sponge	3
1" x 1 1/2" x 14"	Seal Sponge	2
1" x 1 1/2" x 84"	Seal Sponge	1
3 3/4" x 1 1/2" x 4"	Seal Cotton	4
3/4" x 1 1/2" x 17"	Seal Cotton	2

Universal Wall—Sleeve Dimensions


1. Identify the wall-sleeve brand installed in the wall, and make sure that dimensions of wall-sleeve are as per the below table:

Type	Wall-sleeve Dimensions		
	Height	Width	Depth
Standard Dimension	15 3/4"	26"	16 3/4"

NOTE:

- All wall sleeves, used to mount the new air conditioner must be in sound structural condition and have a rear grille that securely attached to the sleeve, or rear flange that serves as a stop for the air conditioner.
- If non-Whirlpool brand wall-sleeve installed, make sure that the dimension is suitable for the product.
- The selected wall-sleeve must be installed and fastened to the wall with the screws.


IMPORTANT: When installation is complete, replacement unit must have rearward slope as shown in below figure:

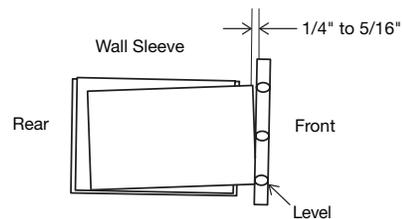

2. Remove the old air conditioner from wall sleeve and prepare as follows:

- Clean interior (Do not disturb seals).
- Check the wall sleeve to make sure that it is securely attached to the wall before installing.
- Repair painted surface if needed.

3. If the ground wire hole does not exist, drill a 3/16" pilot hole for the ground screw through the left hand side of the sleeve, in a clear area about 3 inches max. back from the front edge as shown in below figure:

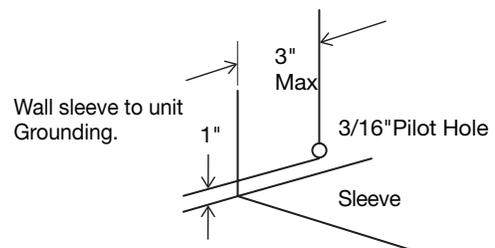

4. Pull the loose end of the ground wire out of the front of the sleeve and bend it away from the opening. This will be attached to the air conditioner once installed.

INSTALLATION INSTRUCTIONS

Prepare Air Conditioner for Installation


⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install air conditioner.

Failure to do so can result in back or other injury.


1. Unpack the Air Conditioner

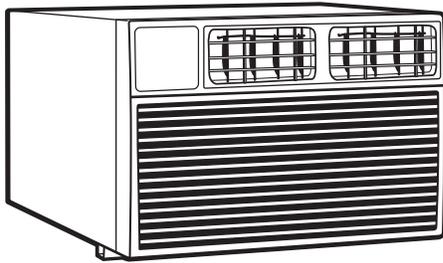

Remove Packaging Materials:

- Gently handle the air conditioner while unpacking the unit.
- Place the air conditioner on a hard, flat surface.
- Remove tape and glue residue from surfaces before turning ON the air conditioner. Rub a small amount of liquid dish soap over the adhesive with the fingers. Wipe with a damp cloth and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of the air conditioner.
- Dispose of/recycle packaging materials in an appropriate way.


2. Removal of the Grille

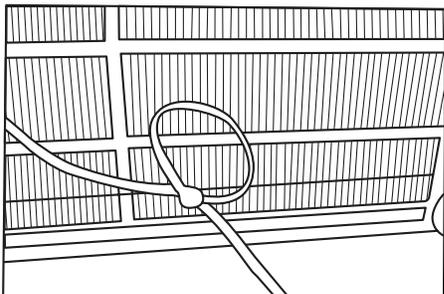

NOTE: Single intake grille must be removed when used with the dual intake Through The Wall (TTW) unit.


IMPORTANT: While removing the grille, avoid it from falling by securing with a leash. This can be fastened from cord or strapping looped through the grille and secured with a knot as shown in above figure.

While holding the grille by the leash with one hand, the retaining screws can be removed and the grille can be brought inside through the front of the sleeve as shown below.

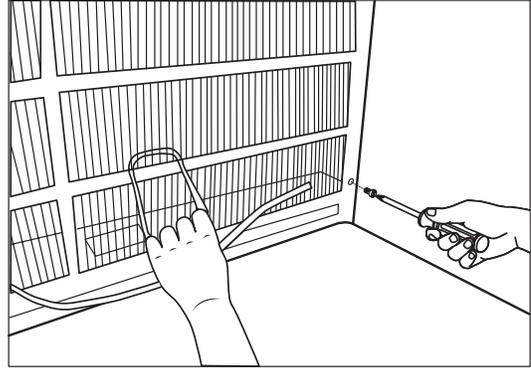

3. Replacement of the Grill

New Dual Intake Grille

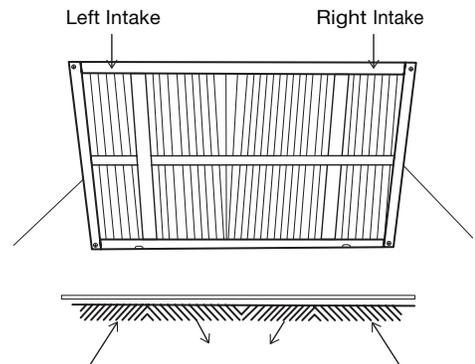


NOTES:

- This unit's increased performance characteristics is the result of having two rear intakes.
- It is very important that installation instructions are followed so the unit can operate at maximum efficiency.
- If there is an existing sleeve and rear grille, check whether the dimension is suitable or not, otherwise replace them.

Existing Sleeves may have older single-sided intake grilles. Single-sided intake grilles must be replaced with the dual intake grille type as shown in the above figure.


- Remove the existing grille and save the mounting screws.
- Place the grille included with the new air conditioner towards the inside rear of the sleeve.
- Attach the new grille by aligning the four mounting holes.
- Re-insert the self-tapping screws into the nylon retainers.

4. Direct Unit Mounting

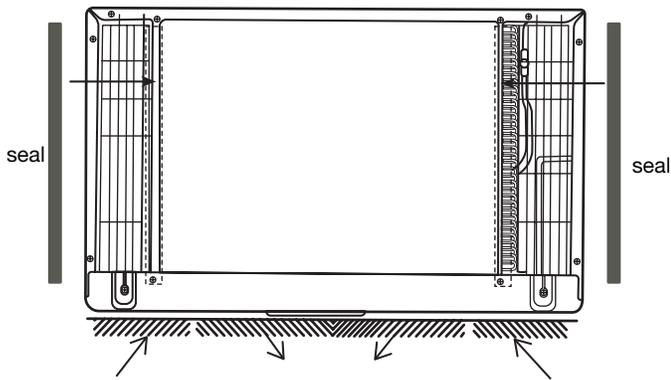


In cases, where the dual intake grille cannot be mounted directly to the sleeve it is desirable to attach the grille to the back of the TTW unit to the hole predrilled in the unit.

1. Attach the 2 seals (1" x 3/8" x 14"), as shown in above figure.
2. Position the grille over the rear of the unit to make sure that:
 - The double set of screw holes are at the bottom.
 - The intake fins on either side are pointed away from the unit.
3. Align the top of the grille with the top of the unit. The overhang on each side is equal.
4. If the unit has not been predrilled (some models), drill 4-1/8" holes through the grille and into the side flange of the unit approximately 1 1/2" to 2" from the top and bottom, as shown in below figures. (Do not break the copper pipe.)
5. Install 4-#8 self-tapping screws to affix the grille to the unit.

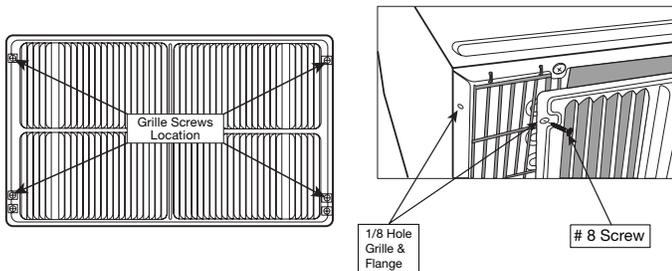

6. Insert the unit into the sleeve.

5. Install the Seal

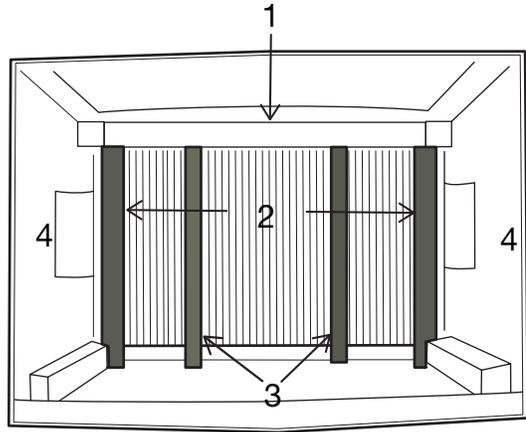


1. Install the 1" x 3/8" x 25" long seal in the center at the top of the sleeve. Remove the back paper and press into position.
2. Install the 1" x 3/8" x 14" seals to the left and right sides of the sleeve.
3. Cut the 1" x 3/8" x 25" long seals to 14" long each and attach to the vertical sections of the grille.
4. Install the 1/2" x 3 1/2" x 1 1/2" centering blocks one on each side wall. Place in center of side wall with the tapered end facing the opening.
5. Gently slide unit into sleeve.


Dual Intake Grille

In cases, where the existing sleeve is a dual intake grille, the existing grille may be left in place.


Make sure the outer 3 1/2" to 4 1/2" louvers are angled from the left and right sides of the sleeve toward the center, as shown in below figure. This provides proper flow of outside air into the unit.

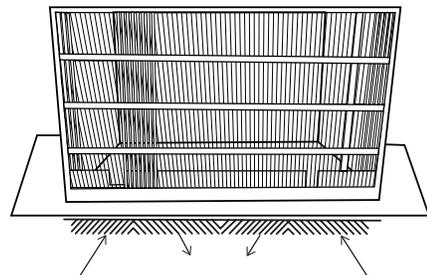



From the installation kit, apply two 1" x 3/4" x 14" seals along the flat metal flange of the condenser, as shown in below figure:

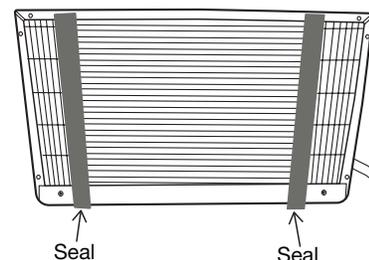


Insert the unit with the seal into the sleeve pushing it all the way to the rear, making sure the seals are against the rear grille. The seals are necessary to reduce recirculation of hot air into the intakes which would reduce system performance.

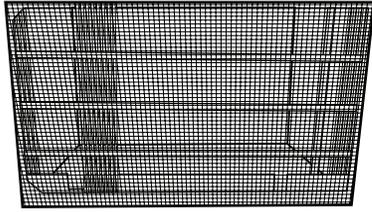

An option is to purchase 3/4" diamond cut aluminum grille and cut it to fit inside the sleeve. Secure it with screws. Attach the dual intake grill directly to the back of the unit. Slide the entire unit into the sleeve and seal with the stuffing seal supplied with the kit.

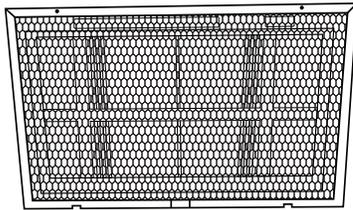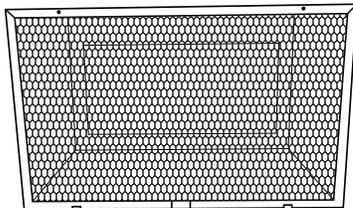


6. Install the Air Conditioner

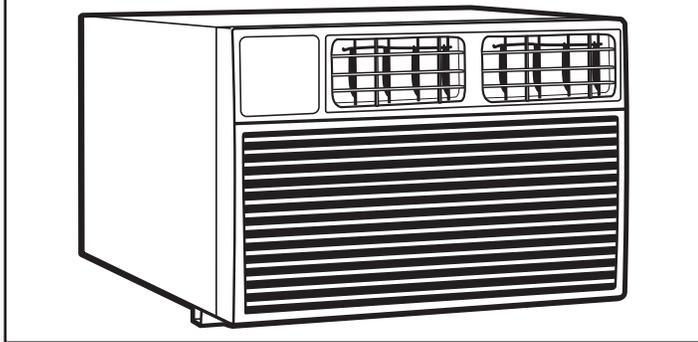

1. Install new unit into wall sleeve.
2. To attach ground wire to the new unit, remove the screw from the front, left side.
3. Assemble and install the trim frame.



7. Install A Ground Wire

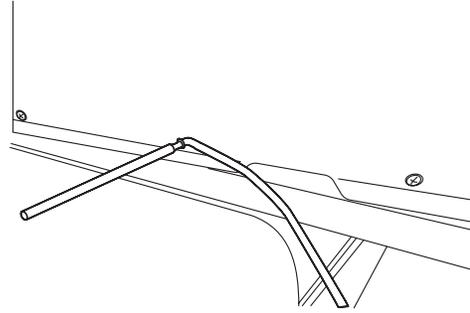

1. Attach the one end of a ground wire inside the sleeve with screw according to preparation instruction.
2. Before sliding unit all the way back remove second screw from left side of unit.
3. Remove plastic washer from screw.
4. Attach the other end of the ground wire to the unit with screw as shown above. Make sure that the toothed washer is against the cabinet.
5. Slide unit completely to the rear.


Trim Kit Installation Instructions

1. Install the 1" x 1" x 84" long stuffer seal between the wall sleeve and the unit. A flat-bladed screwdriver or putty knife is needed.
2. Assemble the trim frame by inserting the top and bottom pieces into side pieces and snapping into place.
3. Pull the cord through the trim frame and slide the trim over the unit until flush with the wall.

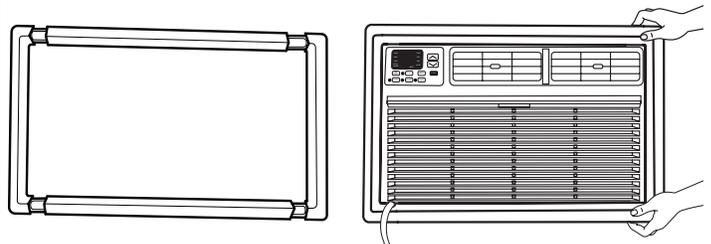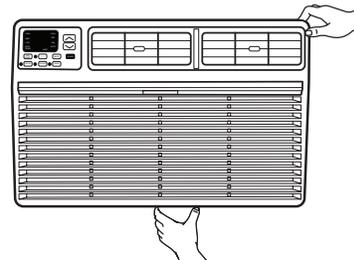

Energy saving suggestion: In order to reach the maximum energy saving and comfortability, it is necessary to use an appropriately sized cover to provide additional insulation and air sealing when the unit is not in use during the off-using-season.

USING AIR CONDITIONER

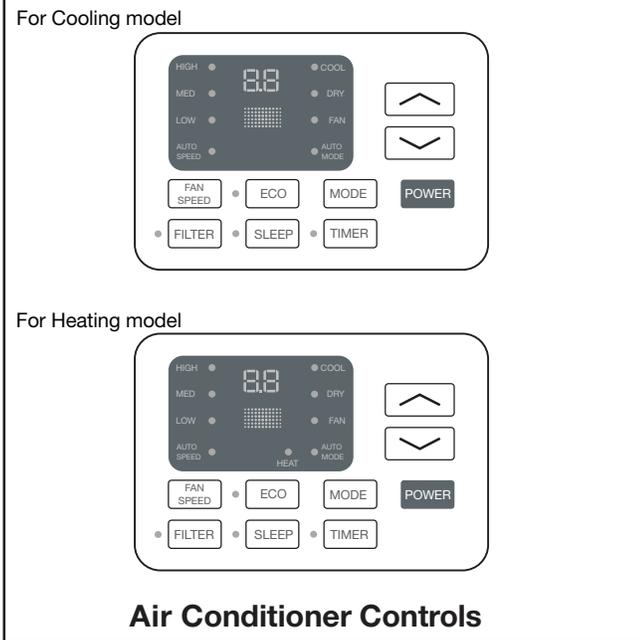

Operating air conditioner properly helps you to obtain the best possible results.

This section explains proper air conditioner operation.

IMPORTANT:

- If you turn OFF the air conditioner, wait at least 3 minutes before turning it back on. This is to avoid the air conditioner from blowing a fuse or tripping a circuit breaker.
- Do not try to operate the air conditioner in the Cool mode when outside temperature is below 65°F (18°C). The inside evaporator coil will freeze up, and the air conditioner will not operate properly.

NOTE: In the event of a power failure, the air conditioner will operate at the previous settings when the power is restored.

Turning on the Air Conditioner

1. Press POWER to turn ON air conditioner.
2. Press POWER again to turn OFF the air conditioner.

POWER

Selecting the Mode

1. Press MODE button to cycle through the various modes.
2. Choose modes: Cool, Dry, Fan, Auto or Heat.

MODE

- **Cool mode:** The cooling function allows the air conditioner to cool the room and at the same time reduces air humidity. Press the MODE button to activate the cooling function. Press the up or down arrow button to adjust the temperature.
- **Dry Mode:** This function reduces the humidity of the air to make the room more comfortable. Press MODE button to set the DRY mode. An automatic function of alternating cooling cycles and air fan is activated.
- **Fan Mode:** In this mode, only fan runs to provide ventilation. Press MODE button to set the FAN mode. Press FAN SPEED to select High, Med, or Low. The remote control stores the speed set in the previous mode of operation.

- COOL
- DRY
- FAN
- AUTO MODE
- HEAT

- **Auto Mode:** In AUTO mode, the unit automatically chooses the fan speed and the mode of operation (COOL, DRY or FAN). In this mode the fan speed and the temperature are set automatically according to the room temperature (tested by the temperature sensor which is incorporated in the indoor unit).
- **Heat Mode:** The heating function allows the air conditioner to heat the room. Press the MODE button to activate the heating function. To optimize the function of the air conditioner, adjust the temperature and the speed by pressing the button indicated.

NOTE: After 5 seconds, display will show the current room temperature.

Features

- **ECO Button:** When the unit is in ECO mode, the light will turn ON. In ECO mode, the unit will turn-off once the room is cooled to the user set temperature. The fan motor will run for 20 to 40 seconds and then it will stop, this will repeat to provide more comfortable feeling and save energy. The compressor will turn back on when the room temperature rises above the set temperature. Press ECO to turn ECO feature on and off. When the unit is in ECO mode, the light will turn on.
- **SLEEP Button:** Automatically adjusts the temperature and fan speed to make the room more comfortable during the night. Press and hold the SLEEP button for 10 seconds until the sleep light turns on. All of the left lights will turn off. For heat mode, temperature will automatically decrease by 1.8°F (1°C) every 30-60 minutes. At most, the temperature will change six times until the temperature reaches 75°F (24°C). The set temperature will automatically raise by 1.8°F (1°C) every 30-60 minutes. At most, the temperature will change six times until the temperature reaches 82°F (28°C). Running time depends upon the set temperature.

ECO

SLEEP

NOTE: After 5 seconds, display will show the current room temperature.

Selecting the Fan Speed

1. Press FAN SPEED button until the LED indicator for the desired setting is lit.
2. Choose Low, Med, or High.
 - Low—Low fan speed
 - Med—Normal fan speed
 - High—Maximum fan speed

FAN SPEED


NOTES:

- Auto fan speed and temperature cannot be selected in Fan Only mode.
- In ECO and SLEEP modes, Auto fan speed is selected automatically.
- After 5 seconds, the display will show the current room temperature.

- HIGH
- MED
- LOW
- AUTO SPEED

Adjusting the Temperature

Press the up arrow button to increase the set temperature.

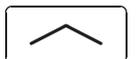

Press the down arrow button to decrease the set temperature.



NOTE: After 5 seconds, the display on the air conditioner control panel will show the current room temperature.

Using the Timer

Delayed Shutoff:

Use the TIMER button to set the air conditioner to turn off automatically after 0.5- to 24-hour delay (the air conditioner must be on):

TIMER

1. Press TIMER button. The display will show remaining time before the air conditioner will turn off.
2. Press the up or down arrow button to change the delayed shutoff time from 0.5 to 24 hours. The time can be set in 0.5-hour increments below 10 hours and 1-hour increments for 10 hours or above.
3. Press TIMER button again to confirm setting.
NOTE: The Set light will turn on while setting.

Delayed Start:

It can be set to automatically turn off or on in 0.5-24 hours delay.

NOTE: After the set delay, the air conditioner will turn on with the previous settings. Change the mode, fan speed, and/or temperature before setting the timer, if desired.


1. Turn off the air conditioner.
2. Press TIMER button. Set the temperature by pressing the up or down arrow button.
3. Press TIMER button a second time to set the rest time. Press the up or down arrow button to change the delay time from 0.5 to 24 hours, then press TIMER button again.
4. Press TIMER button again while the time remaining is shown on the display.

To Cancel Timer:

After the timer has been set, press TIMER button.

Changing Air Direction

Use of the Directional Louvers

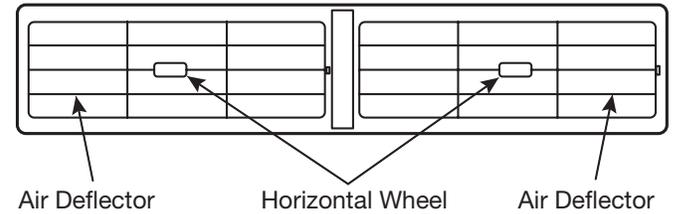

To direct the airflow, use the horizontal wheel to control the horizontal direction and the air deflector to control the vertical direction.

Normal Operating Sounds

When the air conditioner is operating normally, you may hear sounds such as:

- Droplets of water hitting the condenser, causing a pinging or clicking sound. The water droplets help cool the condenser.
- Air movement from the fan.
- Clicks from the thermostat cycle.
- Vibrations or noise due to poor wall or window construction.
- A high-pitched hum or pulsating noise caused by the modern high-efficiency compressor cycling ON and OFF.
- Water will collect in the base pan during rain or days of high humidity. The water may overflow and drip from the outside part of the unit.


Clean Filter Reminder

To help maximize energy efficiency, this air conditioner features a Clear Filter reminder.

After 500 hours of operation, FILTER will illuminate as a reminder that it is time to clean the filter. Once the light is illuminated, it can be turned off by pressing the FILTER button. See the "Air Conditioner Care" section for instructions on how to clean the filter.

FILTER

Using the Remote Control

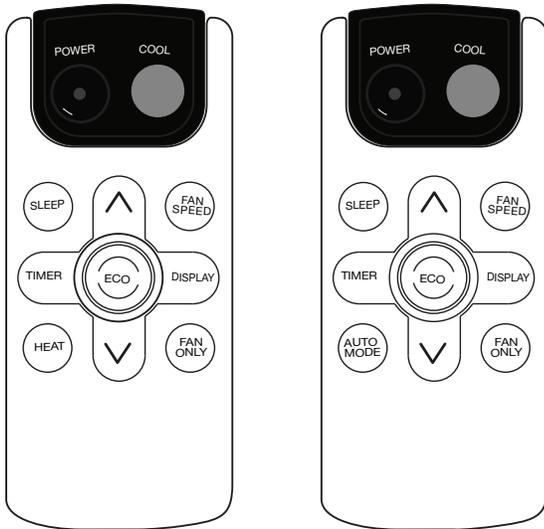

Power

1. Press POWER to turn ON air conditioner.
2. Press POWER again to turn OFF the air conditioner.



Cool

Press COOL to enter Cool mode.



Fan Speed

1. Press FAN SPEED until the bar LED on the air conditioner control panel display for the desired setting.
2. Choose Low, Medium, or High.



NOTES:

- Auto fan speed and Temperature cannot be selected in Fan mode.
- In Energy Saver (on some models) and Cool modes, Auto fan speed is selected automatically.

Eco

- Conserves energy by turning OFF compressor when room reaches desired temperature. The fan motor will run for 20 to 40 seconds and then it will stop, this will repeat to provide more comfortable feeling and save energy. The compressor will turn back ON when the room temperature rises above the set temperature. Press ECO to turn Eco feature ON and OFF. When the unit is in Eco mode, the light will turn ON.



Adjusting Temperature

Press the up arrow button to increase the set temperature. Press the down button to decrease the set temperature.



NOTE: After 5 seconds, the display on the air conditioner control panel will show the current room temperature.

Sleep

Automatically adjusts the temperature and fan speed to make the room more comfortable during the night. Press and hold the SLEEP button for 10 seconds until the sleep light turns on. All of the left lights will turn off. The set temperature will automatically raise by 1.8°F (1°C) every 30-60 minutes. At most, the temperature will change six times until the temperature reaches 82°F (28°C). Running time depends upon the set temperature.



Timer

Delayed Shutoff:

Use the timer to set the air conditioner to turn off automatically after a 0.5- to 24-hour delay (the air conditioner must be ON):



1. Press TIMER. The display will show remaining time before the air conditioner will turn OFF.
 2. Press the up or down arrow button to change the delayed shut-off time from 0.5 to 24 hours. The time can be set in 0.5-hour increments below 10 hours and 1-hour increments for 10 hours or above.
 3. Press TIMER again to confirm setting.
- NOTE:** The Set light will turn on while setting.

Delayed Start:

You can also set the air conditioner to turn on automatically after a 0.5- to 24-hour delay.

NOTE: After the set delay, the air conditioner will turn on with the previous settings. Change the mode, fan speed, and/or temperature before setting the timer, if desired.

1. Turn OFF the air conditioner.
2. Press TIMER. Set the temperature by pressing the up or down arrow button.
3. Press TIMER a second time to set the rest time. Press the up or down arrow button to change the delay time from 0.5 to 24 hours, then press TIMER again.
4. Press TIMER again while the time remaining is shown on the display.

To Cancel Timer:

After the timer has been set, press TIMER.

Auto:

Press AUTO MODE to enter into Auto mode. In this mode, the fan speed and temperature are set automatically according to the room temperature as tested by the indoor temperature sensor.



Heat: Press the HEAT button to Heat mode. It is for heating model.

Display:

Press DISPLAY to switch on/off all lights or the LED display.




Fan only:

Press the Fan Only button to enter Fan Only mode.



Replacing the battery

Remove and replace batteries

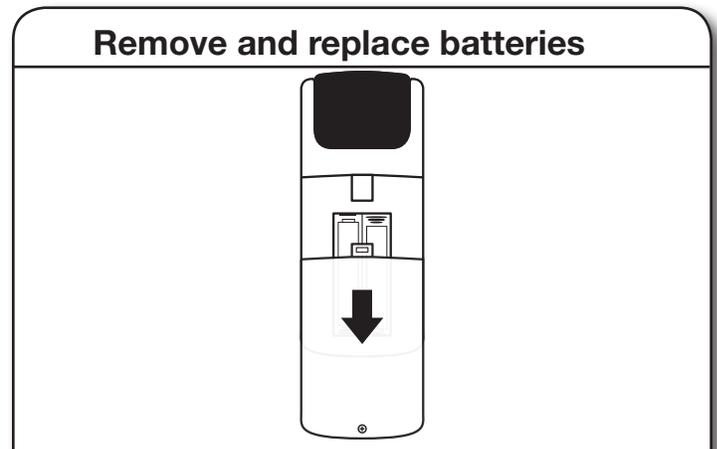

Use a small Phillips screwdriver to loosen the battery cover screw. Slide the battery cover down with two thumbs to remove. Remove and properly dispose of old batteries, then replace with two new AAA batteries. Replace the battery cover and tighten the screw.


AIR CONDITIONER CARE

The air conditioner is designed to give you many years of dependable service. This section tells you how to clean and care for your air conditioner properly.

Air Filter Removal

The air filter is located behind the intake grille of air conditioner. Remove the air filter as follows:

- Remove the filter by pulling down the indents of the filter door on the front of the unit as shown in below figure.

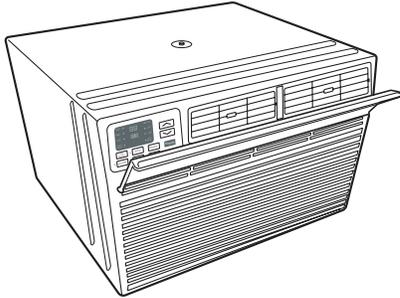

Cleaning the Air Filter

The air filter is removable for easy cleaning. A clean filter helps remove dust, lint, and other particles from the air and is important for best cooling and operating efficiency. Check the filter at least once per month to see whether it needs cleaning.

NOTE: Do not operate the air conditioner without the filter in place. Doing so will degrade the unit performance over time.

1. Use a vacuum cleaner to clean air filter.
2. If the air filter is very dirty, use the liquid dish soap and warm water to wash the filter.
3. Rinse the filter properly and shake the filter gently to remove the excess water.
4. Let the filter dry completely before placing it into the air conditioner to ensure maximum efficiency.

NOTE: Do not wash the air filter in the dishwasher or use any chemical cleaners; it may damage the filter.

Cleaning the Front Panel

1. Unplug the air conditioner.
2. Wipe the front panel with a soft, damp cloth.
3. Air dry the front panel completely.

Repairing Paint Damage

Check once or twice a year for paint damage. This is very important, especially in areas near saltwater or where rust is a problem. If needed, touch up with a good grade enamel paint.

Winter Storage

Cover the air conditioner with an appropriate cover to block outside air flow and to provide insulation.

TROUBLESHOOTING

Before calling for service, try the suggestions below to see whether you can solve problem without outside help.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

PROBLEM	POSSIBLE CAUSES	RECOMMENDED SOLUTIONS
The Air Conditioner Will Not Start	The air conditioner is unplugged.	Make sure that the power supply cord is plugged into a grounded 3 prong outlet.
	The fuse is blown/circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the breaker.
	Power failure.	The unit will automatically restart when power is restored. There is a protective time delay (approximately 3 minutes) to avoid tripping of the compressor overload. The unit may not start normal cooling for 3 minutes after it is turned back on.
	The power cord reset button is tripped.	Press the reset button located on the power cord plug. If the reset button will not stay engaged, discontinue use of the air conditioner and contact a qualified service technician.
The Air Conditioner Is Not Cooling Properly	Airflow is restricted.	Make sure that there are no curtains, blinds, or furniture blocking the front of the air conditioner.
	The temperature control is not set correctly.	Lower the set thermostat temperature.
	The air filter is dirty.	Clean the filter. See the “Air Conditioner Care” section.
	The room is too warm.	Allow time for the room to cool down after turning on the air conditioner.
	Cold air is escaping.	Close all open doors and/or windows where warm air may be entering.
	The cooling coils are frozen.	See “The Air Conditioner Is Freezing Up” below.
The Air Conditioner Is Freezing Up	Ice is blocking the airflow.	Turn off the unit and allow it to thaw until the ice has melted, then operate on a higher fan speed. If this continues to occur, contact customer service for additional help.
The Remote Control Is Not Working	Batteries are inserted incorrectly.	Check that the batteries are inserted in the correct direction.
	Batteries are dead.	Replace the batteries and dispose of them in a responsible manner.

PROBLEM	POSSIBLE CAUSES	RECOMMENDED SOLUTIONS
Water Is Dripping From the Unit on the Outdoor Side	The weather is hot and humid.	This is normal during periods of high humidity. NOTE: Do not drill a hole into the bottom of the metal base pan; doing so will reduce cooling performance.
Water Is Dripping Inside the Room	The air conditioner is not properly leveled.	The air conditioner should slope slightly downward toward the outside. Level the air conditioner to provide a downward slope toward the outside to ensure proper drainage. See the "Installation Instructions" section. NOTE: Do not drill a hole into the bottom of the metal base pan; doing so will reduce cooling performance.
Water Collects in the Base Pan	Moisture removed from the air is collecting in the base pan.	This is normal. Water that collects in the base pan will evaporate to the outside air. This helps with the unit's cooling process. NOTE: Do not drill a hole into the bottom of the metal base pan; doing so will reduce cooling performance.
Digital display reads "E1", "E2"	A sensor has failed.	Contact customer service.

ASSISTANCE OR SERVICE

Before calling for assistance or service, please check the "Troubleshooting" section. It may save you the cost of a service call. If you still need help, follow the instructions below.

When calling, please know the purchase date and the complete model and serial numbers of the appliance. This information will help us to better respond to the request.

In the USA

Call XLS Products Customer Service:
support@arcaugusta.com

- Installation information.
- Use and maintenance procedures.
- Accessory and repair parts.
- Specialized customer assistance.